



## 35. Rear Gate Garnish

### A: REMOVAL


- 1) Remove the rear gate trim. <Ref. to EI-65, REMOVAL, Rear Gate Trim.>
- 2) Remove clip (A), and remove the rear gate panel side cover.

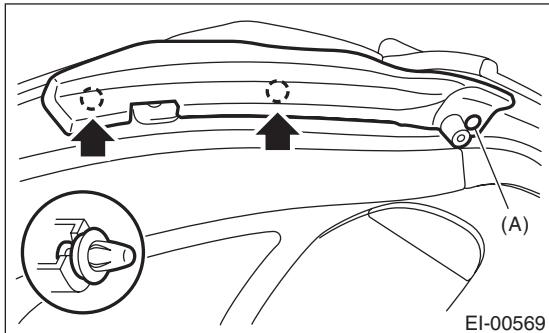

- 3) Remove the hexagon cap nut.

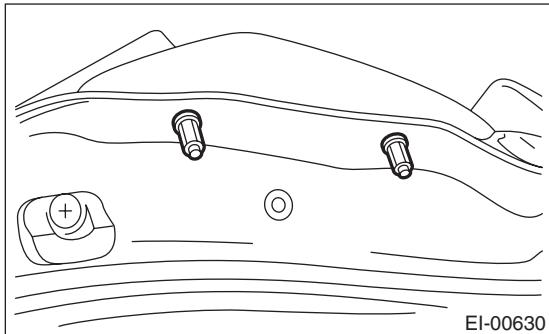

- 4) Remove the nuts, disconnect connectors, and remove the rear gate garnish.

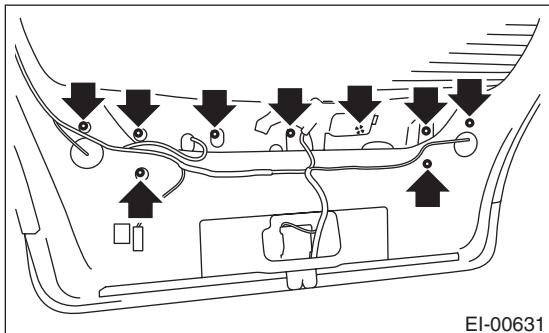

### B: INSTALLATION

Install in the reverse order of removal.