


# General Description

## SECURITY AND LOCKS

### 1. General Description

#### A: COMPONENT

##### 1. DOOR LOCK ASSEMBLY

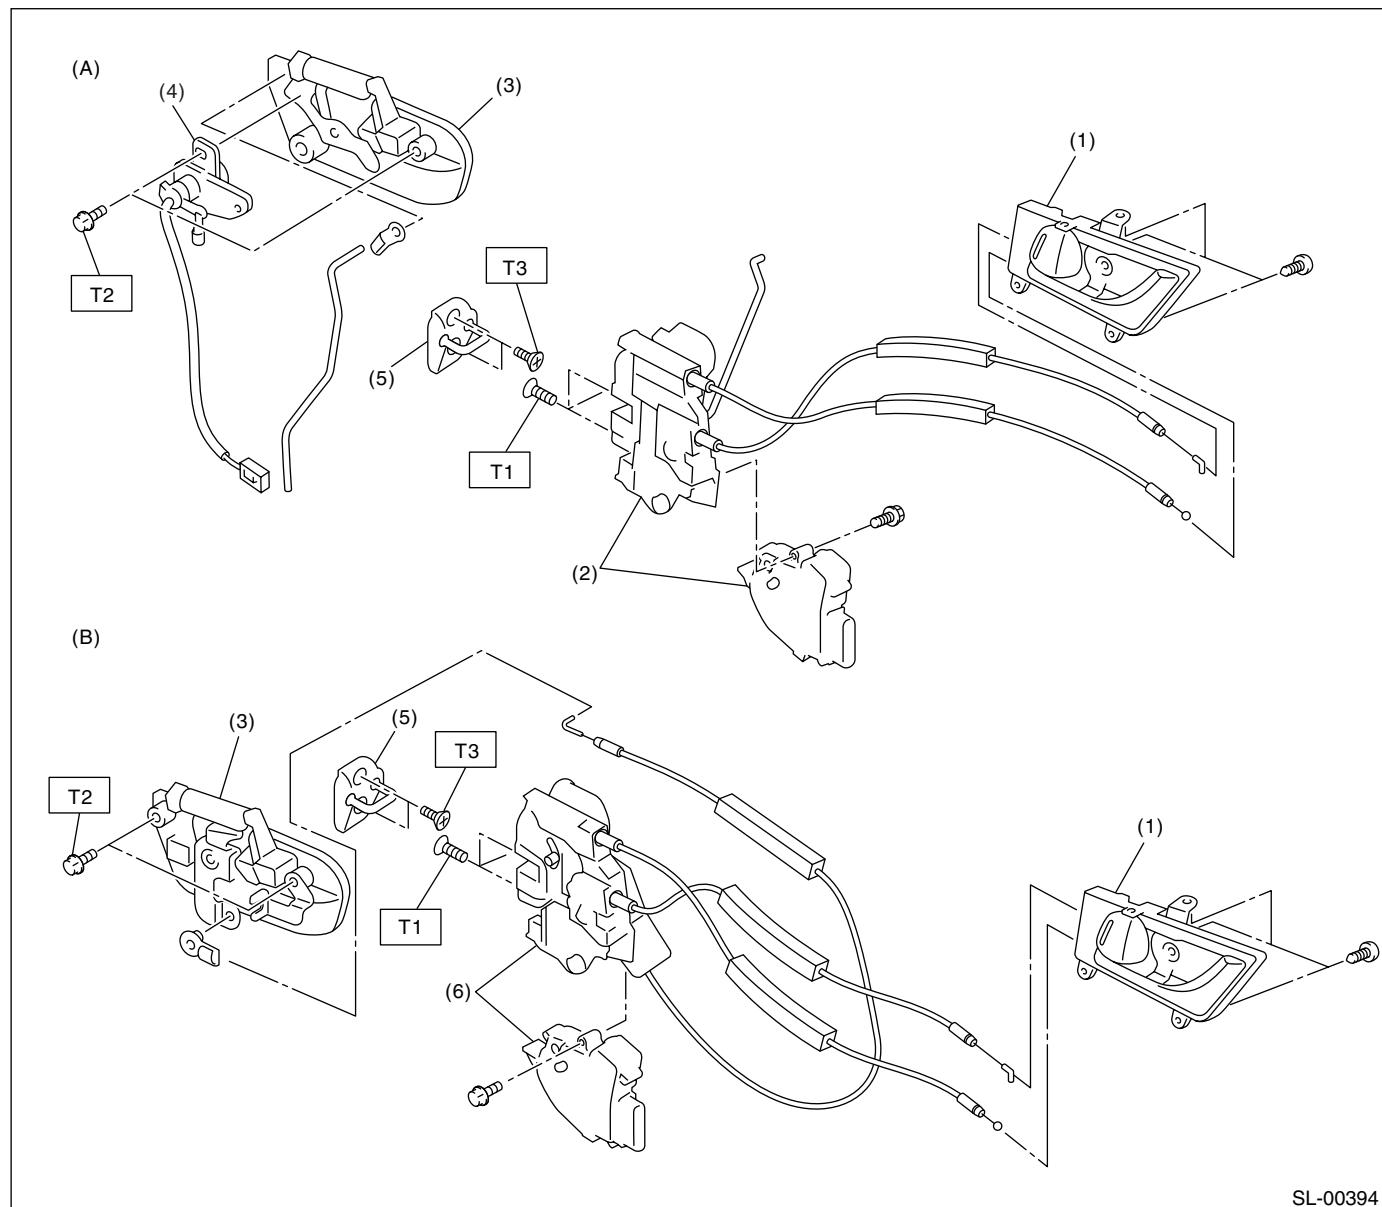

SL-00394

(A) Front

(1) Inner remote ASSY

(2) Front door latch and door lock actuator ASSY

(3) Door outer handle

(B) Rear

(4) Key cylinder (switch)

(5) Striker

(6) Rear door latch and door lock actuator ASSY


**Tightening torque:N·m (kgf·m, ft·lb)**

**T1: 6.5 (0.66, 4.8)**

**T2: 7.5 (0.76, 5.5)**

**T3: 18 (1.8, 13.3)**

### 2. TRUNK LID AND REAR GATE LOCK

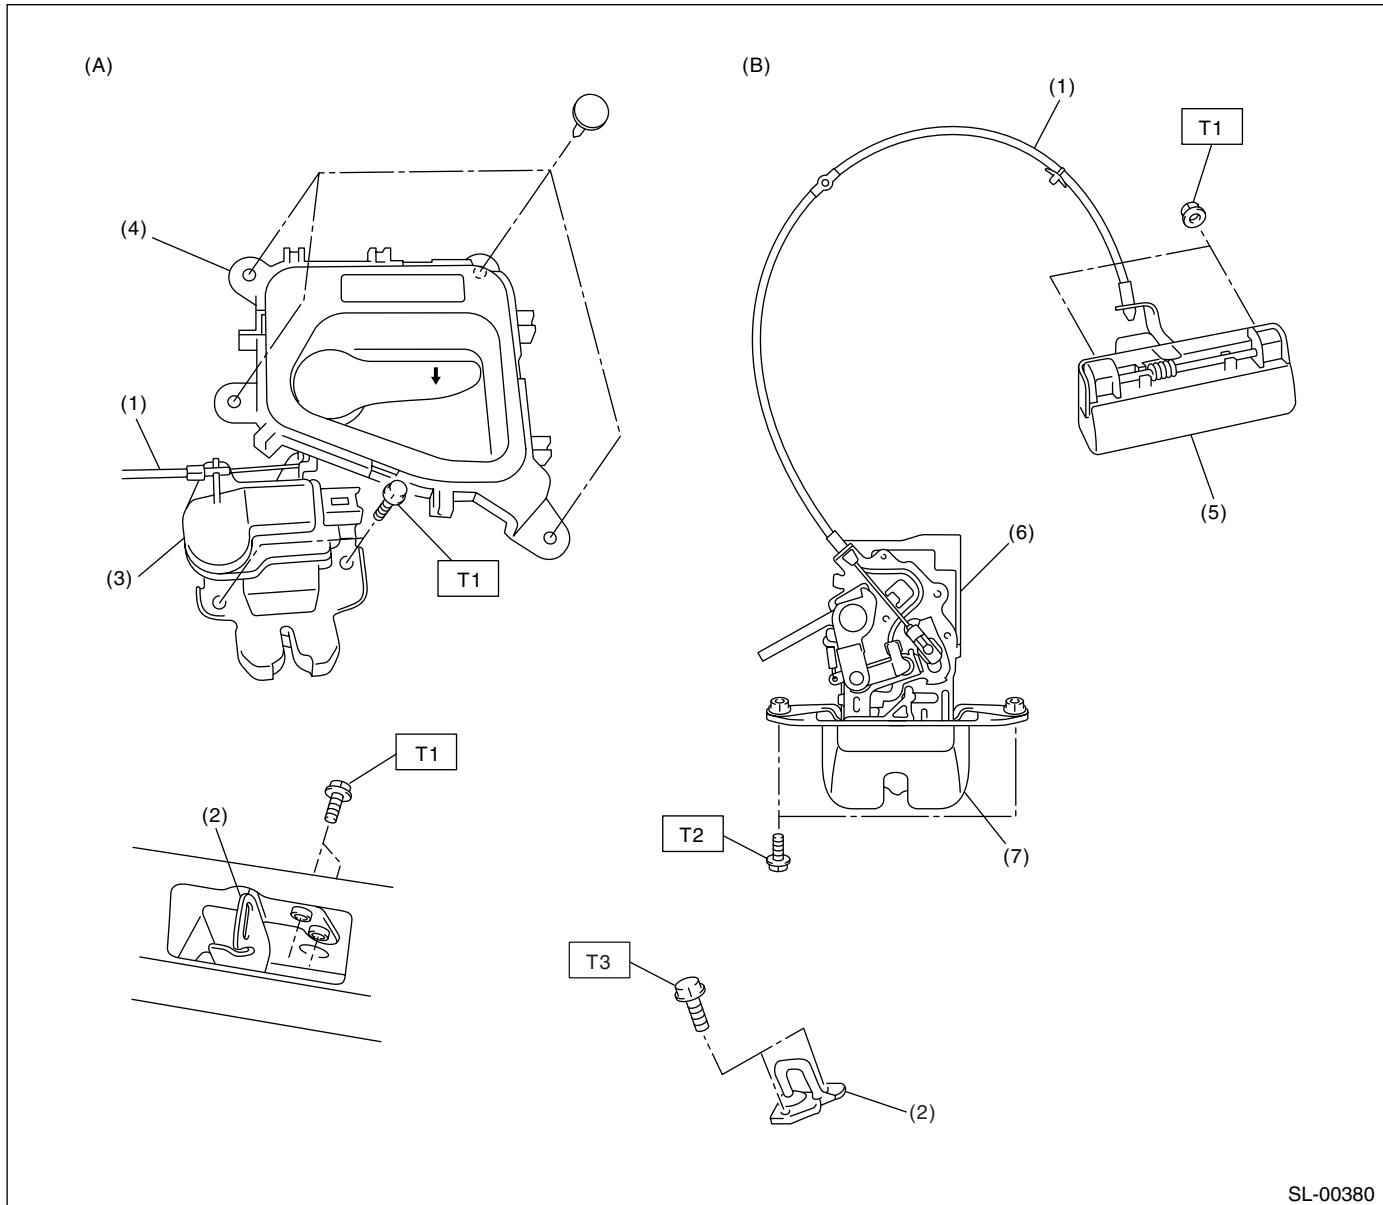

SL-00380

(A) Trunk

- (1) Cable
- (2) Striker
- (3) Trunk lid lock ASSY
- (4) Trunk lid release handle

(B) Rear gate

- (5) Rear gate outer handle
- (6) Rear gate actuator
- (7) Rear gate latch

**Tightening torque: N·m (kgf·m, ft·lb)**

**T1: 7.5 (0.76, 5.5)**


**T2: 18 (1.8, 13.3)**

**T3: 25 (2.5, 18.4)**

# General Description

## SECURITY AND LOCKS

### 3. FRONT HOOD LOCK AND REMOTE OPENERS

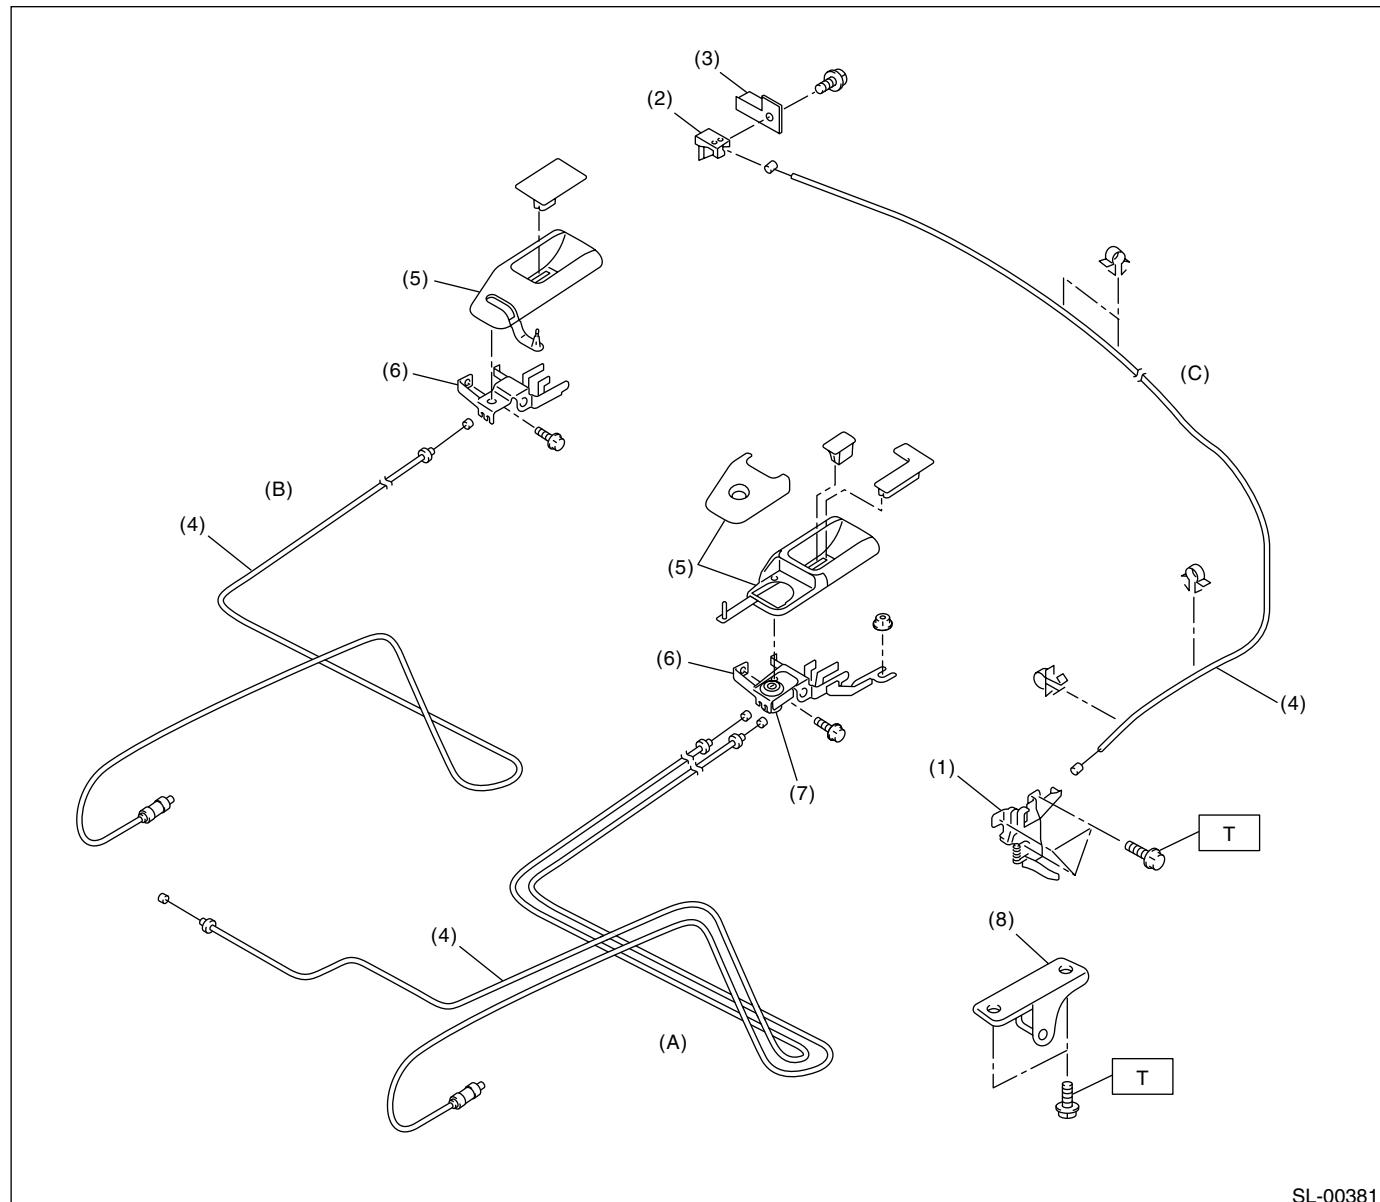

SL-00381

(A) Sedan model

(B) Wagon model

(C) Hood

(1) Front hood lock ASSY

(5) Cover

**Tightening torque: N·m (kgf·m, ft·lb)**

(2) Lever ASSY

(6) Pull handle ASSY

**T: 33 (3.36, 24.2)**


(3) Lever ASSY bracket

(7) Key cylinder

(4) Cable


(8) Striker

### 4. IMMOBILIZER SYSTEM

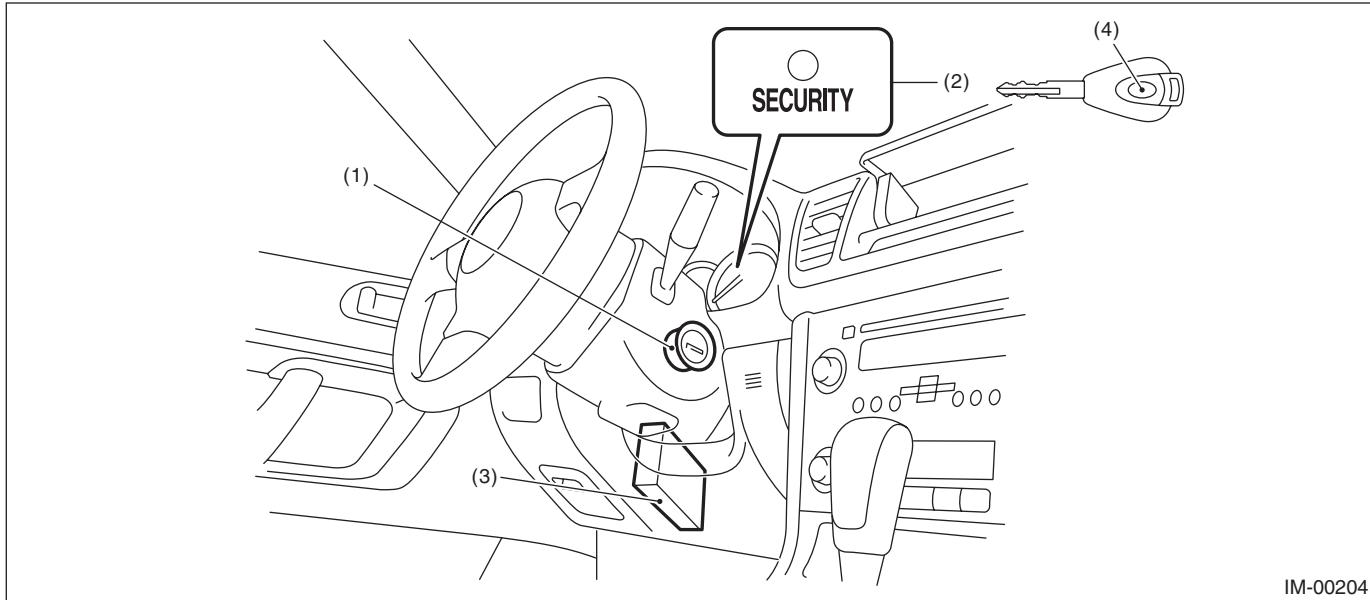

- (1) Antenna
- (2) Security indicator light (LED bulb)
- (3) Body integrated unit
- (4) Transponder

### 5. KEYLESS ENTRY SYSTEM

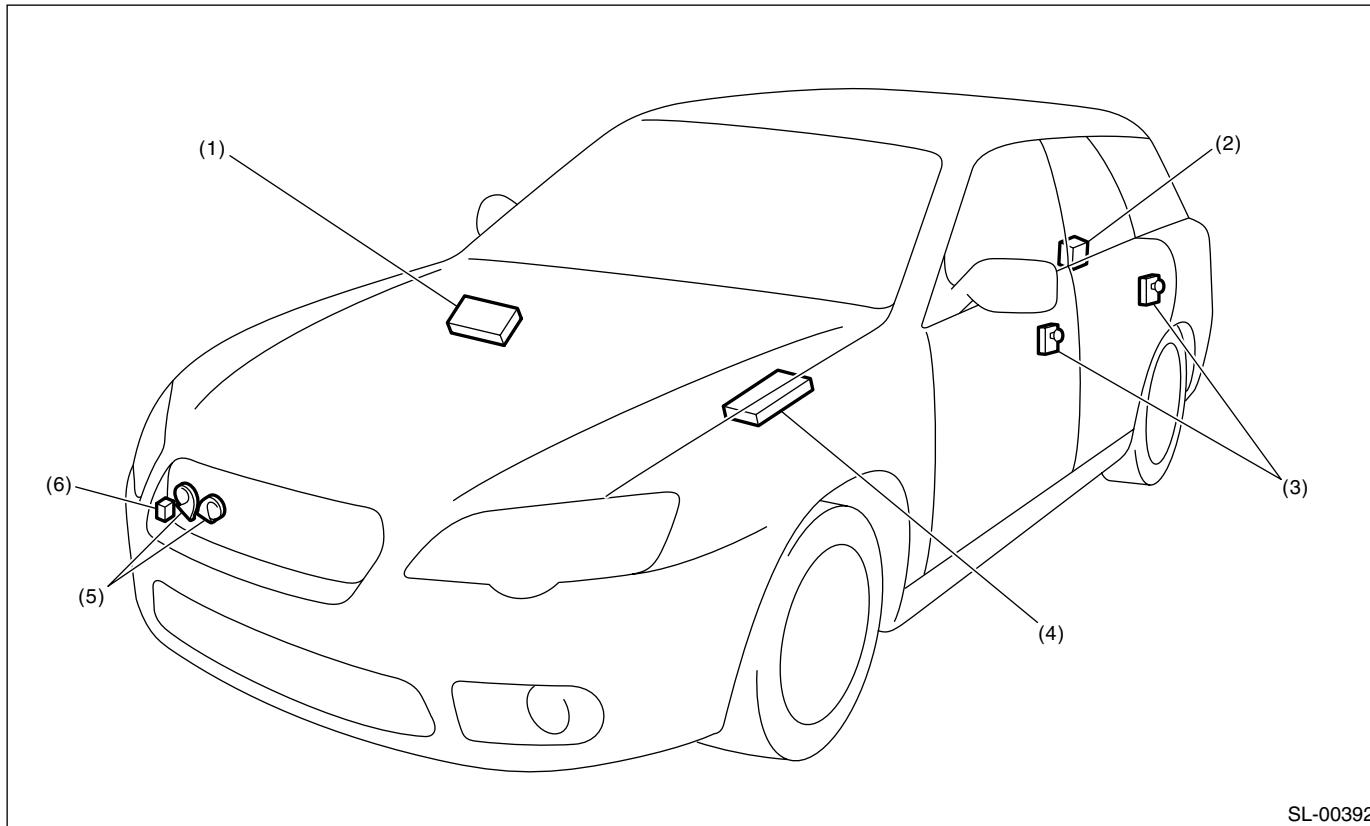

- (1) Keyless entry control module
- (2) Rear gate latch switch (Wagon model)
- (3) Door switch
- (4) Body integrated unit
- (5) Horn
- (6) Keyless buzzer

# General Description


## SECURITY AND LOCKS

### B: CAUTION

- Before disassembling or reassembling parts, always disconnect the battery ground cable from battery. When repairing the audio, control module, etc. which are provided with memory functions, record the memory contents before disconnecting the ground cable from battery. Otherwise, these contents are erased upon disconnection.
- Reassemble the parts in the reverse order of disassembly unless otherwise indicated.
- Adjust the parts to the specifications described in this manual if so designated.
- Connect the connectors securely during reassembly.
- After reassembly, make sure all the functional parts operate smoothly.
- The airbag system wiring harness is routed near electrical parts and switches.
- Do not use the electrical test equipment on the airbag system wiring harnesses and connector circuits.
- Be careful not to damage the airbag system wiring harness when servicing the ignition key cylinder.

### C: PREPARATION TOOL

#### 1. SPECIAL TOOL

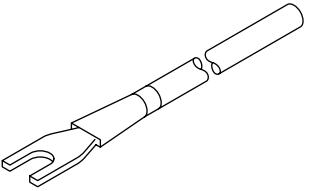ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-925580000	925580000	PULLER	Used for removing trim clip

#### 2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.
Drill	Used for replacing ignition key lock.
Clip remover	Used for removing trim.
Clip clamp pliers	Used for removal of various clips and clamps.