


## 15. Trunk Lid Lock Assembly

### A: REMOVAL

- 1) Remove the trunk lid release handle. <Ref. to SL-43, REMOVAL, Trunk Lid Release Handle.>
- 2) Disconnect the connectors and remove the cable of the trunk opener.
- 3) Remove the two bolts to remove the trunk lid lock assembly.

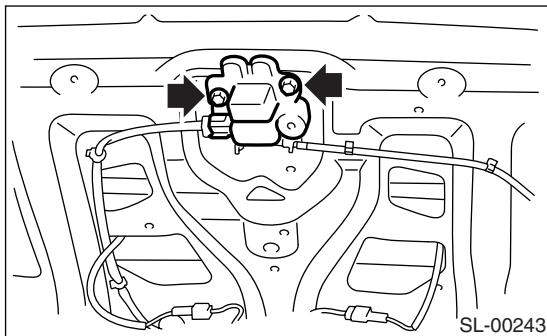

### B: INSTALLATION


Install in the reverse order of removal.

#### NOTE:

- Apply grease to the movable part.
- Make sure the lock works correctly after installation.

### C: INSPECTION

- 1) Disconnect the trunk lid actuator harness connector.
- 2) Connect the battery to the trunk lid actuator terminals.

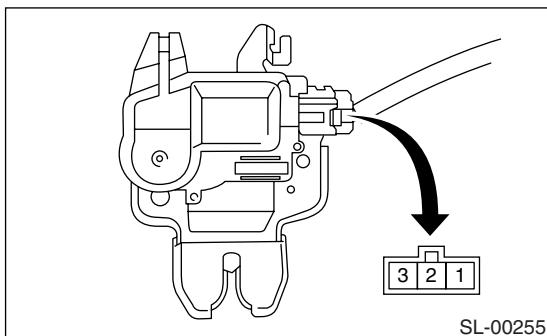

Terminal No.	Actuator operation
No. 2 (+) and No. 1 (-)	Lock → Unlock

If defective, replace the trunk lid actuator.

- 3) Check the striker for deformation or abnormal wear.
- 4) Check the safety lever for improper movement.
- 5) Check other levers and springs for rust formation or unsmooth movement.
- 6) Check the cable of the trunk opener for smooth operation.