


16.Trunk Lid Release Handle


A: REMOVAL

- 1) Remove the cover (A).

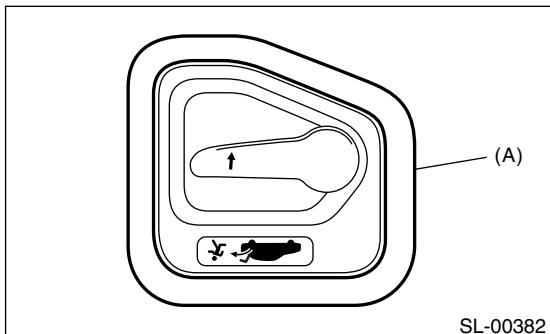

2) Remove the trunk lid trim. <Ref. to EI-67, REMOVAL, Trunk Room Trim.>

3) Remove the four clips to remove the trunk lid release handle.

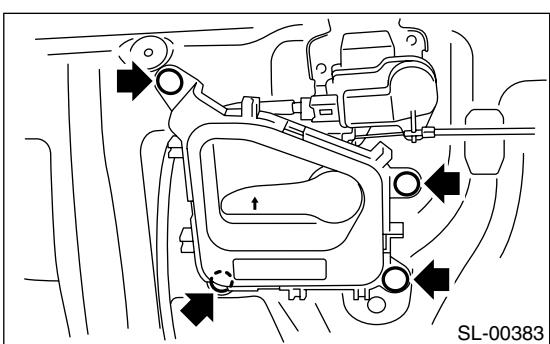

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Make sure the lever works smoothly.