



### 5. Washer Tank and Motor

#### A: REMOVAL

- 1) Open the front hood.
- 2) Disconnect the ground cable from the battery.
- 3) Remove the front bumper. <Ref. to EI-30, REMOVAL, Front Bumper.>
- 4) Remove the clip holding washer water supply tap.

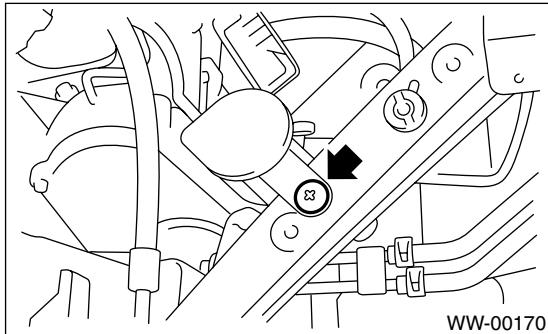

- 5) Remove the two bolts and one nut, hose, connector and washer motor cover, and then remove the washer tank.

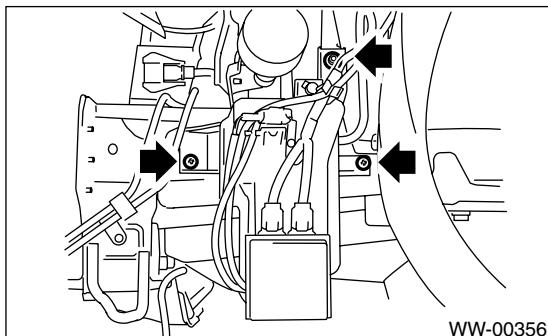

#### B: INSTALLATION


Install in the reverse order of removal.

##### *Tightening torque:*

6.0 N·m (0.61 kgf·m, 4.4 ft-lb)

#### C: DISASSEMBLY

Pull out the washer motor from the tank.

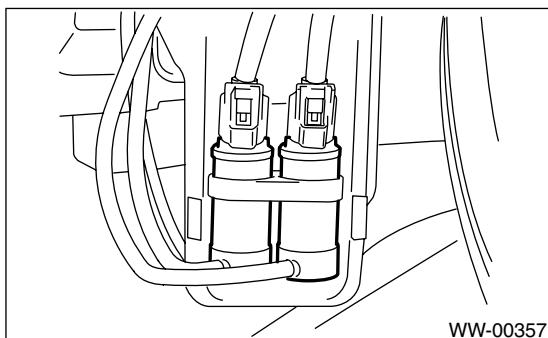

#### D: ASSEMBLY

- 1) Assemble in the reverse order of disassembly.
- 2) Confirm that water does not leak from installation area of motor.

#### E: INSPECTION

Apply battery voltage to the connector terminal of the washer motor and make sure the motor operates.

