

## BODY INSPECTION


MA01P-02

### 1. TIGHTEN BOLTS AND NUTS ON CHASSIS AND BODY

Tighten the following parts:


- Front seat mount bolts

**Torque: 37 N·m (375 kgf·cm, 27 ft-lbf)**

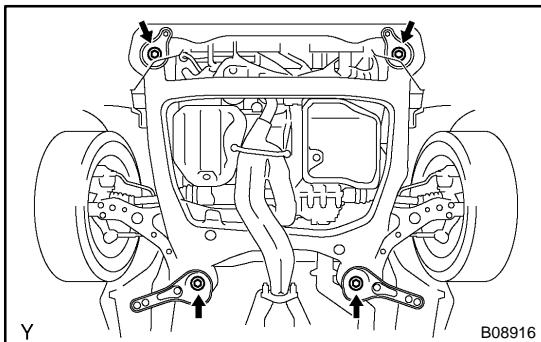

- Front suspension member-to-body mounting bolts

**Torque: 181 N·m (1,850 kgf·cm, 134 ft-lbf)**

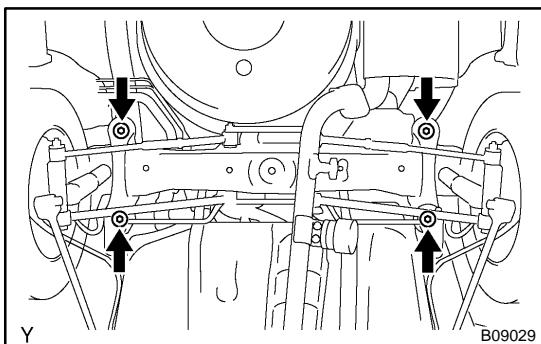

- Rear suspension member-to-body mounting nuts

**Torque: 51 N·m (520 kgf·cm, 38 ft-lbf)**

### 2. FINAL INSPECTION

(a) Check the operation of the body parts:


- Hood:  
Auxiliary catch operates properly  
Hood locks securely when closed
- Front and rear doors:  
Door lock operates properly  
Doors close properly
- Luggage compartment door:  
Door lock operates properly
- Seats:  
Seat adjusts easily and locks securely in any position  
Front seat back locks securely in any position  
Folding-down rear seat backs lock securely

(b) Road test:

- Check the engine and chassis for abnormal noises.
- Check that the vehicle does not wander or pull to one side.
- Check that the brakes work properly and do not drag.
- Do setting of the parking brake shoes and drum.

(c) Be sure to deliver a clean car and especially check:

- Steering wheel
- Shift lever knob
- All switch knobs
- Door handles
- Seats

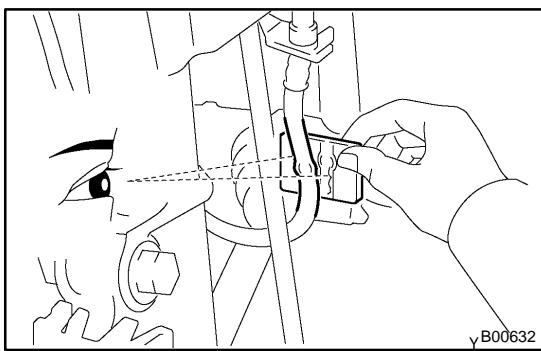

## BRAKE INSPECTION

MA01N-01

### 1. INSPECT BRAKE LINE PIPES AND HOSES

#### HINT:

Check in a well lighted area. Check the entire circumference and length of the brake hoses using a mirror as required. Turn the front wheels fully right or left before checking the front brake.

(a) Check all brake lines and hoses for:

- Damage
- Wear
- Deformation
- Cracks
- Corrosion
- Leaks
- Bends
- Twists

(b) Check all clamps for tightness and connections for leakage.

(c) Check that the hoses and lines are clear of sharp edges, moving parts and the exhaust system.

(d) Check that the lines installed in grommets pass through the center of the grommets.

### 2. INSPECT FRONT BRAKE PADS AND DISCS

(See page [BR-26](#))

### 3. INSPECT REAR BRAKE PADS AND DISCS

(See page [BR-35](#))

### 4. INSPECT PARKING BRAKE LININGS AND DRUMS

(See page [BR-45](#))

# CHASSIS

## INSPECTION

MA01O-02

### 1. INSPECT STEERING LINKAGE

- (a) Check the steering wheel free-play (See page [SR-8](#) ).
- (b) Check the steering linkage for looseness or damage.

Check that:

- Tie rod ends do not have excessive play.
- Dust seals and boots are not damaged.
- Boot clamps are not loose.


### 2. INSPECT SRS AIRBAG (See pages [RS-15](#) , [RS-30](#) )

### 3. INSPECT STEERING GEAR HOUSING OIL

Check the steering gear housing for oil leakage.

### 4. INSPECT DRIVE SHAFT BOOTS

Check the drive shaft boots for clamp looseness, leakage or damage.

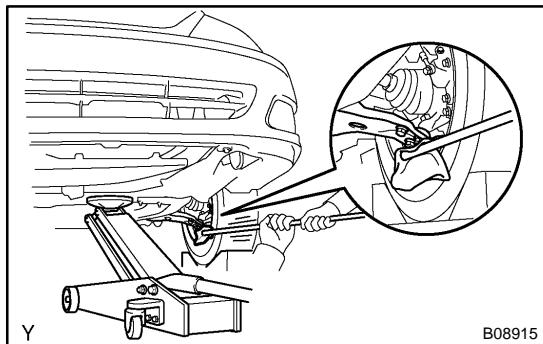

### 5. INSPECT BALL JOINTS AND DUST COVERS

- (a) Inspect the ball joints for excessive looseness.

- Jack up the front of the vehicle and place wooden blocks with a height of 180 - 200 mm (7.09 - 7.87 in.) under the front tires.
- Lower the jack until there is about half a load on the front coil spring. Place stands under the vehicle for safety.
- Check that the front wheels are pointing straight ahead, and block them with chocks.
- Using a lever, pry up the end of the lower arm, and check the amount of play.

**Maximum ball joint vertical play: 0 mm (0 in.)**

If there is play, replace the ball joint.

- (b) Check the dust cover for damage.

### 6. CHECK TRANSAXLE FLUID

Visually check the transaxle for fluid leakage.

If leakage is found, check for the cause and repair.

### 7. REPLACE TRANSAXLE FLUID (See page [DI-160](#) )

# ENGINE


## INSPECTION

MA01M-02

## HINT:

Inspect these items when the engine is cold.

1. **REPLACE TIMING BELT** (See page [EM-15](#) )
2. **INSPECT DRIVE BELTS**  
(See pages [CH-1](#) , [SR-3](#) and [AC-17](#) )
3. **REPLACE SPARK PLUGS** (See page [IG-1](#) )
4. **INSPECT AIR FILTER**
  - (a) Visually check that the air filter is not excessively dirty or oily.
  - (b) Clean the air filter with compressed air.  
First blow from the inside thoroughly, then blow off the outside of the air filter.
5. **REPLACE AIR FILTER**  
Replace the air filter with a new one.
6. **REPLACE ENGINE OIL AND OIL FILTER**  
(See page [LU-3](#) )
7. **REPLACE ENGINE COOLANT** (See page [CO-2](#) )
8. **REPLACE GASKET IN FUEL TANK CAP**  
(See page [EC-6](#) )
9. **INSPECT FUEL LINES AND CONNECTIONS**  
(See page [EC-6](#) )
10. **INSPECT EXHAUST PIPES AND MOUNTINGS**  
(See page [EC-14](#) )
11. **ADJUST VALVE CLEARANCE** (See page [EM-4](#) )

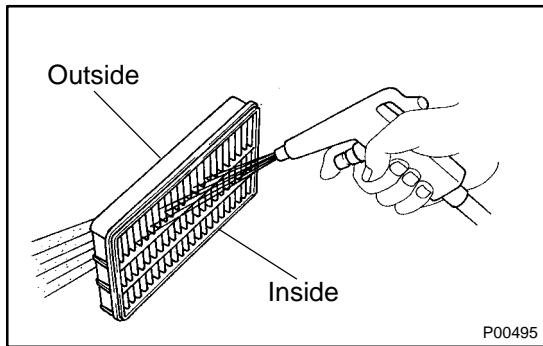

# INSIDE VEHICLE

MA002-16

## GENERAL MAINTENANCE

These are maintenance and inspection items which are considered to be the owner's responsibility. They can be done by the owner or they can have them done at a service shop. These items include those which should be checked on a daily basis, those which, in most cases, do not require (special) tools and those which are considered to be reasonable for the owner to do. Items and procedures for general maintenance are as follows.

### 1. GENERAL NOTES

- Maintenance items may vary from country to country. Check the owner's manual supplement in which the maintenance schedule is shown.
- Every service item in the periodic maintenance schedule must be performed.
- Periodic maintenance service must be performed according to whichever interval in the periodic maintenance schedule occurs first, the odometer reading (miles) or the time interval (months).
- Maintenance service after the last period should be performed at the same interval as before unless otherwise noted.
- Failure to do even one item can cause the engine to run poorly and increase exhaust emissions.

### 2. LIGHTS

- (a) Check that the headlights, stop lights, taillights, turn signal lights, and other lights are all working.
- (b) Check the headlight aim.

### 3. WARNING LIGHTS AND BUZZERS

Check that all warning lights and buzzers function properly.

### 4. HORN

Check that it is working.

### 5. WINDSHIELD GLASS

Check for scratches, pits or abrasions.

### 6. WINDSHIELD WIPER AND WASHER

- (a) Check operation of the wipers and washer.
- (b) Check that the wipers do not streak.

### 7. WINDSHIELD DEFROSTER

Check that air comes out from the defroster outlet when operating the heater or air conditioner at defroster mode.

### 8. REAR VIEW MIRROR

Check that it is mounted securely.

### 9. SUN VISORS

Check that they move freely and are mounted securely.

### 10. STEERING WHEEL

Check that it has the specified free-play. Be alert for changes in steering condition, such as hard steering, excessive free-play or strange noises.

### 11. SEATS

- (a) Check that the seat adjusters operate smoothly.
- (b) Check that all latches lock securely in any position.
- (c) Check that the head restraints move up and down smoothly and that the locks hold securely in any latch position.
- (d) For fold-down seat backs, check that the latches lock securely.

### 12. SEAT BELTS

- (a) Check that the seat belt system such as the buckles, retractors and anchors operate properly and smoothly.
- (b) Check that the belt webbing is not cut, frayed, worn or damaged.

**13. ACCELERATOR PEDAL**

Check the pedal for smooth operation and uneven pedal effort or catching.

**14. BRAKE PEDAL (See page BR-6 )**

- (a) Check the pedal for smooth operation.
- (b) Check that the pedal has the proper reserve distance and free-play.
- (c) Check the brake booster function.

**15. BRAKES**

At a safe place, check that the brakes do not pull to one side when applied.

**16. PARKING BRAKE (See page BR-9 )**

- (a) Check that the parking brake pedal has the proper travel.
- (b) On a safe incline, check that the vehicle is held securely with only the parking brake applied.

**17. AUTOMATIC TRANSMISSION "PARK" MECHANISM**

- (a) Check the lock release mechanism of the selector lever for proper and smooth operation.
- (b) On a safe incline, check that the vehicle is held securely with the selector lever in "P" position and all brakes released.

# INSIDE VEHICLE

MA002-16

## GENERAL MAINTENANCE

These are maintenance and inspection items which are considered to be the owner's responsibility. They can be done by the owner or they can have them done at a service shop. These items include those which should be checked on a daily basis, those which, in most cases, do not require (special) tools and those which are considered to be reasonable for the owner to do. Items and procedures for general maintenance are as follows.

### 1. GENERAL NOTES

- Maintenance items may vary from country to country. Check the owner's manual supplement in which the maintenance schedule is shown.
- Every service item in the periodic maintenance schedule must be performed.
- Periodic maintenance service must be performed according to whichever interval in the periodic maintenance schedule occurs first, the odometer reading (miles) or the time interval (months).
- Maintenance service after the last period should be performed at the same interval as before unless otherwise noted.
- Failure to do even one item can cause the engine to run poorly and increase exhaust emissions.

### 2. LIGHTS

- (a) Check that the headlights, stop lights, taillights, turn signal lights, and other lights are all working.
- (b) Check the headlight aim.

### 3. WARNING LIGHTS AND BUZZERS

Check that all warning lights and buzzers function properly.

### 4. HORN

Check that it is working.

### 5. WINDSHIELD GLASS

Check for scratches, pits or abrasions.

### 6. WINDSHIELD WIPER AND WASHER

- (a) Check operation of the wipers and washer.
- (b) Check that the wipers do not streak.

### 7. WINDSHIELD DEFROSTER

Check that air comes out from the defroster outlet when operating the heater or air conditioner at defroster mode.

### 8. REAR VIEW MIRROR

Check that it is mounted securely.

### 9. SUN VISORS

Check that they move freely and are mounted securely.

### 10. STEERING WHEEL

Check that it has the specified free-play. Be alert for changes in steering condition, such as hard steering, excessive free-play or strange noises.

### 11. SEATS

- (a) Check that the seat adjusters operate smoothly.
- (b) Check that all latches lock securely in any position.
- (c) Check that the head restraints move up and down smoothly and that the locks hold securely in any latch position.
- (d) For fold-down seat backs, check that the latches lock securely.

### 12. SEAT BELTS

- (a) Check that the seat belt system such as the buckles, retractors and anchors operate properly and smoothly.
- (b) Check that the belt webbing is not cut, frayed, worn or damaged.

**13. ACCELERATOR PEDAL**

Check the pedal for smooth operation and uneven pedal effort or catching.

**14. BRAKE PEDAL (See page BR-6 )**

- (a) Check the pedal for smooth operation.
- (b) Check that the pedal has the proper reserve distance and free-play.
- (c) Check the brake booster function.

**15. BRAKES**

At a safe place, check that the brakes do not pull to one side when applied.

**16. PARKING BRAKE (See page BR-9 )**

- (a) Check that the parking brake pedal has the proper travel.
- (b) On a safe incline, check that the vehicle is held securely with only the parking brake applied.

**17. AUTOMATIC TRANSMISSION "PARK" MECHANISM**

- (a) Check the lock release mechanism of the selector lever for proper and smooth operation.
- (b) On a safe incline, check that the vehicle is held securely with the selector lever in "P" position and all brakes released.

# OUTSIDE VEHICLE

## GENERAL MAINTENANCE

MA001-12

These are maintenance and inspection items which are considered to be the owner's responsibility. They can be done by the owner or they can have them done at a service shop.

These items include those which should be checked on a daily basis, those which, in most cases, do not require (special) tools and those which are considered to be reasonable for the owner to do.

Items and procedures for general maintenance are as follows.

### 1. GENERAL NOTES

- Maintenance items may vary from country to country. Check the owner's manual supplement in which the maintenance schedule is shown.
- Every service item in the periodic maintenance schedule must be performed.
- Periodic maintenance service must be performed according to whichever interval in the periodic maintenance schedule occurs first, the odometer reading (miles) or the time interval (months).
- Maintenance service after the last period should be performed at the same interval as before unless otherwise noted.
- Failure to do even one item can cause the engine to run poorly and increase exhaust emissions.

### 2. TIRES

- (a) Check the pressure with a gauge. If necessary, adjust.
- (b) Check for cuts, damage or excessive wear.

### 3. WHEEL NUTS

When checking the tires, check the nuts for looseness or for missing nuts. If necessary, tighten them.

### 4. TIRE ROTATION

Check the owner's manual supplement in which the maintenance schedule is shown.

### 5. WINDSHIELD WIPER BLADES

Check for wear or cracks whenever they do not wipe clean. If necessary, replace.

### 6. FLUID LEAKS

- (a) Check underneath for leaking fuel, oil, water or other fluid.
- (b) If you smell gasoline fumes or notice any leak, have the cause found and corrected.

### 7. DOORS AND ENGINE HOOD

- (a) Check that all doors including the trunk lid operate smoothly, and that all latches lock securely.
- (b) Check that the engine hood secondary latch secures the hood from opening when the primary latch is released.

# UNDER HOOD

## GENERAL MAINTENANCE

MA003-12

### 1. GENERAL NOTES

- Maintenance items may vary from country to country. Check the owner's manual supplement in which the maintenance schedule is shown.
- Every service item in the periodic maintenance schedule must be performed.
- Periodic maintenance service must be performed according to whichever interval in the periodic maintenance schedule occurs first, the odometer reading (miles) or the time interval (months).
- Maintenance service after the last period should be performed at the same interval as before unless otherwise noted.
- Failure to do even one item can cause the engine to run poorly and increase exhaust emissions.

### 2. WINDSHIELD WASHER FLUID

Check that there is sufficient fluid in the tank.

### 3. ENGINE COOLANT LEVEL

Check that the coolant level is between the "FULL" and "LOW" lines on the see-through reservoir.

### 4. RADIATOR AND HOSES

- (a) Check that the front of the radiator is clean and not blocked with leaves, dirt or bugs.
- (b) Check the hoses for cracks, kinks, rot or loose connections.

### 5. BATTERY ELECTROLYTE LEVEL

Check that the electrolyte level of all battery cells is between the upper and lower level lines on the case.

### 6. BRAKE FLUID LEVEL

Check that the brake fluid level is near the upper level line on the see-through reservoirs.

### 7. ENGINE DRIVE BELTS

Check drive belt for fraying, cracks, wear or oiliness.

### 8. ENGINE OIL LEVEL

Check the level on the dipstick with the engine turned off.

### 9. POWER STEERING FLUID LEVEL

- Check the level.
- The level should be in the "HOT" or "COLD" range depending on the fluid temperature.

### 10. AUTOMATIC TRANSMISSION FLUID LEVEL

- (a) Park the vehicle on a level surface.
- (b) With the engine idling and the parking brake applied, shift the selector into all positions from "P" to "L", and then shift into "P" position.
- (c) Pull out the dipstick and wipe off the fluid with a clean rag. Re-insert the dipstick and check that the fluid level is in the "HOT" range.
- (d) Do this check with the fluid at normal driving temperature (70 - 80°C, 158 - 176°F).

#### HINT:

Wait until the engine cools down (approx. 30 min.) before checking the fluid level after extended driving at high speeds, in hot weather, in heavy traffic or pulling a trailer.

### 11. EXHAUST SYSTEM

If any change in the sound of the exhaust or smell of the exhaust fumes is noticed, have the cause located and corrected.