


INSPECTION


1. PRETENSIONER IS NOT ACTIVATED

(a) Perform a diagnostic system check (See page [DI-239](#)).

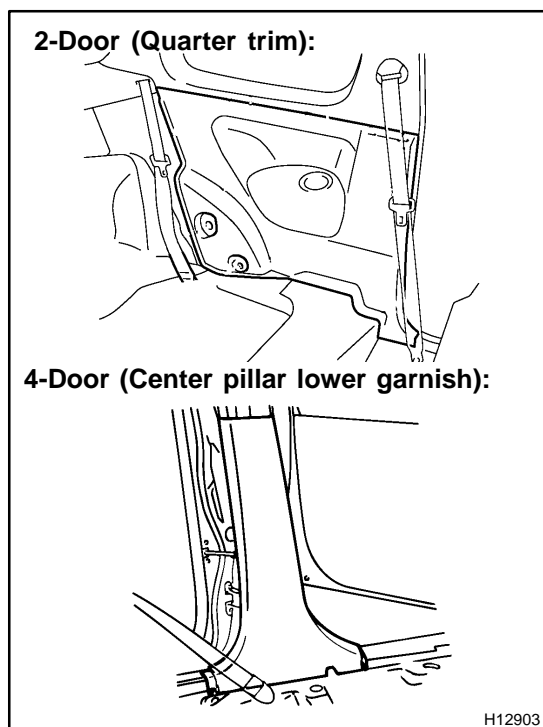


(b) Perform a visual check which includes the following items with the front seat outer belt removed from the vehicle.

- Check for cuts and cracks in, or marked discoloration on the quarter trim or center pillar lower garnish.
- Check for cuts and cracks in wire harness, and for chipping in connectors.

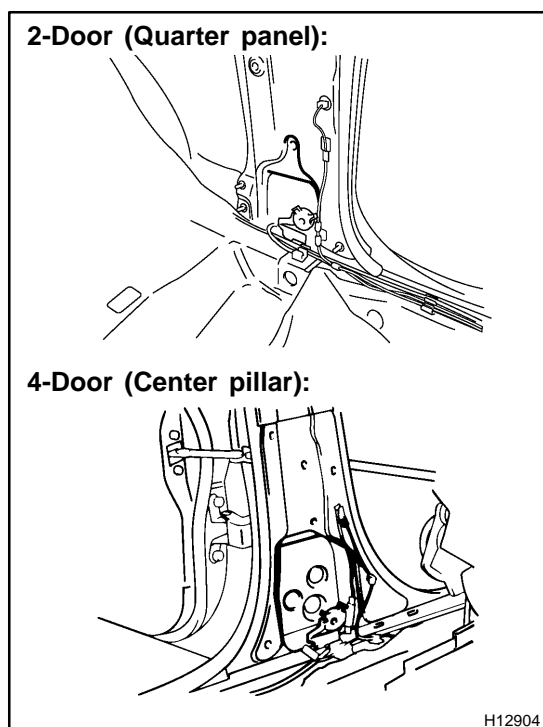

- Check for deformation of the quarter panel or center pillar.

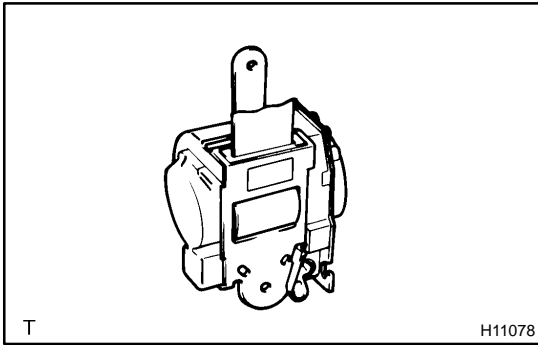

- Check for cuts and minute cracks in wire harness or marked discoloration on the front seat outer belt.


CAUTION:

For removal and installation of the front seat outer belt, see page [BO-1 14](#) and [BO-125](#) .

Be sure to follow the correct procedure.

2. PRETENSIONER IS ACTIVATED

(a) Perform a diagnostic system check (See page [DI-239](#)).

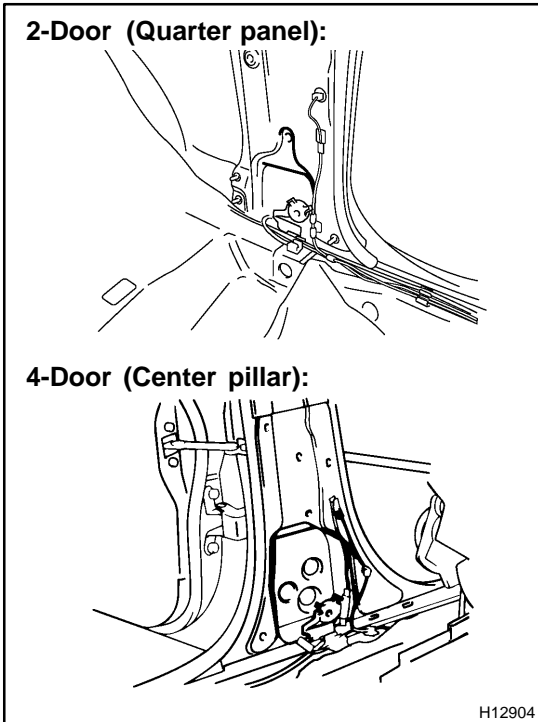

(b) Perform a visual check which includes the following items with the front seat outer belt removed from the vehicle.

- Check for deformation of the quarter panel or center pillar.
- Check for damage on the connector and wire harness.