


REMOVAL

1. REMOVE REAR WHEEL
2. DISCONNECT SPEED SENSOR CONNECTOR
3. REMOVE SPEED SENSOR WITH REAR AXLE HUB
(See page SA-42)
4. REMOVE ABS SPEED SENSOR
 - (a) Using a pin punch and hammer, drive out the 2 pins and remove the 2 attachments from SST.
SST 09520-00031 (09520-00040, 09521-00020)

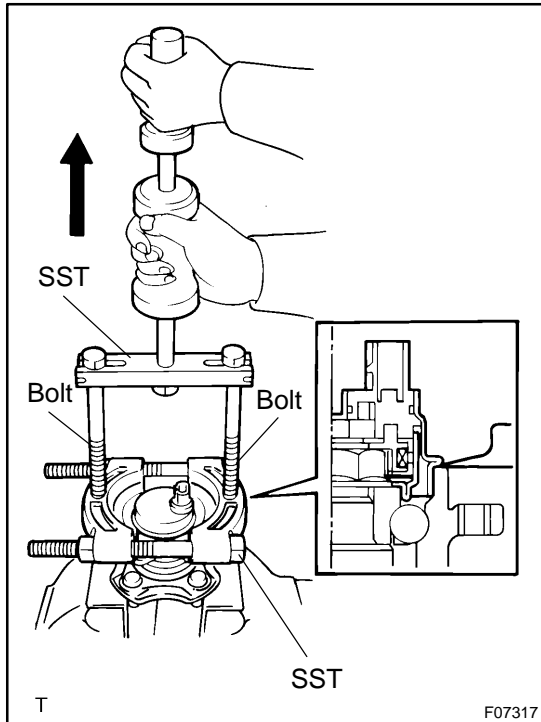

- (b) Mount the axle hub assembly in a soft jaw vise.

NOTICE:

Replace the axle hub assembly if it is dropped or a strong shock is given to it.

- (c) Using SST and 2 bolts (Diameter: 12 mm, Pitch: 1.5 mm), remove the ABS speed sensor.

SST 09520-00031 (09520-00040, 09521-00020),
09950-00020

NOTICE:

- Do not allow any foreign matter sticking to the sensor rotor.
- Pull out the ABS speed sensor straightly not to damage the sensor rotor.
- If damage has occurred to the sensor rotor, replace the axle hub assembly.
- Do not scratch the contacting surface of the axle hub and speed sensor.