


ENGINE

HOW TO PROCEED WITH TROUBLESHOOTING

DI114-07

When using hand-held tester, troubleshooting in accordance with the procedure on the following page.

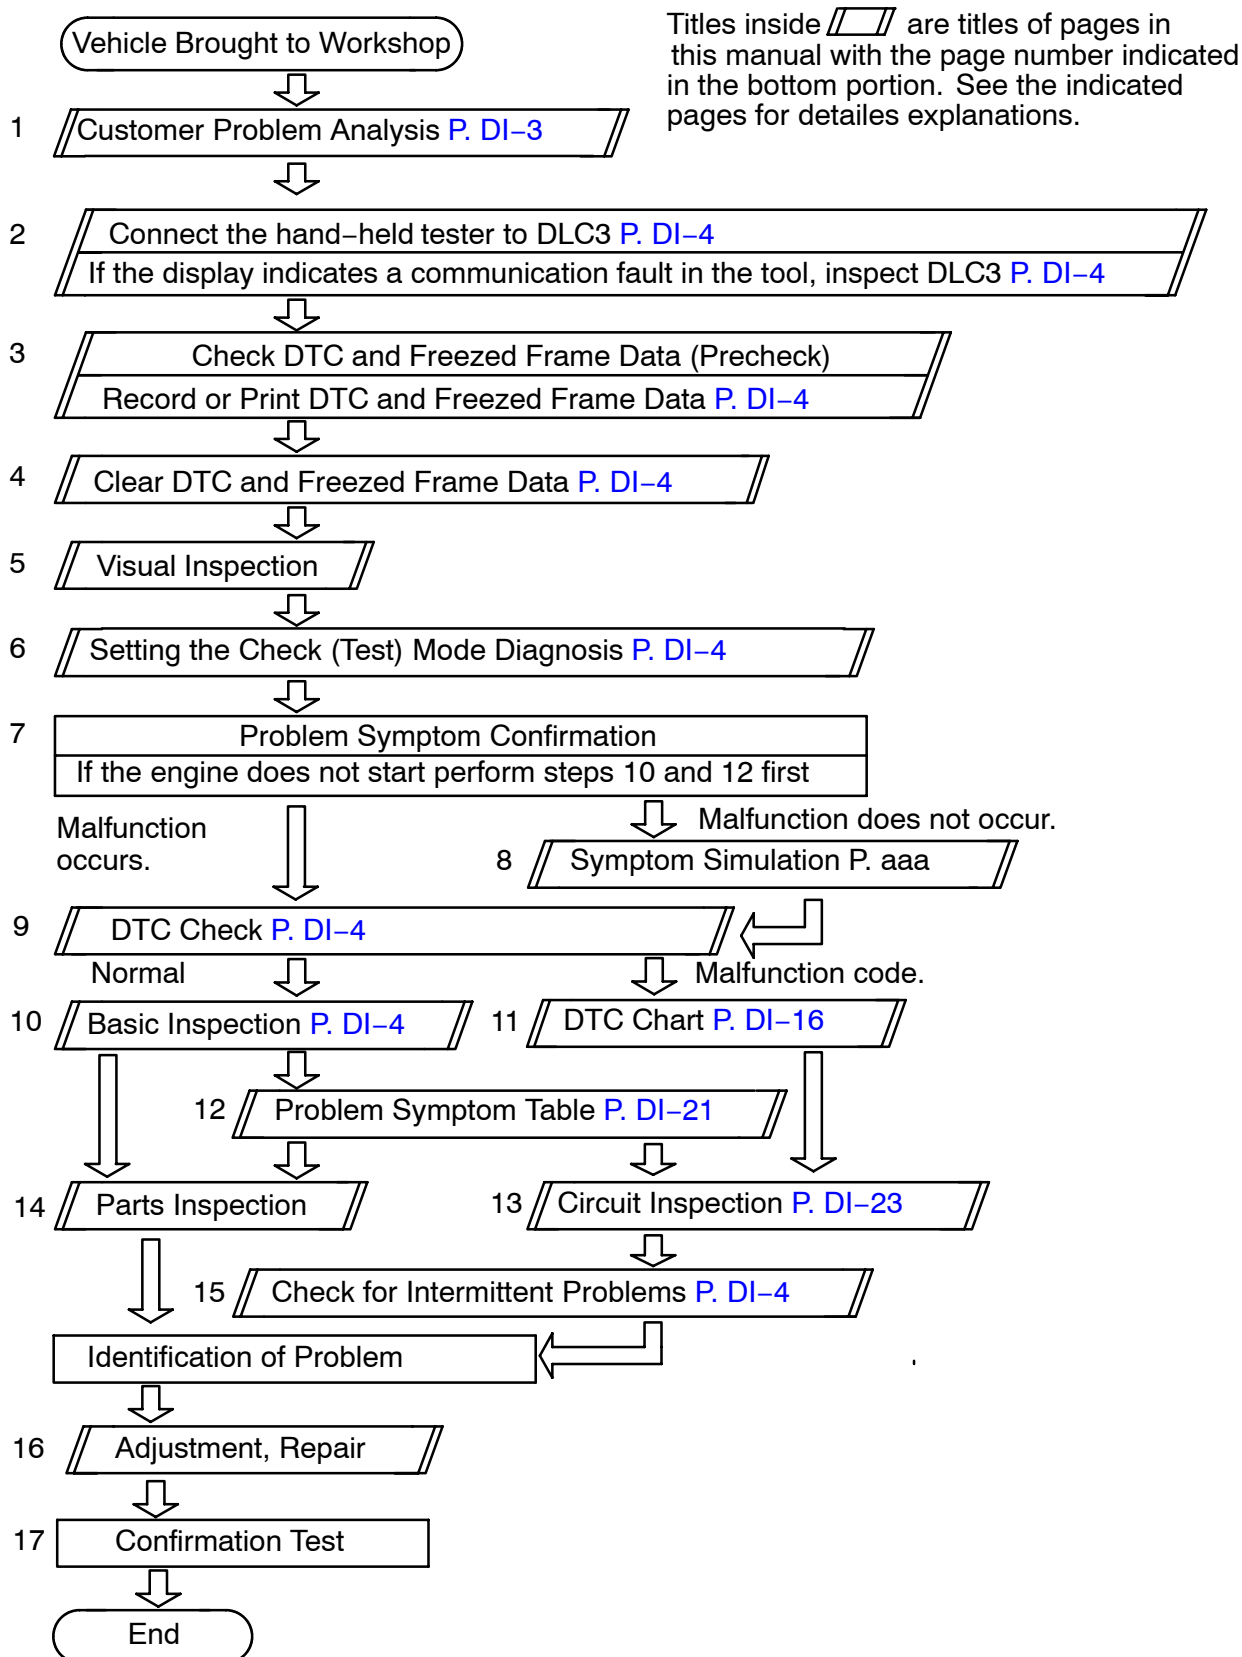

When not using hand-held tester, troubleshooting in accordance with the procedure on the following pages.

