


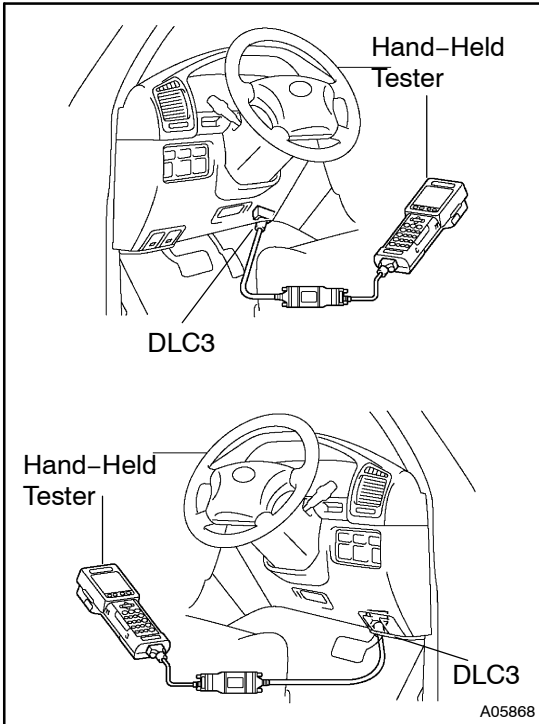

FUEL PUMP ON-VEHICLE INSPECTION

FI01F-02


1. CHECK FUEL PUMP OPERATION

- Connect a hand-held tester to the DLC3.
- Turn the ignition switch ON, and push the hand-held tester main switch ON.

NOTICE:

Do not start the engine.

- Select the ACTIVE TEST mode on the hand-held tester.
- Please refer to the hand-held tester operator's manual for further details.
- If you have no hand-held tester, connect the positive (+) and negative (-) leads from the battery to the fuel pump connector. (See step 3)
- Disconnect the fuel return hose from the clamp on the V-bank cover.
- Remove the 2 bolts, nuts and V-bank cover.

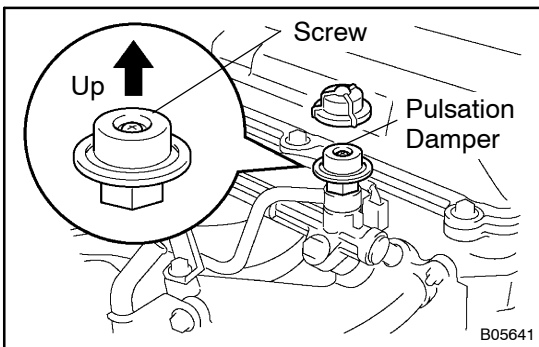

- Check that the pulsation damper screw rises up when the fuel pump operates.


If operation is not as specified, check these parts:

- Fusible link
- Fuses
- EFI main relay
- Fuel pump
- Engine ECU
- Wiring connections

- Turn the ignition switch OFF.
- Disconnect the hand-held tester from the DLC3.

2. CHECK FUEL PRESSURE

- Check the battery positive voltage is above 12 V.
- Disconnect the negative (-) terminal cable from the battery.
- Remove the front fuel pipe from the LH delivery pipe.
(See page FI-23)

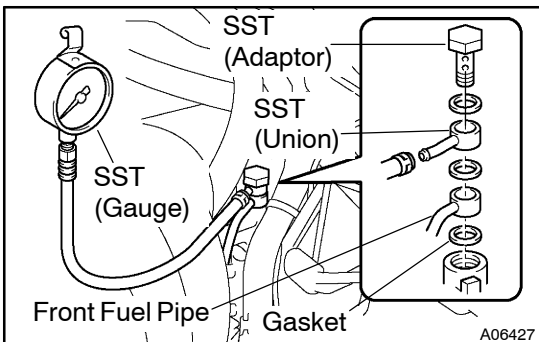

- Install the front fuel pipe and SST (pressure gauge) to the delivery pipe with 3 lower gaskets and SST (adaptor).
SST 09268-45012 (09268-41190, 90405-06167)
Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)
- Wipe off any splattered gasoline.
- Reconnect the negative (-) terminal cable to the battery.
- Connect a hand-held tester to the DLC3.
(See step 1 in check fuel pump operation (a) to (e))
- Measure the fuel pressure.

Fuel pressure:**265 – 304 kPa (2.7 – 3.1 kgf/cm² 38 – 44 psi)**

If pressure is high, replace the fuel pressure regulator.

If pressure is low, check these parts:

- Fuel hoses and connections
- Fuel pump
- Fuel filter
- Fuel pressure regulator

(i) Disconnect the hand-held tester from the DLC3.

(j) Start the engine.

(k) Measure the fuel pressure at idle.

Fuel pressure:**265 – 304 kPa (2.7 – 3.1 kgf/cm² 38 – 44 psi)**

(l) Measure the fuel pressure at idle.

Fuel pressure:**196 – 235 kPa (2.0 – 2.4 kgf/cm² 28 – 34 psi)**

(m) Stop the engine.

(n) Check that the fuel pressure remains as specified for 5 minutes after the engine has stopped.

Fuel pressure: 147 kPa (1.5 kgf/cm² 21 psi) or more

If pressure is not as specified, check the fuel pump, pressure regulator and/or injectors.

(o) After checking fuel pressure, disconnect the negative (–) terminal cable from the battery and carefully remove the SST to prevent gasoline from splashing.

SST 09268–45012

(p) Reinstall the front fuel pipe to the LH delivery pipe.

(See page FI-28)

(q) Reconnect the negative (–) terminal cable to the battery.

(r) Check for fuel leaks. (See page FI-1)

3. INSPECT FUEL PUMP


(a) Remove the No.1 rear seats.

(b) Remove the 2 rear door scuff plates, step plates and rear seat lock covers.

(c) Pull off the front and rear floor carpets.

(d) Remove the 2 screws and rear floor service hole cover.


(e) Disconnect the fuel pump & sender gauge connector.

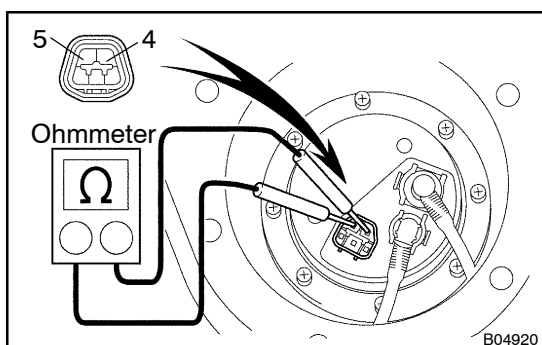

(f) Using an ohmmeter, measure the resistance between terminals 4 and 5.

Resistance: 0.2 – 3.0 Ω at 20°C (68°F)

If the resistance is not as specified, replace the fuel pump and/or lead wire.

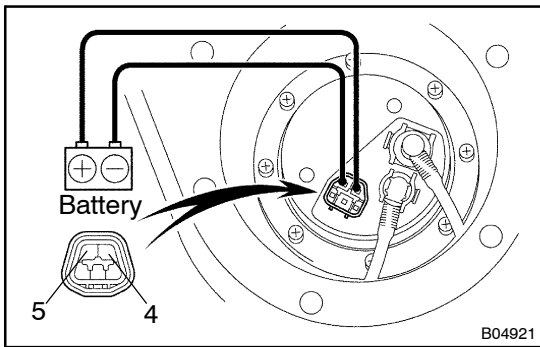

- (g) Inspect the fuel pump operation. Connect the positive (+) lead from the battery to terminal 4 of the connector, and the negative (-) lead to terminal 5. Check that the fuel pump operates.

NOTICE:

- **These tests must be done quickly (within 10 seconds) to prevent the coil burning out.**
- **Keep the fuel pump as far away from the battery as possible.**
- **Always do the switching at the battery side.**

If operation is not as specified, replace the fuel pump and/or lead wire.

- (h) Reconnect the fuel pump & sender gauge connector.
- (i) Reinstall the rear floor service hole cover with the 2 screws.
- (j) Reinstall the front and rear floor carpets.
- (k) Remove the 2 rear door scuff plates, step plates and rear seat lock covers.
- (l) Reinstall the No.1 rear seats.