


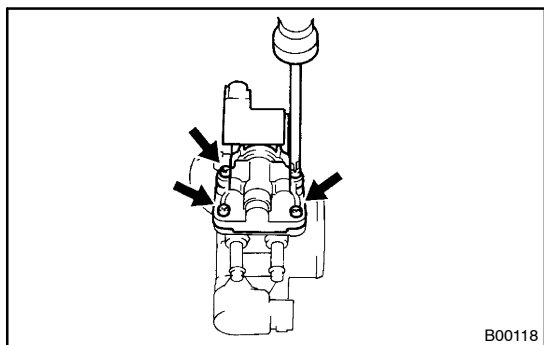

REMOVAL

1. REMOVE THROTTLE BODY
(See page FI-34)

2. REMOVE IAC VALVE

Remove the 4 screws, IAC valve and gasket.