



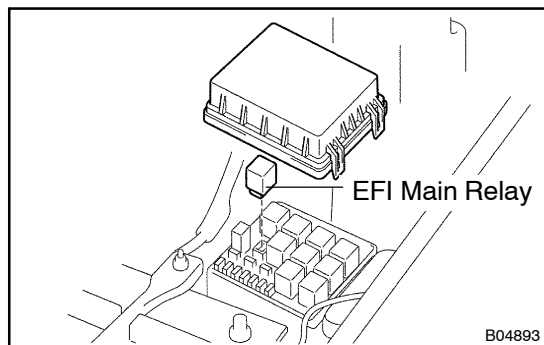

EFI MAIN RELAY INSPECTION


F10HZ-01

1. REMOVE RELAY BOX COVER
2. REMOVE EFI MAIN RELAY (Marking: EFI)

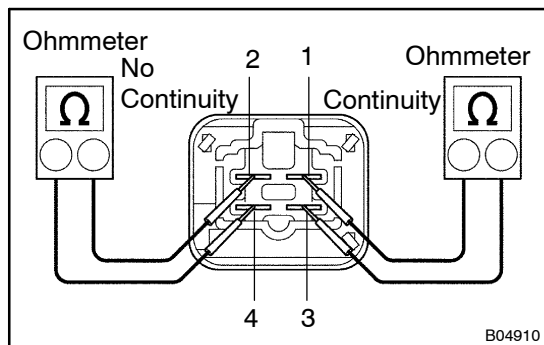

3. INSPECT EFI MAIN RELAY

- (a) Inspect the relay continuity.
 - (1) Using an ohmmeter, check that there is continuity between terminals 1 and 3.
 If there is no continuity, replace the relay.
 - (2) Check that there is no continuity between terminals 2 and 4.
 If there is continuity, replace the relay.

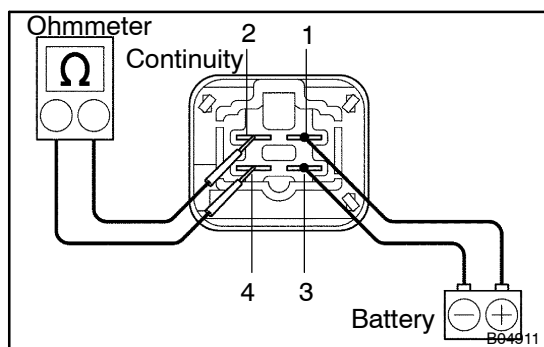

- (b) Inspect the relay operation.
 - (1) Apply battery positive voltage across terminals 1 and 3.
 - (2) Using an ohmmeter, check that there is continuity between terminals 2 and 4.
 If there is no continuity, replace the relay.
4. REINSTALL EFI MAIN RELAY
 5. REINSTALL RELAY BOX COVER