



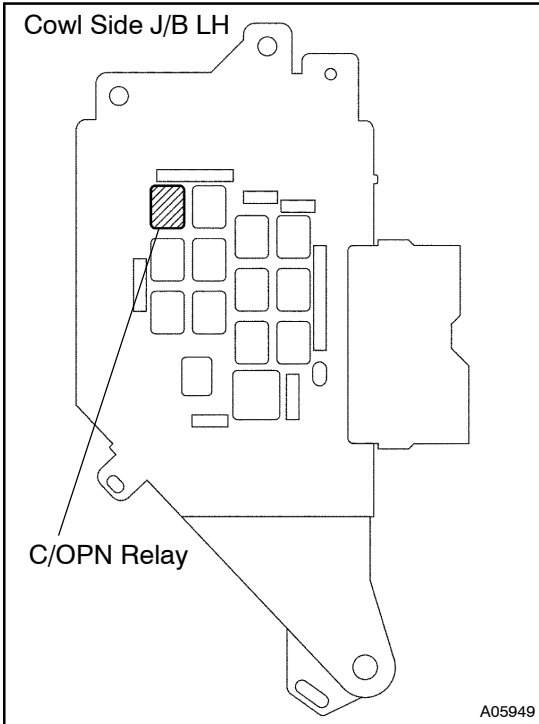

## CIRCUIT OPENING RELAY INSPECTION

FI010-01

### 1. REMOVE CIRCUIT OPENING RELAY (Marking: C/OPN)

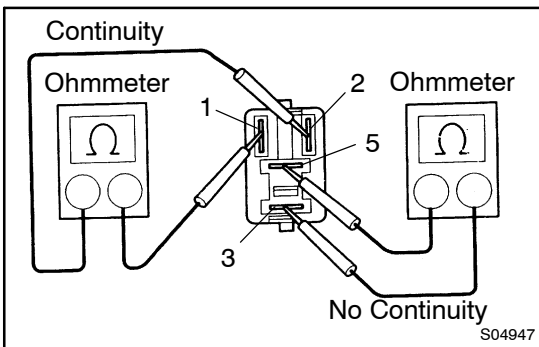

### 2. INSPECT CIRCUIT OPENING RELAY


#### (a) Inspect the relay continuity.

- (1) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

- (2) Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the relay.

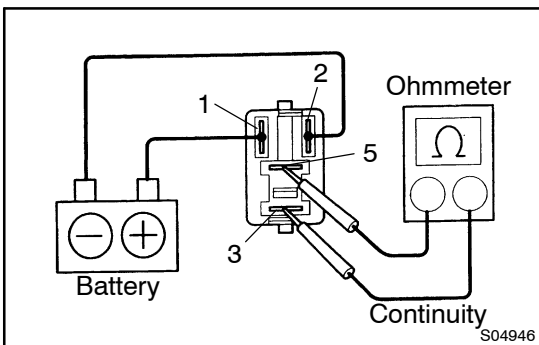

#### (b) Inspect the relay operation.

- (1) Apply battery positive voltage across terminals 1 and 2.
- (2) Using an ohmmeter, check that there is continuity between terminals 3 and 5.

If there is no continuity, replace the relay.

### 3. REINSTALL CIRCUIT OPENING RELAY