


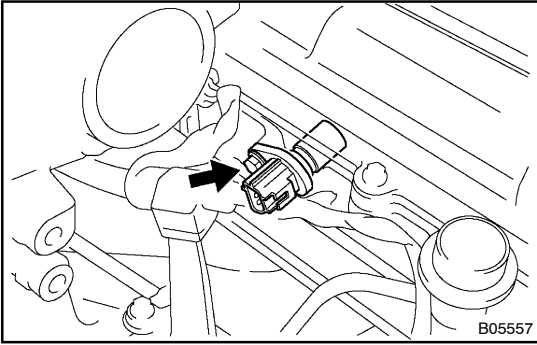

REMOVAL

REMOVE CAMSHAFT POSITION SENSOR

- (a) Disconnect the camshaft position sensor connector.
- (b) Remove the bolt and camshaft position sensor.

Torque: 9.3 N·m (95 kgf·cm, 82 in.·lbf)