



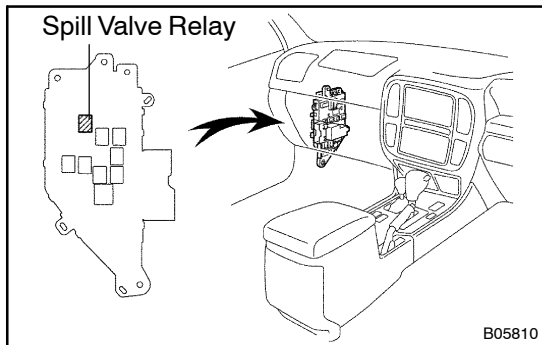

SPILL VALVE RELAY INSPECTION

ED021-01

1. REMOVE LH COWL SIDE R/B
2. REMOVE SPILL VALVE RELAY

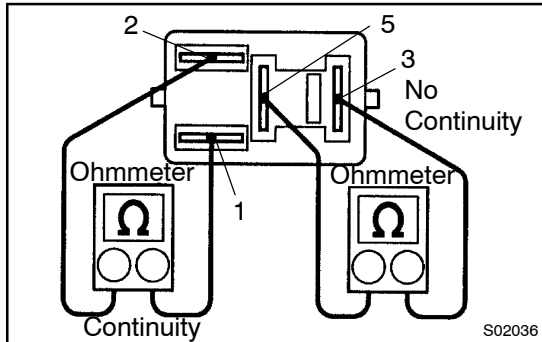


3. INSPECT SPILL VALVE RELAY CONTINUITY

- (a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

- (b) Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the relay.

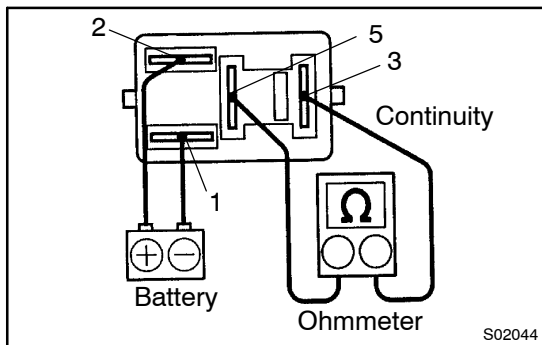

4. INSPECT SPILL VALVE RELAY OPERATION

- (a) Apply battery positive voltage across terminals 1 and 2.
- (b) Using an ohmmeter, check that there is continuity between terminals 3 and 5.

If there is no continuity, replace the relay.

5. REINSTALL SPILL VALVE RELAY
6. REINSTALL LH COWL SIDE R/B