


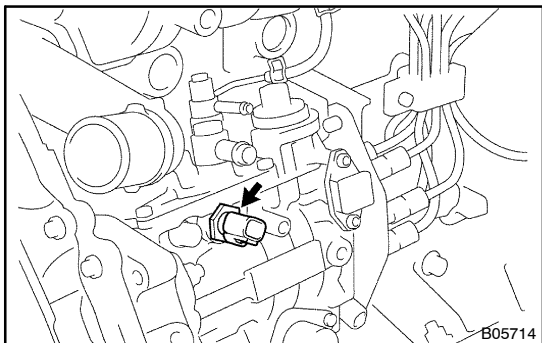

FUEL TEMPERATURE SENSOR INSPECTION

ED00N-02

1. REMOVE FUEL TEMPERATURE SENSOR

- (a) Disconnect the sensor connector.
- (b) Using a 19 mm deep socket wrench, remove the sensor and gasket.

2. INSPECT FUEL TEMPERATURE SENSOR

(See [page ED-5](#))

3. REINSTALL FUEL TEMPERATURE SENSOR

- (a) Using a 19 mm deep socket wrench, install a new gasket and the sensor.

Torque: 21.6 N·m (220 kgf·cm, 16.5 ft·lbf)

- (b) Connect the sensor connector.