


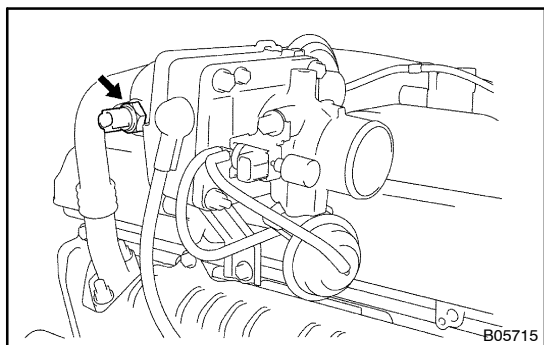

ED000-02

INTAKE AIR TEMPERATURE SENSOR INSPECTION

1. **REMOVE INTAKE AIR TEMPERATURE SENSOR**
 - (a) Disconnect the sensor connector.
 - (b) Using a 22 mm deep socket wrench, remove the intake air temperature sensor.
2. **INSPECT INTAKE AIR TEMPERATURE SENSOR**
(See page ED-5)
3. **REINSTALL INTAKE AIR TEMPERATURE SENSOR**
 - (a) Using a 21 mm deep socket wrench, install a new gasket and the sensor.
Torque: 29 N·m (300 kgf·cm, 21 ft·lbf)
 - (b) Connect the sensor connector.