


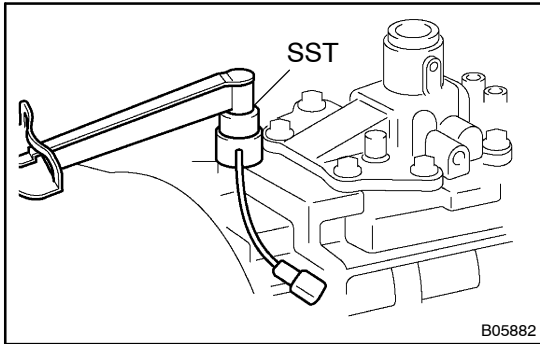

INSTALLATION

1. INSTALL SHIFT POSITION SWITCH

- (a) Install a new gasket to the shift position switch.
- (b) Using SST, install the shift position switch.

Torque: 44.1 N·m (450 kgf·cm, 33 ft·lbf)

SST 09817-16011

2. INSTAL TRANSMISSION