


DISASSEMBLY


1. REMOVE WATER SENDER GAUGE

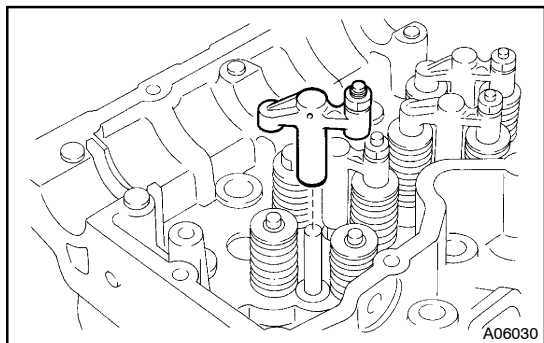

2. REMOVE VALVE BRIDGE

HINT:

Arrange the valve bridge in correct order.

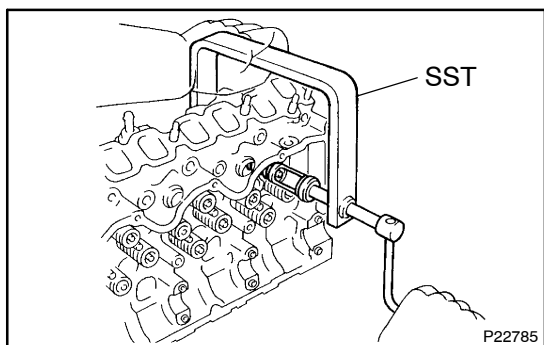

3. REMOVE VALVES


- (a) Using SST, compress the valve spring and remove the 2 keepers.

SST 09202-70020 (09202-00010)

- (b) Remove the spring retainer, valve spring, valve and spring seat.

HINT:

Arrange the valves, valve spring, valve springs, spring seats and spring retainers in correct order.

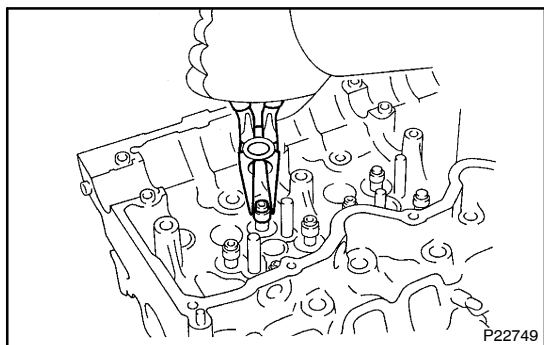

- (c) Using needle-nose pliers, remove the oil seal.