



DISASSEMBLY


1. **MOUNTING PUMP ASSEMBLY TO SST (STAND)**
(See page FU-53)
SST 09241-76022, 09245-68010
2. **REMOVE SET KEY OF DRIVE PULLEY FROM DRIVE SHAFT**

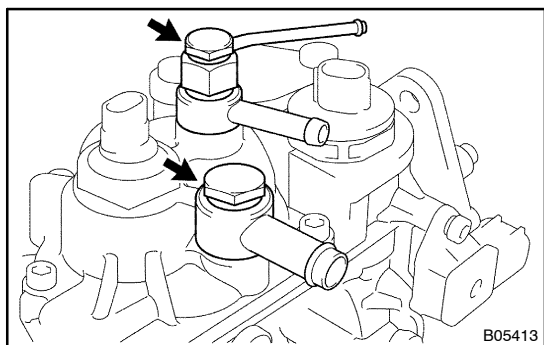

3. **REMOVE FUEL PIPES**
 - (a) Remove the over flow screw, fuel outlet pipe and 2 gaskets.
 - (b) Remove the union bolt, fuel inlet pipe and 2 gaskets.

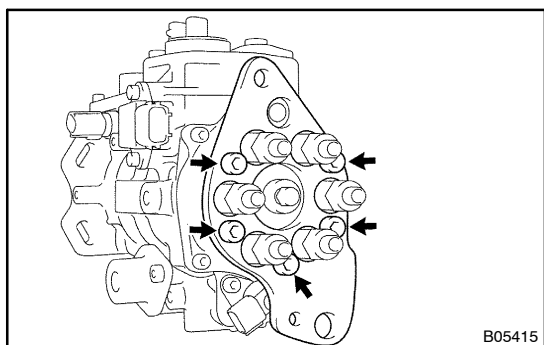

4. **REMOVE INJECTION PUMP STAY**
Using a 6 mm hexagon wrench, remove the 5 bolts and injection pump stay.

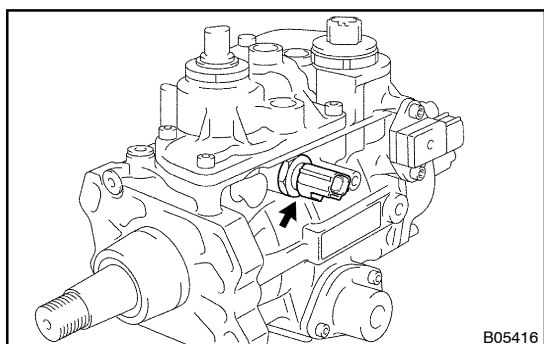

5. **REMOVE FUEL TEMPERATURE SENSOR**