


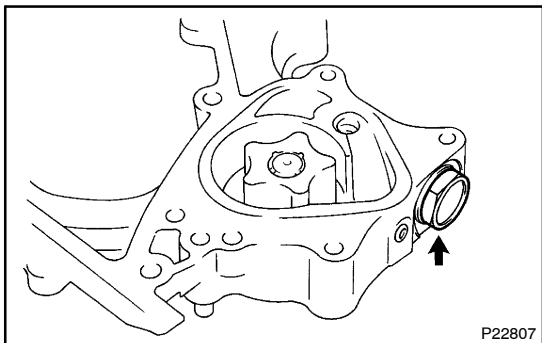

DISASSEMBLY

1. REMOVE DRIVEN ROTOR
2. REMOVE RELIEF VALVE

Remove the plug, gasket, spring and relief valve.