


REMOVAL

1. REMOVE OIL PAN ([See page LU-9](#))

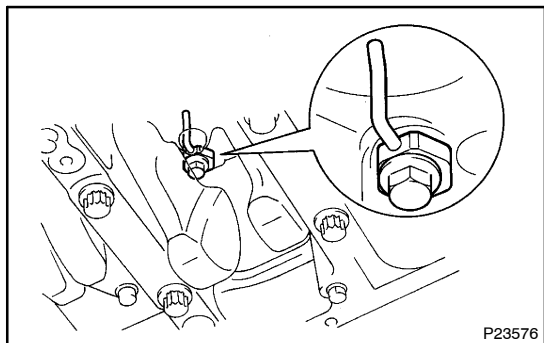

2. REMOVE CHECK VALVE AND OIL NOZZLE

Remove the 6 check valves and 6 oil nozzle.

P23576