


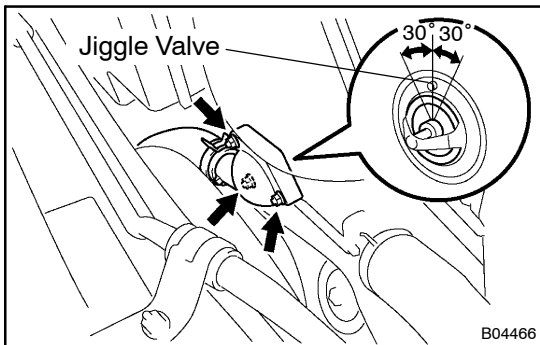

INSTALLATION

1. PLACE THERMOSTAT IN WATER INLET HOUSING

- (a) Install a new gasket to the thermostat.
- (b) insert the thermostat into the water inlet housing with the jiggle valve facing upward.

HINT:

The jiggle valve may be set within 30° of either side of the prescribed position.

2. INSTALL WATER INLET

Install the water inlet with the 3 bolts.

Torque: 19 N·m (195 kgf·cm, 14 ft·lbf)

3. FILL WITH ENGINE COOLANT

4. START ENGINE AND CHECK FOR ENGINE COOLANT LEAKS

5. RECHECK ENGINE COOLANT LEVEL