


TERMINALS OF ECU

Engine ECU Terminals

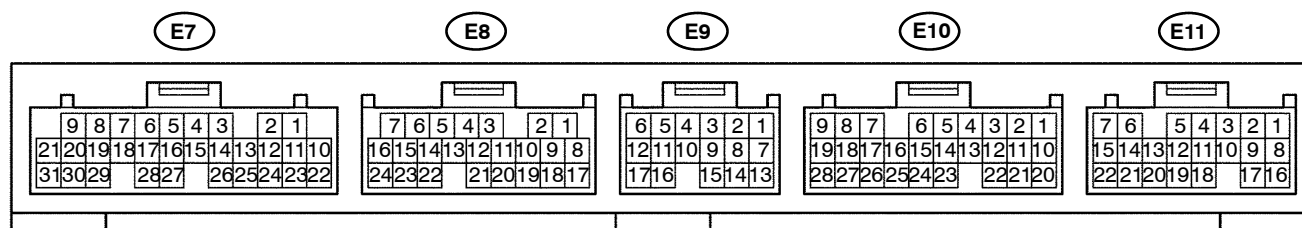

A02508

A04997

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
FPMS (E10-28) – E1 (E8-17)	L-W ↔ BR	IG switch ON Fuel tank changeover switch OFF	0 ~ 3.0
		IG switch ON Fuel tank changeover switch ON	9 ~ 14
FPM (E10-27) – E1 (E8-17)	B ↔ BR	Idling Fuel tank changeover switch OFF	9 ~ 14
		Idling Fuel tank changeover switch ON	0 ~ 3.0
FPMR (E10-18) – E1 (E8-17)	B-O ↔ BR	Idling Fuel tank changeover switch OFF	0 ~ 3.0
		Idling Fuel tank changeover switch ON	9 ~ 14
FPR (E11-4) – E01 (E7-21)	G-W ↔ W-B	IG switch ON	9 ~ 14
FPR2 (E10-7) – E01 (E7-21)	L ↔ W-B	Start engine and after 4.0 seconds or more	0 ~ 3.0
		Start engine Water temperature is 60°C (140°F) or more	0 ~ 3.0
		Start engine, after 1 second or more and 4 second or less Water temperature is 60°C (140°F) or less	9 ~ 14
FC (E11-5) – E01 (E7-21)	B-W ↔ W-B	IG switch ON	9 ~ 14
FPLD (E10-8) – E01 (E7-21)	O ↔ W-B	Idling Fuel tank changeover switch OFF	9 ~ 14
		Idling Fuel tank changeover switch ON	0 ~ 3.0