

REMOVAL

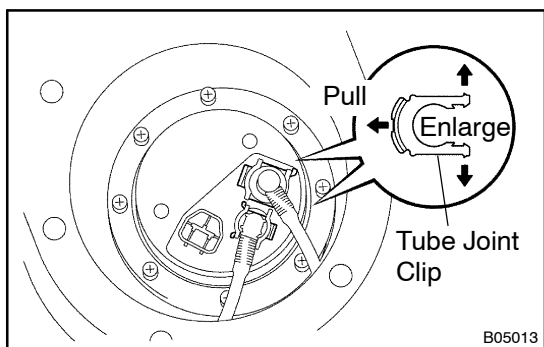
CAUTION:

Do not smoke or work near an open flame when working the fuel pump.

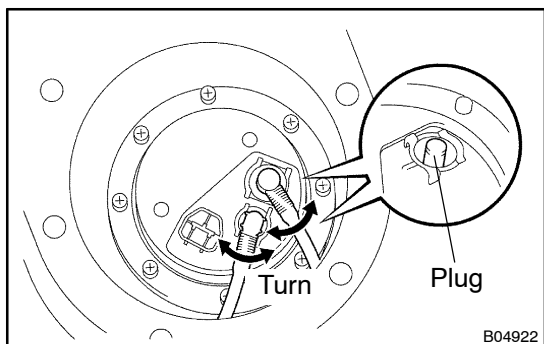
1. REMOVE NO.1 REAR SEATS
2. REMOVE REAR DOOR SCUFF PLATES, STEP PLATES AND REAR SEAT LOCK COVERS
3. REMOVE FLOOR SERVICE HOLE COVER
 - (a) Take off the front and rear floor carpets.
 - (b) Remove the 2 screws and service hole cover.
4. DISCONNECT FUEL PUMP & SENDER GAUGE CONNECTOR
5. DISCONNECT FUEL MAIN TUBE AND RETURN TUBE (FUEL TUBE CONNECTORS) FROM FUEL SUCTION PLATE

CAUTION:

- Perform disconnecting operation of the fuel tube connector (quick type) after observing precaution. (See page FI-1)
- As there is retained pressure in the fuel line, prevent it from splashing inside the vehicle compartment.
- As the quick connector seals tube and suction plate through O-rings, perform the operation while taking sufficient care not to damage the contact surface or let the foreign matter stick on it.
- Be sure to perform the disconnection with your hands. Do not use tools.
- Do not bend or turn the nylon tube forcefully.



- (a) Before operation, remove the foreign matter or dirt stick to the tube joint clips and clean them.
- (b) Enlarge the tip of the clips with your finger and pull them out for disconnection.

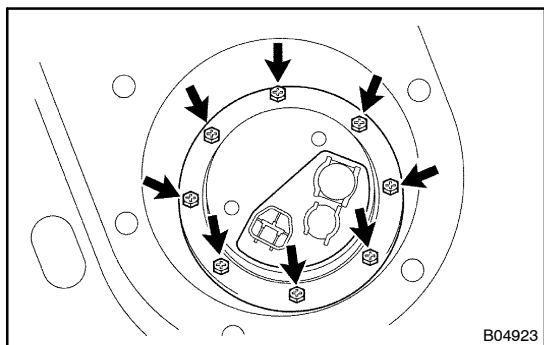


- (c) Pull out the fuel main tube and return tube. If the nylon tube and suction plate stick together, ease the connection by turning the nylon tube with your hand and pull it out for disconnection.

NOTICE:

Plug the port of the fuel suction plate with a clean rubber cap.

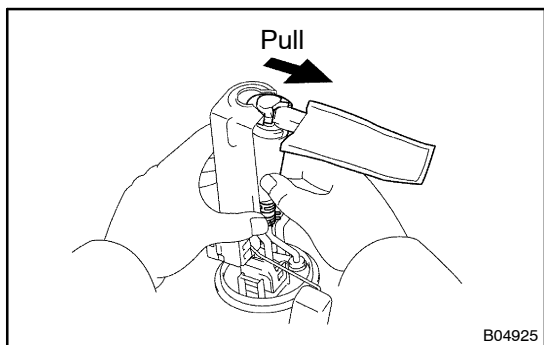
- (d) After disconnection, protect the connector with a vinyl bag.

**6. REMOVE FUEL PUMP AND SENDER GAUGE ASSEMBLY FROM FUEL TANK**

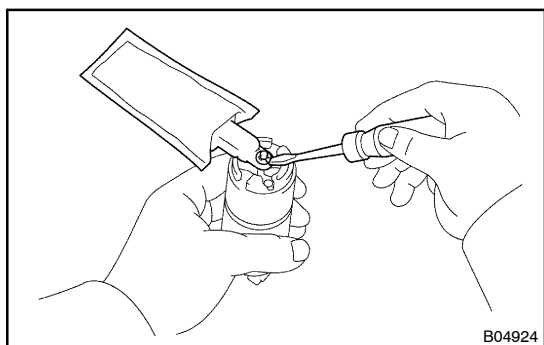
- (a) Remove the 8 bolts.
- (b) Pull out the fuel pump and sender gauge assembly.

NOTICE:

- **Do not damage the fuel pump filter.**
 - **Be careful that the arm of the sender gauge should not bent.**
- (c) Remove the gasket from the fuel section plate.

**7. REMOVE LEAD WIRE FROM FUEL PUMP****8. REMOVE FUEL PUMP FROM FUEL PUMP BRACKET**

- (a) Pull out the lower side of the fuel pump from the pump bracket.
- (b) Disconnect the fuel hose from the fuel pump, and remove the fuel pump.
- (c) Remove the rubber cushion from the fuel pump.

**9. REMOVE FUEL PUMP FILTER FROM FUEL PUMP**

- (a) Using a small screwdriver, remove the clip.
- (b) Pull out the pump filter.