


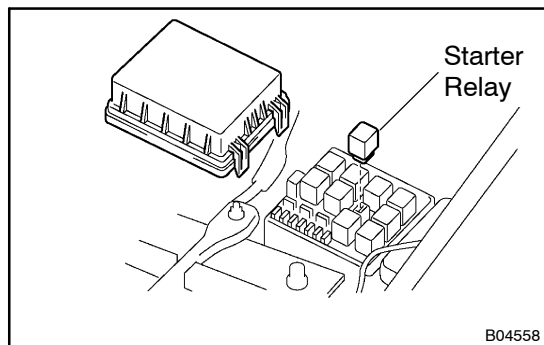


STARTER RELAY INSPECTION

STOAD-02

1. REMOVE STARTER RELAY (Marking: "ST")

Remove the relay box cover and starter relay.

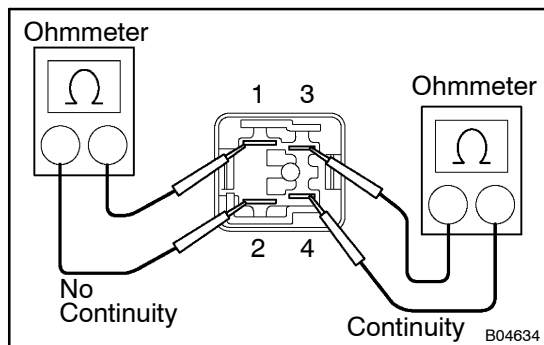


2. INSPECT RELAY CONTINUITY

- (a) Using an ohmmeter, check that there is continuity between terminals 3 and 4.

If there is no continuity, replace the relay.

- (b) Check that there is no continuity between terminals 1 and 2.

If there is continuity, replace the relay.

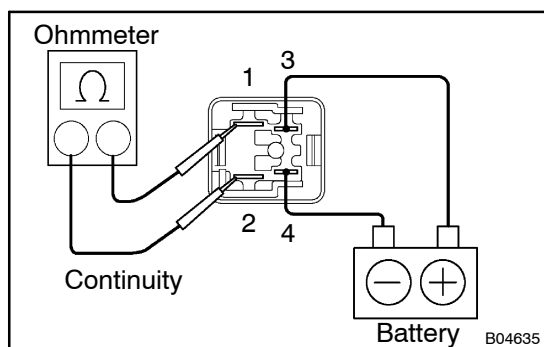

3. INSPECT RELAY OPERATION

- (a) Apply battery voltage across terminals 3 and 4.

- (b) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

4. REINSTALL STARTER RELAY