


E ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[LHD : 1HZ]

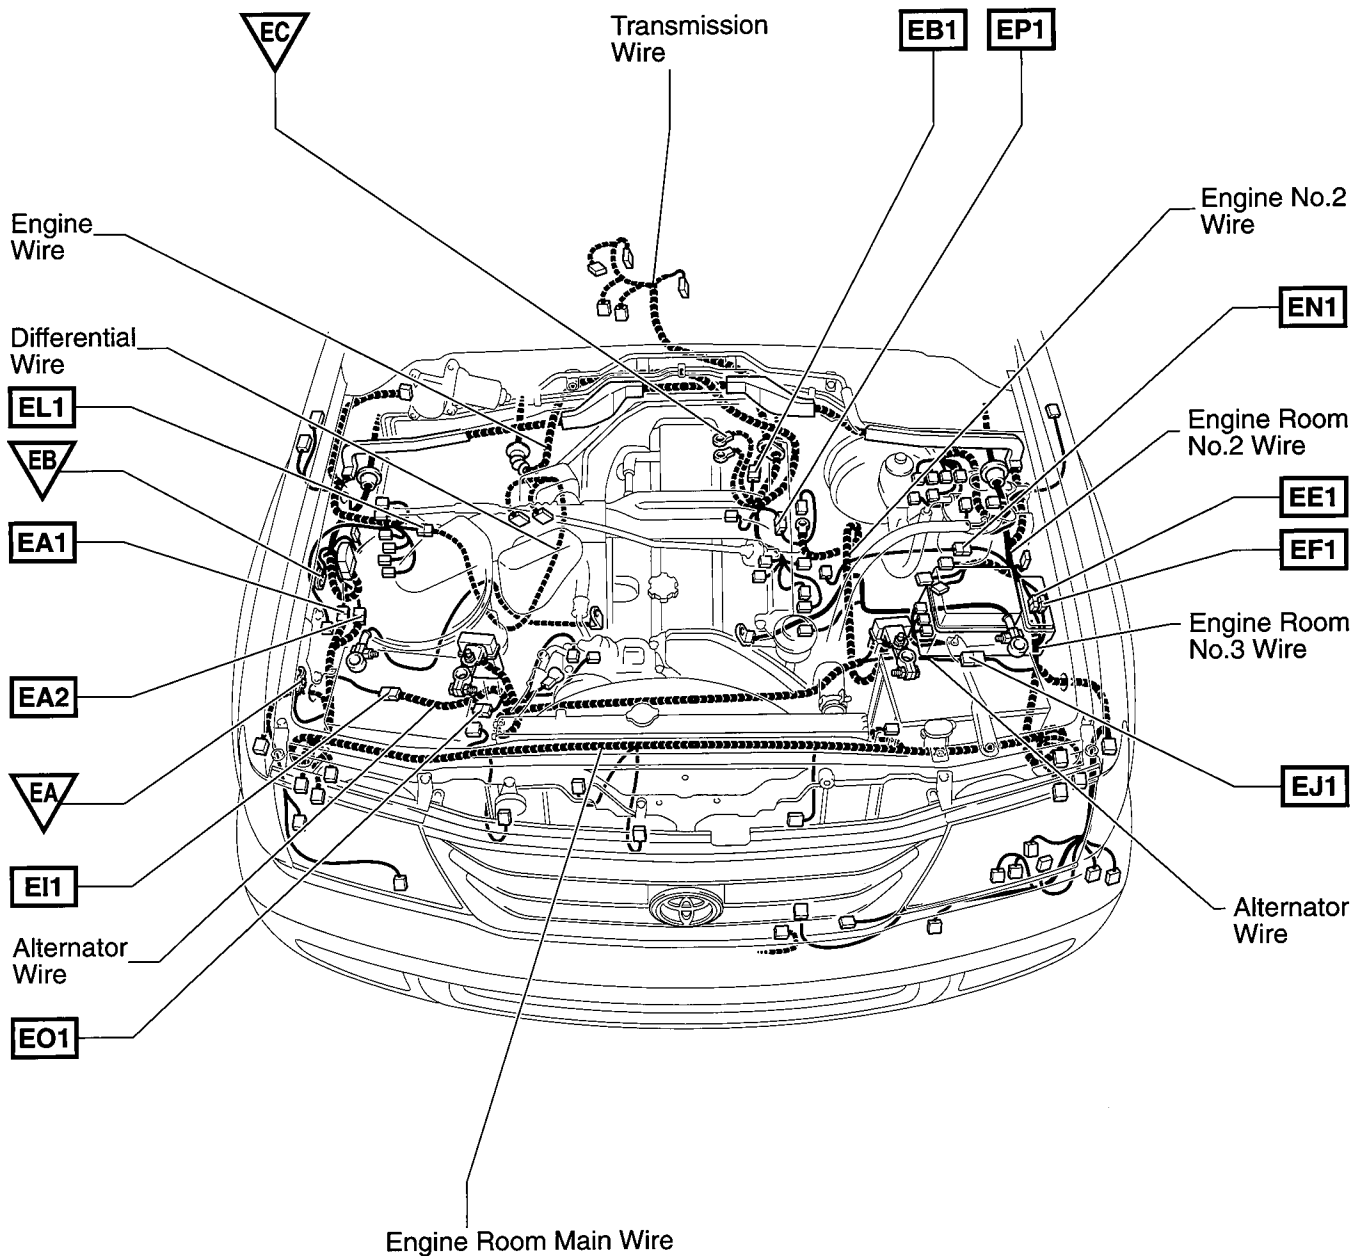

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right)
EA2	
EB1	Engine Wire and Transmission Wire (On the Transmission)
EE1	Engine Room No.2 Wire and Engine Room No.3 Wire (Under the Engine Room J/B)
EF1	Engine Room No.2 Wire and Engine Room Main Wire (Under the Engine Room J/B)
EI1	Engine Room Main Wire and Alternator Wire (Engine Compartment Right)
EJ1	Engine Room Main Wire and Alternator Wire (Near the Battery)
EL1	Engine Room No.2 Wire and Differential Wire (Engine Compartment Right)
EN1	Engine Room No.2 Wire and Engine No.2 Wire (Near the Engine Room J/B)
EO1	Engine Room No.3 Wire and Alternator Wire (Near the Engine Battery)
EP1	Engine Wire and Engine Room No.2 Wire (On the Transmission)