



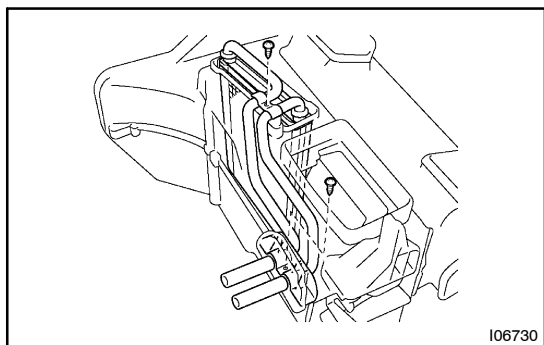

DISASSEMBLY


1. LHD Models: REMOVE HEATER RADIATOR

- (a) Pry out the packing.
- (b) Remove the screw and bracket.
- (c) Remove the screw and clamp.
- (d) Pull out the heater radiator.

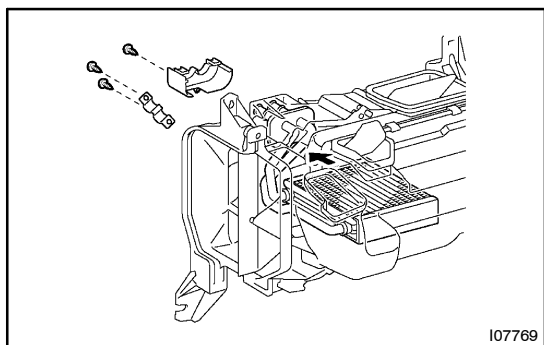


2. RHD Models: REMOVE HEATER RADIATOR

- (a) Remove the screw and cover.
- (b) Remove the 2 screws and clamp.
- (c) Pull out the heater radiator.

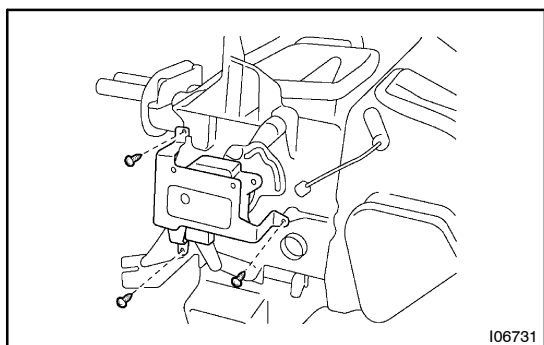


3. REMOVE AIR OUTLET SERVOMOTOR

Remove the 3 screws and servomotor.

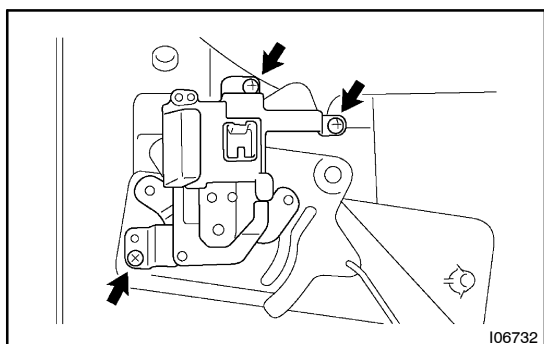


4. LHD Models: REMOVE AIR MIX SERVOMOTOR

- (a) Disconnect the connector.
- (b) Remove the 3 screws and servomotor.
- (c) Release the claw and remove the wire harness.

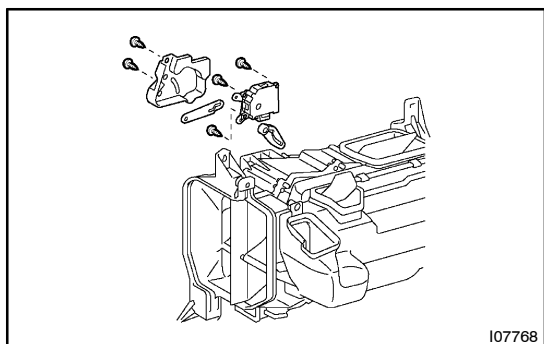


5. RHD Models: REMOVE AIR MIX SERVOMOTOR

- (a) Remove the 2 screws and link cover.
- (b) Remove the link levers.
- (c) Remove the 3 screws and servomotor.

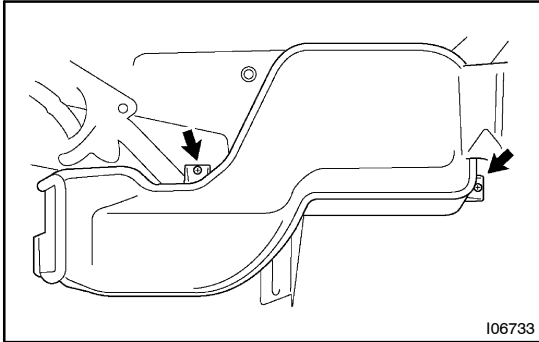**6. REMOVE AIR DUCT (Foot Duct)**

Remove the 2 screws and duct.

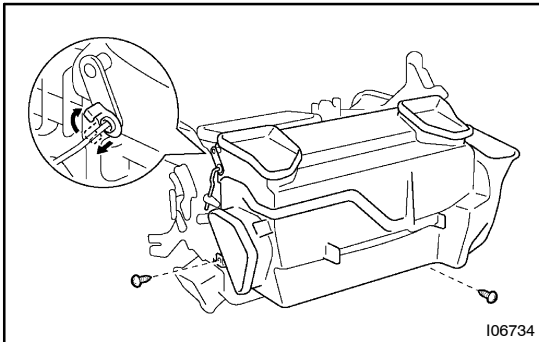**7. REMOVE AIR DUCT (Vent Duct)**

- (a) Disconnect the mode damper control link.
- (b) Remove the 2 screws and duct.