


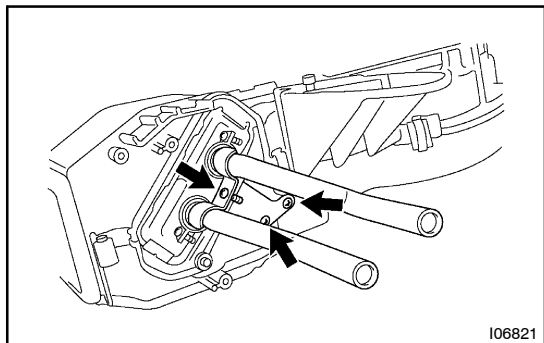


I06821

DISASSEMBLY

1. REMOVE HEATER RADIATOR

- (a) Remove the 3 screws and 2 clamps
- (b) Pull out the heater radiator.

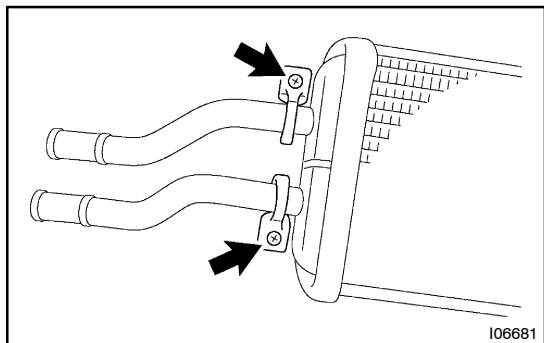


I06681

- (c) Remove the 2 screws, 2 clamps and heater radiator pipes.
- (d) Remove the 2 O-rings.

HINT:

At the time of reassembly, please refer to the following item.
Do not reuse the O-rings

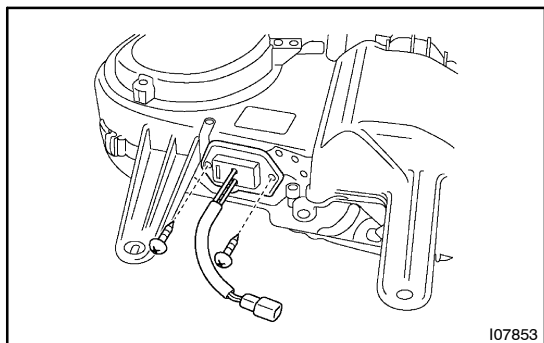


I07853

2. Manual A/C:

REMOVE BLOWER RESISTOR

Remove the 2 screws and blower resistor.

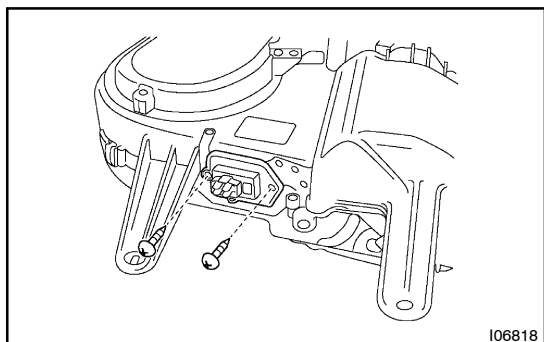


I06818

3. Auto A/C:

REMOVE POWER TRANSISTOR

Remove the 2 screws and power transistor.

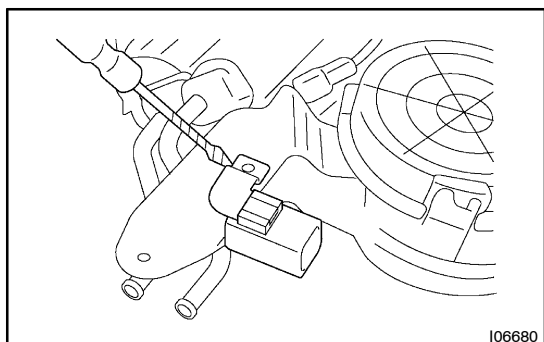

I06680


4. Manual A/C:

REMOVE REAR HEATER HI RELAY


Using a screw driver, release the claw and remove the relay.

HINT:


Tape the screwdriver tip before use.

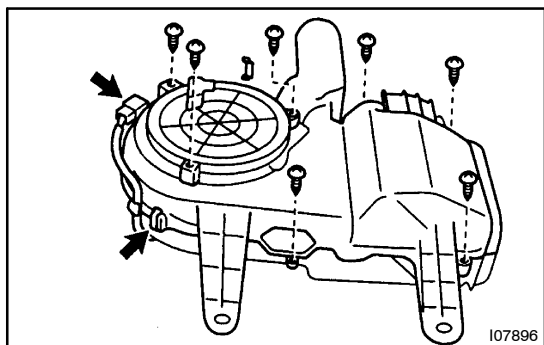**5. REMOVE BLOWER MOTOR**

- (a) Remove the 3 screws and cover.
- (b) Remove the 4 screws, 3 holding springs and separate the heater cases.

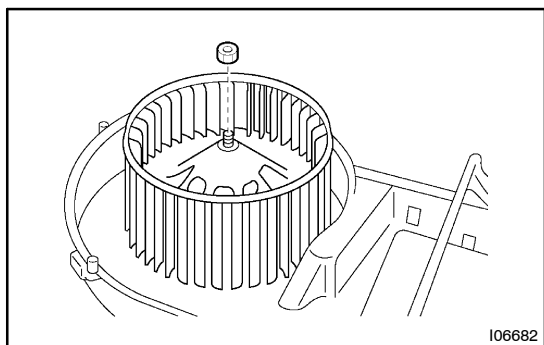

- (c) Remove the nut and fan.

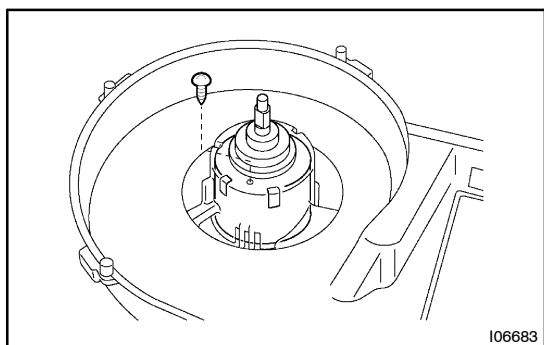

- (d) Remove the screws and blower motor.