


INSPECTION

1. INSPECT HEATER RADIATOR

Check the fins are clogged, clean them with compressed air.
If the fins are clogged, clean them with compressed air.

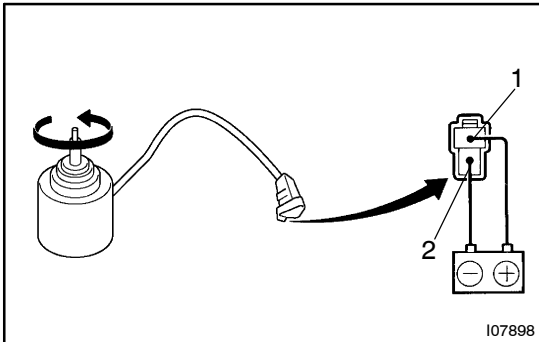

2. INSPECT BLOWER MOTOR OPERATION

Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, then check that the motor rotates smoothly.

If operation is not as specified, replace the blower motor.

3. Auto A/C:

INSPECT REAR HEATER AIR MIX SERVOMOTOR CIRCUIT

(See page DI-901)

4. Auto A/C:

INSPECT AIR MIX DAMPER POSITION SENSOR CIRCUIT

(See page DI-894)