


REMOVAL

1. REMOVE FRONT COOLING UNIT
(See page AC-38)



2. REMOVE BLOWER UNIT
 - (a) Disconnect the connectors.
 - (b) Remove the bolt, 2 nuts and blower unit.

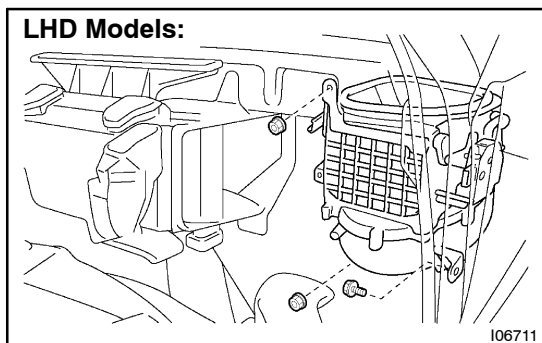