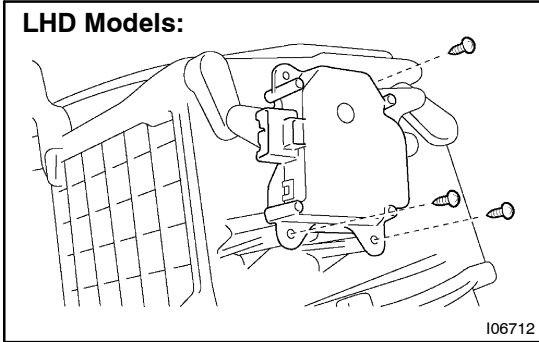
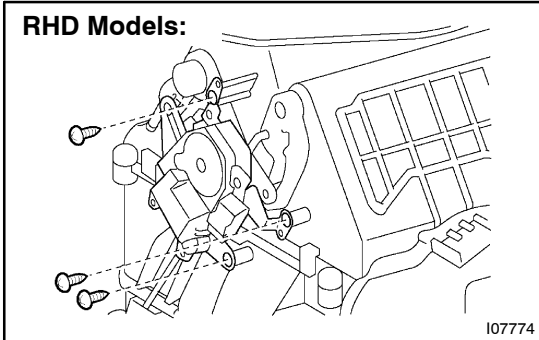
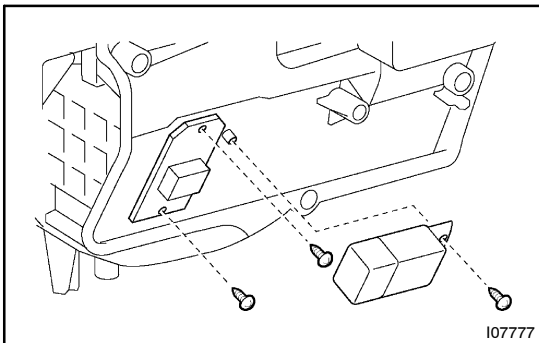


LHD Models:**DISASSEMBLY****1. REMOVE AIR INLET SERVOMOTOR**


Remove the 3 screws and servomotor.


RHD Models:**2. Manual A/C RHD Models:
REMOVE BLOWER RESISTOR**

- (a) Remove the screw and blower HI relay.
- (b) Remove the 2 screws and blower resistor.

**3. Manual A/C LHD Models:
REMOVE BLOWER RESISTOR**


Remove the 2 screws and blower resistor.

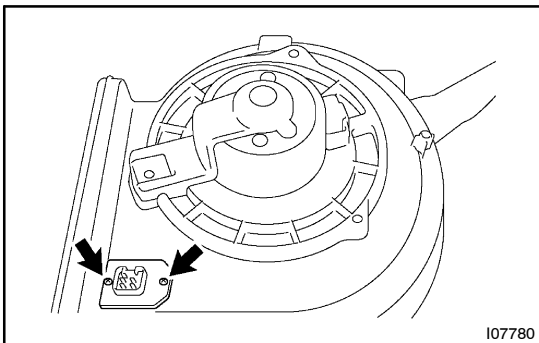

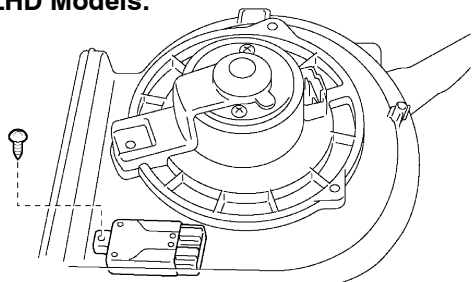
LHD Models:

I06771

- 4. Auto A/C Models:**
REMOVE BLOWER MOTOR CONTROL RELAY
Remove the screw and blower motor control relay.

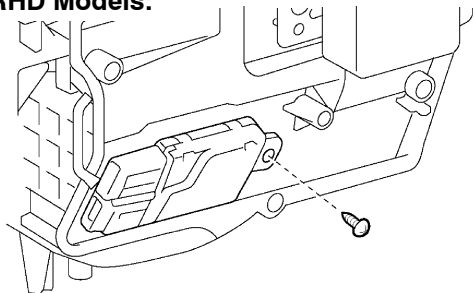
RHD Models:

I07775

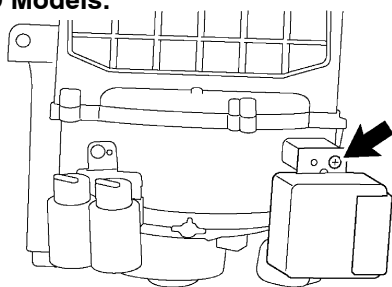LHD Models:


I07771

- 5. w/ Viscous Heater:**
REMOVE HEATER AMPLIFIER
Remove the screw and amplifier.

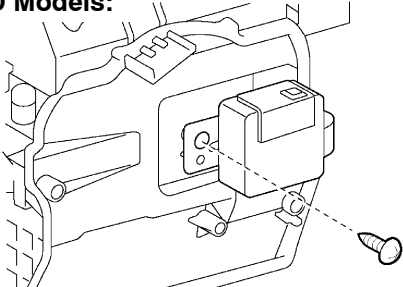
RHD Models:

I07776

- 6. Manual A/C LHD Models:**
REMOVE RELAY ASSEMBLY
Remove the 2 screws and relay.

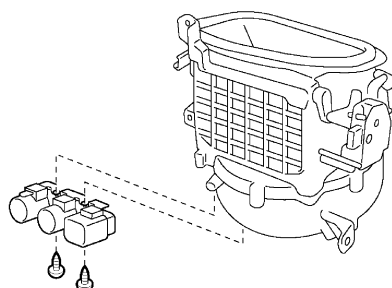


I07770

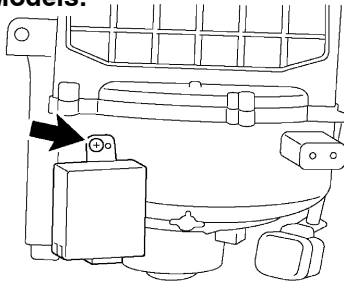LHD Models:

I07772

7. REMOVE BLOWER SPEED CONTROL RELAY


Remove the screw and relay.

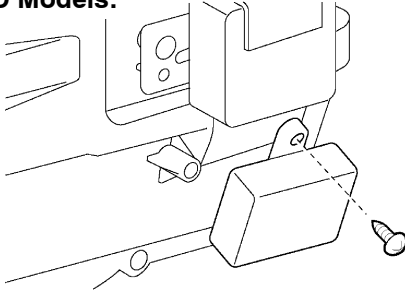RHD Models:

I07778

**8. LHD Models:
REMOVE BLOWER MOTOR**


Remove the 3 screws and blower motor.

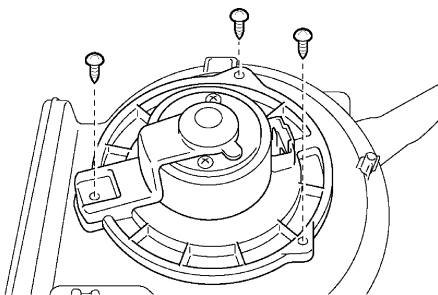

I06713


**9. RHD Models:
REMOVE BLOWER MOTOR**

(a) Remove the 3 screws and cover.

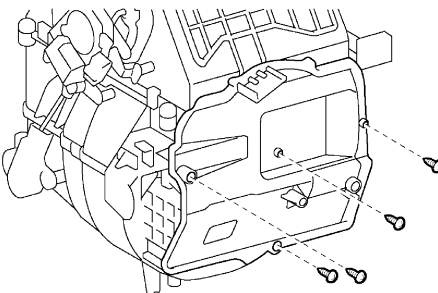

I07779

(b) Remove the 3 screws and blower motor.

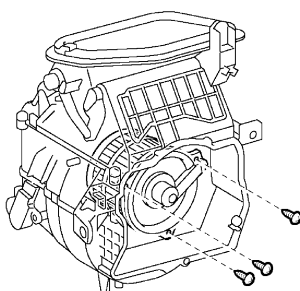

I07773