


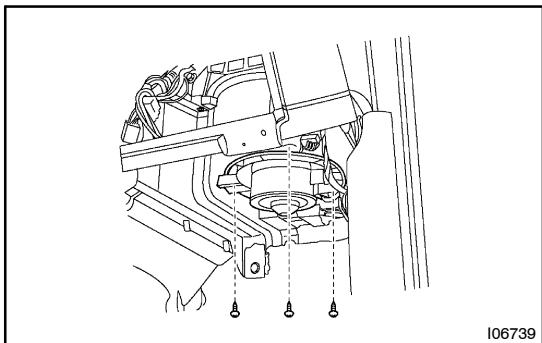

BLOWER MOTOR (for Front A/C) INSPECTION

AC1TG-01

1. LHD Models:


REMOVE BLOWER MOTOR

- (a) Disconnect the connector.
- (b) Remove the 3 screws an blower motor.


2. RHD Models:

REMOVE BLOWER MOTOR




- (a) Remove these parts:
 - (1) Glove compartment door
 - (2) Engine (and ECT) ECU
 - (3) Manual A/C:
Blower speed control relay
 - (4) Manual A/C:
Blower Hi-relay
 - (5) Auto A/C:
Blower motor control relay
 - (6) w/ Viscous Heater:
Heater amplifier

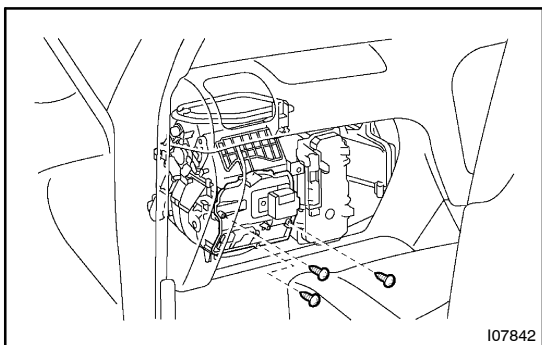

- (b) Disconnect the wire harness clamps.
- (c) Remove the 3 screws and cover.

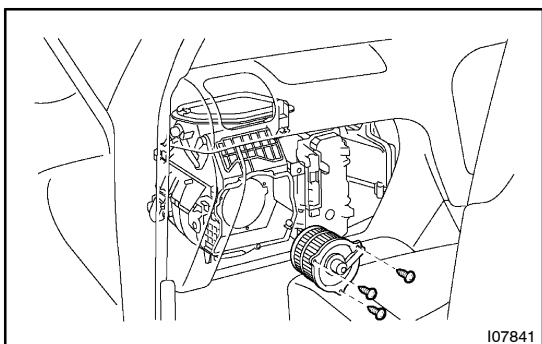

- (d) Disconnect the connector.
- (e) Remove the 3 screws and blower motor.

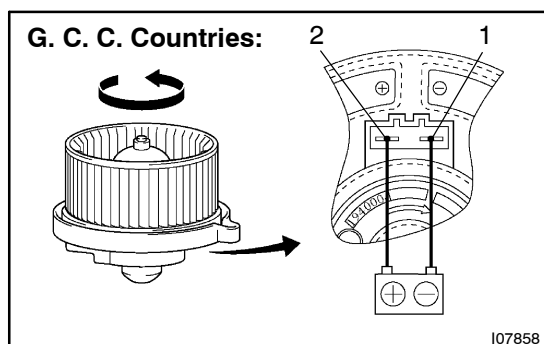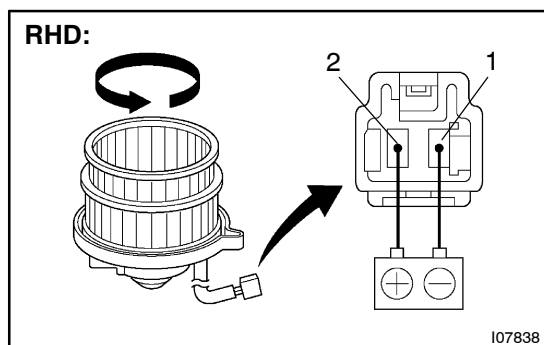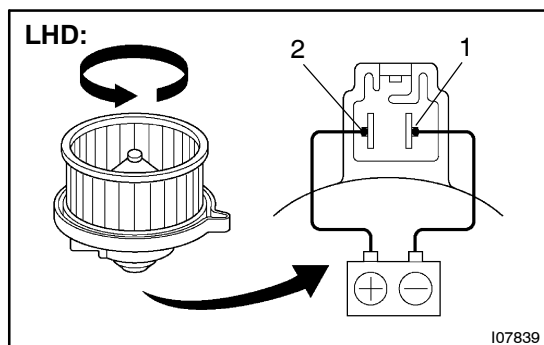

3. Manual A/C:

INSPECT BLOWER MOTOR OPERATION

Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 1, then check that the motor operations smoothly.

If operation is not as specified, replace the blower motor.