


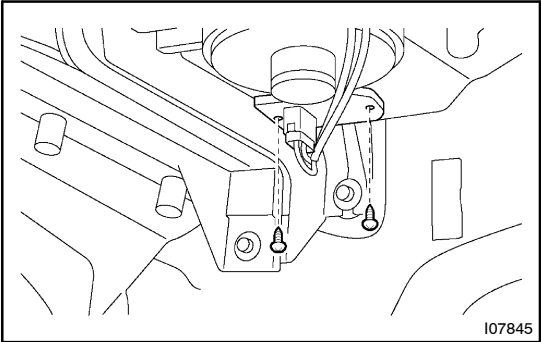


BLOWER RESISTOR (for Front A/C)


INSPECTION

AC1TI-01


- 1. LHD Models:**
REMOVE BLOWER RESISTOR
- (a) Disconnect the connector.
 - (b) Remove the 2 screws and blower resistor.

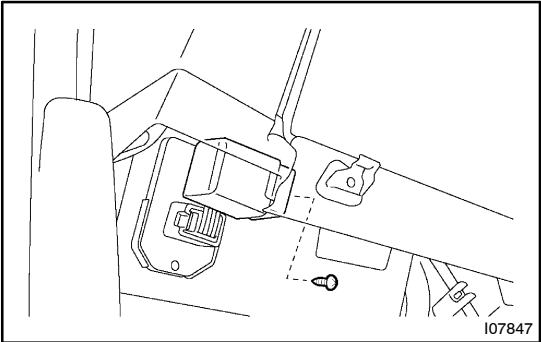

- 2. RHD Models:**
REMOVE BLOWER RESISTOR
- (a) Remove the blower Hi relay.
 - (1) Disconnect the connector.
 - (2) Remove the screw and relay.

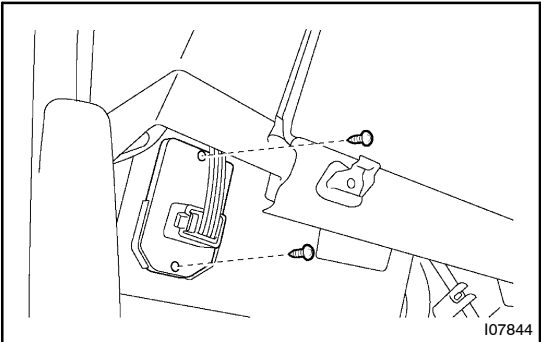

- (b) Remove the blower resistor.
 - (1) Disconnect the connector.
 - (2) Remove the 2 screws and blower resistor.

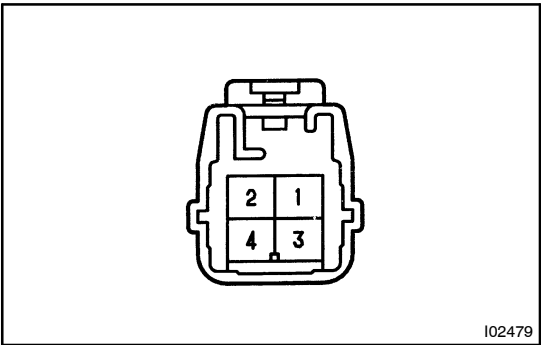

3. INSPECT BLOWER RESISTOR RESISTANCE

Tester connection	Condition	Specified condition
1 – 3	Constant	Approx. 0.24 Ω
2 – 3	Constant	Approx. 0.76 Ω
2 – 4	Constant	Approx. 1.88 Ω

If resistance is not as specified, replace the blower resistor.