


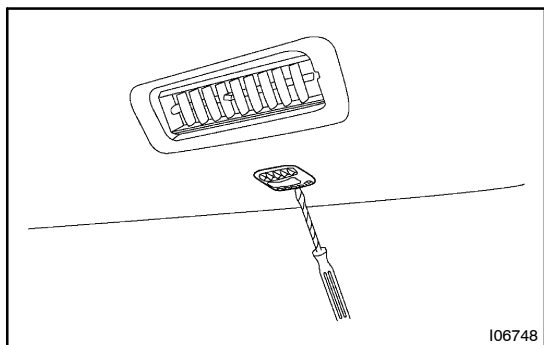

ROOM TEMPERATURE SENSOR (for Rear A/C) INSPECTION


AC1TS-01

1. REMOVE ROOM TEMPERATURE SENSOR

Using a screwdriver, pull out the sensor, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

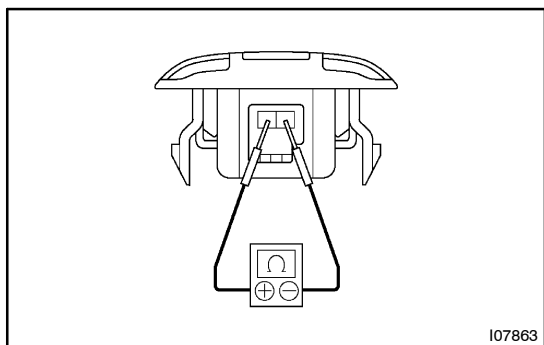

2. INSPECT ROOM TEMPERATURE SENSOR

Measure resistance between terminals

Standard resistance: $1.7 \pm 0.85 \text{ k}\Omega$ at 25°C (77°F)

If resistance is not as specified, replace the sensor.

3. INSTALL ROOM TEMPERATURE SENSOR

- (a) Connect the connector.
- (b) Insert the sensor to the roof headlining.