



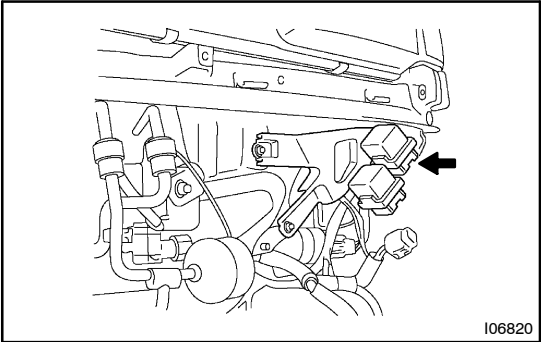

VISCOUS HEATER RELAY (1HD-FTE) INSPECTION

AC1U8-01

1. **REMOVE VISCOUS RELAY**
 - (a) Remove the front bumper cover
(See page BO-4)
 - (b) Disconnect the connector.
 - (c) Release the claw and remove the relay.

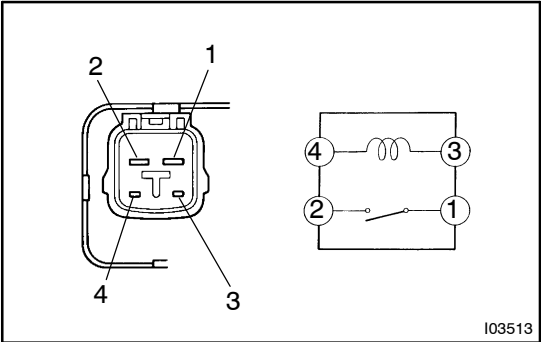

2. INSPECT VISCOUS HEATER RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	3 – 4	Continuity
Apply B+ between terminals 3 and 4.	1 – 2	Continuity

If continuity is not as specified, replace the relay.

3. INSTALL VISCOUS RELAY