


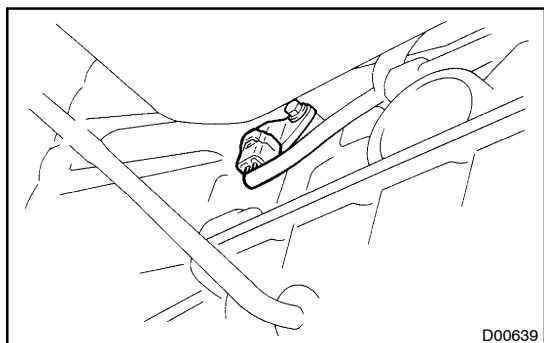

O/D DIRECT CLUTCH SPEED SENSOR

AT08U-01

ON-VEHICLE REPAIR

1. **DISCONNECT O/D DIRECT CLUTCH SPEED SENSOR CONNECTOR**
2. **REMOVE O/D DIRECT CLUTCH SPEED SENSOR**
 - (a) Remove the bolt and O/D direct clutch speed sensor.
 - (b) Remove the O-ring.
3. **INSTALL O/D DIRECT CLUTCH SPEED SENSOR**
 - (a) Coat a new O-ring with ATF and install it to the O/D direct clutch speed sensor.
 - (b) Install the O/D direct clutch speed sensor to the transmission case and torque the bolt.
Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)
4. **CONNECT O/D DIRECT CLUTCH SPEED SENSOR CONNECTOR**