



PARKING LOCK PAWL ON-VEHICLE REPAIR

1. REMOVE VALVE BODY (See page AT-10)

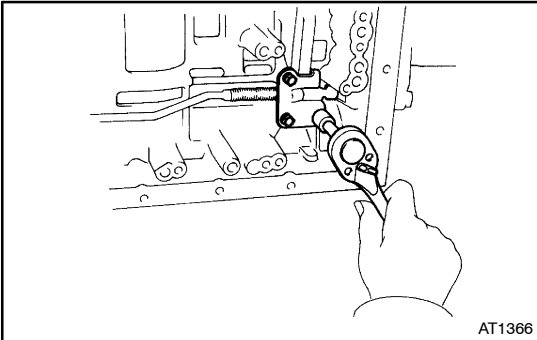

AT1366

2. REMOVE PARKING LOCK PAWL BRACKET

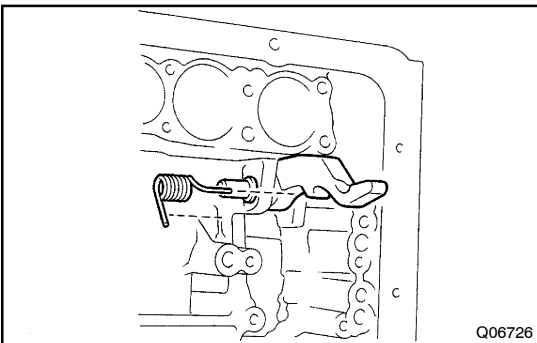


Q06726

3. REMOVE SPRING FROM PARKING LOCK PAWL SHAFT

4. REMOVE PARKING LOCK PAWL AND SHAFT

5. INSTALL PARKING LOCK PAWL AND SHAFT

6. INSTALL SPRING TO PARKING LOCK PAWL SHAFT

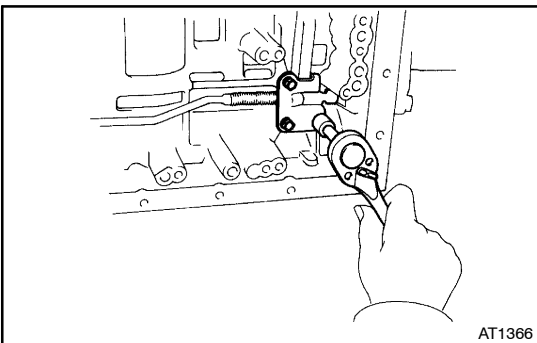

AT1366

7. INSTALL PARKING LOCK PAWL BRACKET

HINT:

- Push the lock rod fully forward.
- Check that the parking lock pawl operates smoothly.

Torque: 7.4 N·m (75 kgf·cm, 65 in·lbf)

8. INSTALL VALVE BODY (See page AT-10)