


REMOVAL


1. REMOVE TRANSFER LEVER KNOB
2. REMOVE UPPER CONSOL PANEL
(See [page BO-127](#))
3. RHD Only:
REMOVE REAR CONSOLE BODY COVER
(See [page BO-127](#))
4. RHD Only:
REMOVE REAR CONSOLE BOX
(See [page BO-127](#))

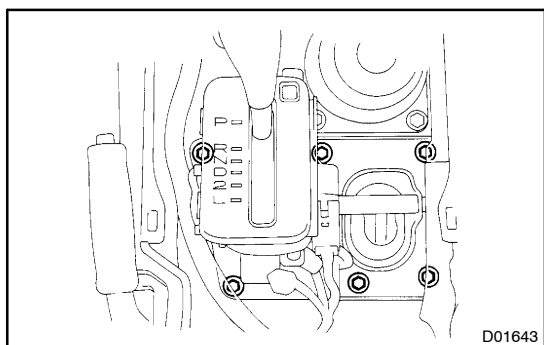

5. REMOVE SHIFT LEVER ASSEMBLY

- (a) Disconnect the connector.
- (b) Remove the 7 bolts.

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

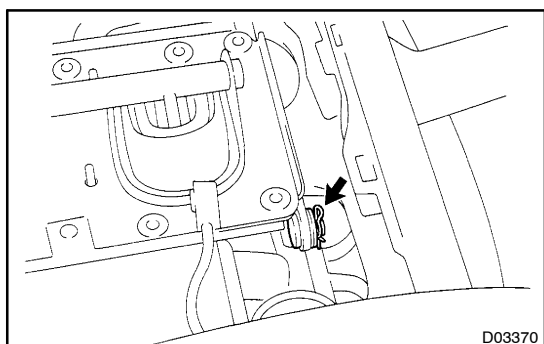

- (c) Lift the shift lever assembly up and remove the clip and washer with a needle-nose plier.
- (d) Disconnect the shift lever link and remove the 2 washers.
- (e) Remove the shift lever assembly.