



REMOVAL

1. REMOVE TRANSFER LEVER KNOB
2. REMOVE UPPER CONSOLE PANEL
(See page BO-127)
3. RHD Only:
REMOVE REAR CONSOLE BODY COVER
(See page BO-127)
4. RHD Only:
REMOVE REAR CONSOLE BOX (See page BO-127)

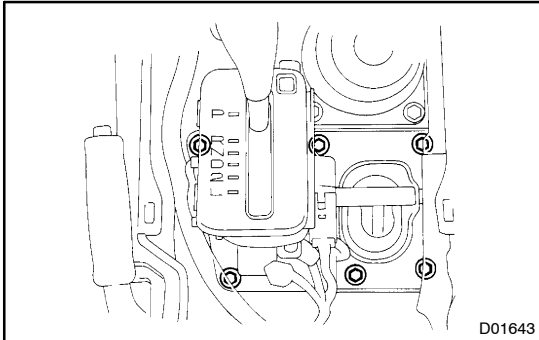

5. REMOVE SHIFT LEVER ASSEMBLY
 - (a) Disconnect the connector.
 - (b) Remove the 6 bolts.
Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

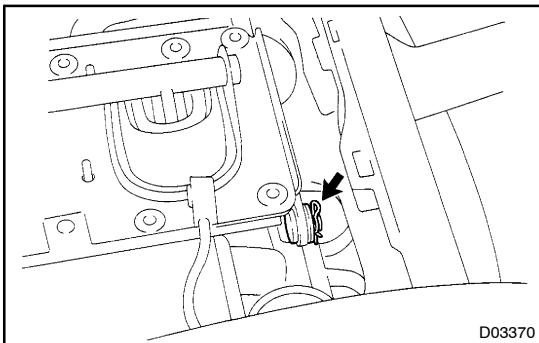

- (c) Lift the shift lever assembly up and remove the clip and washer with a needle-nose plier.
- (d) Disconnect the shift lever link and remove the 2 washers.
- (e) Remove the shift lever assembly.