



LHD

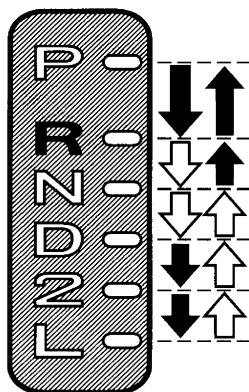

RHD

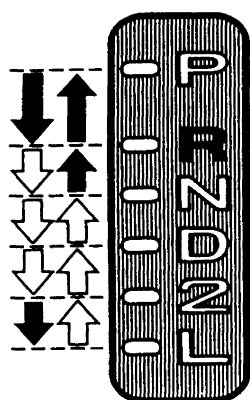

Shift while holding the lock release button in.



Shift normally

D03331
D00774
D03331

D03934

INSTALLATION

Installation is in the reverse order of removal
(See page AT-38).

HINT:

After installation, inspect shift lever operation.

- When shifting it to each position, make sure that the shifting lever moves smoothly, can be moderately operated and the position indicator displays correctly.

Positions which can be operated without pressing the shift lever knob button

LHD:

R → N → D, L → 2 → D → N

RHD:

R → N → D → 2, L → 2 → D - N

Positions which can be operated only with pressing the shift lever knob button

LHD:

P → R, D → 2 → L, N → R → P

RHD:

2 → L, N → R → P

- When starting the engine, make sure that the vehicle moves forward when shifting from N to D range, and moves rearward when shifting to R range.