


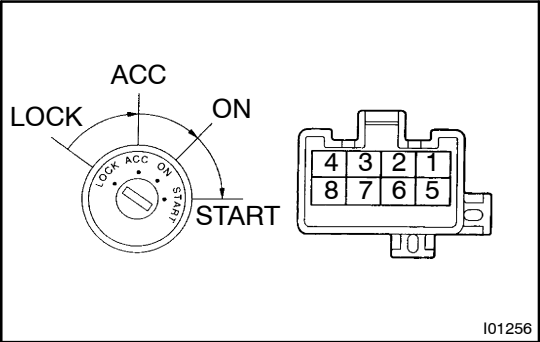


INSPECTION

1. INSPECT IGNITION SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
LOCK	-	No continuity
ACC	2 - 3	Continuity
ON	2 - 3 - 4 6 - 7	Continuity
START	1 - 2 - 4 6 - 7 - 8	Continuity


If continuity is not as specified, replace the switch.

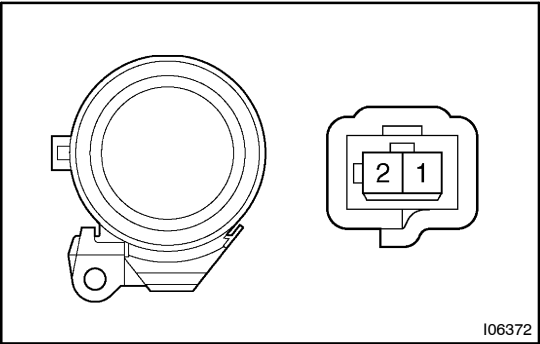

2. INSPECT IGNITION KEY ILLUMINATION OPERATION

Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, and check that the indicator light lights up.

If operation is not as specified, replace the switch.

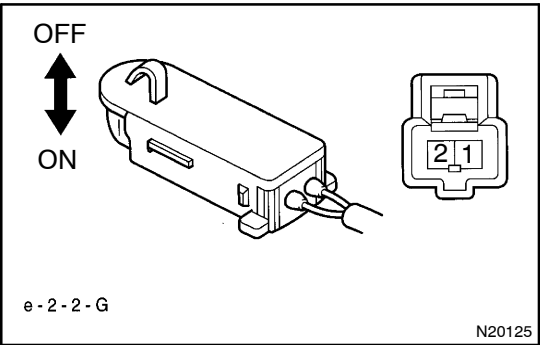

3. INSPECT KEY UNLOCK WARNING SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF (Key removed)	-	No continuity
ON (Key set)	1 - 2	Continuity

If continuity is not as specified, replace the switch.

Connect the switch connector and inspect the connector on wire harness side from the back side, as shown.