


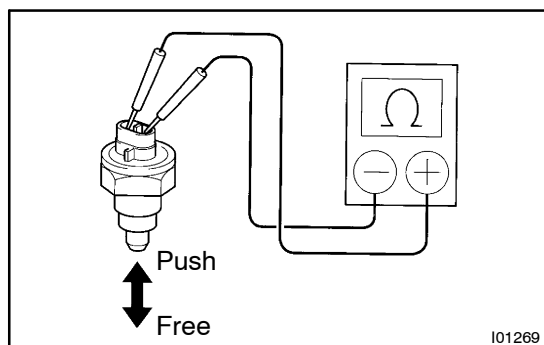

INSPECTION

1. INSPECT BACK-UP LIGHT SWITCH CONTINUITY

Switch position	Specified condition
Push	Continuity
Free	No continuity

If continuity is not as specified, replace the switch.

2. INSPECT NEUTRAL START SWITCH CONTINUITY (See page DI-51, DI-151)