

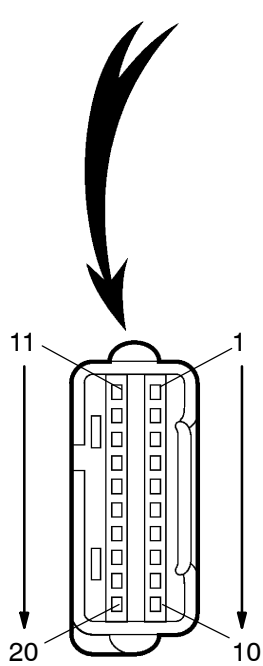
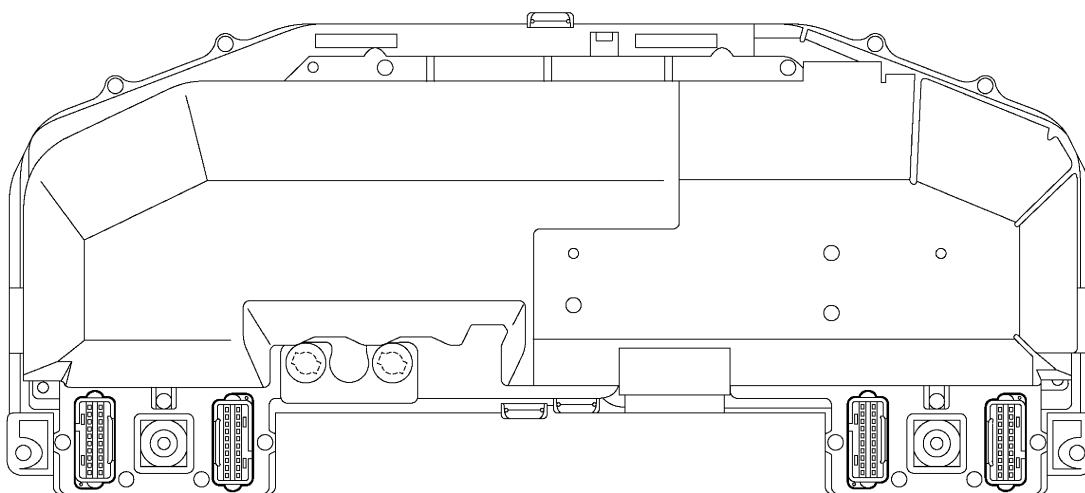


CIRCUIT


Connector "D"

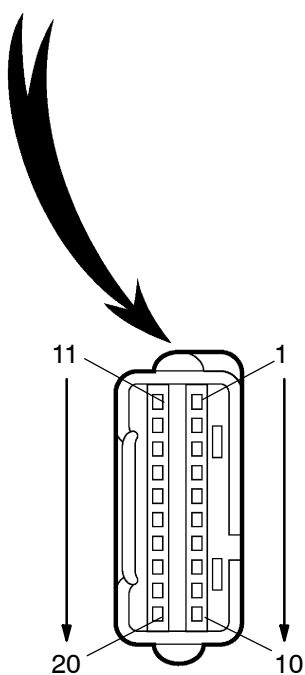


Connector "C"

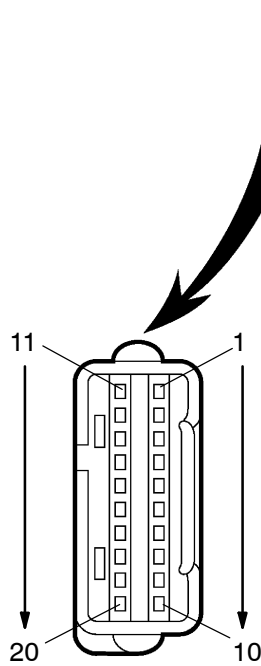


Connector "B"

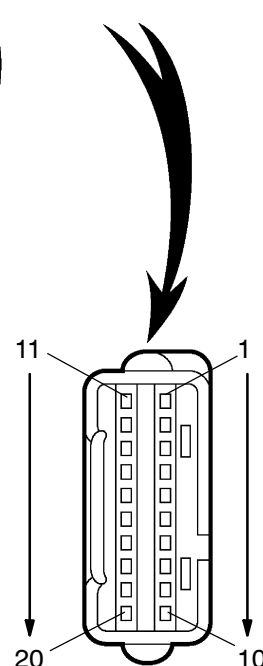

Connector "A"

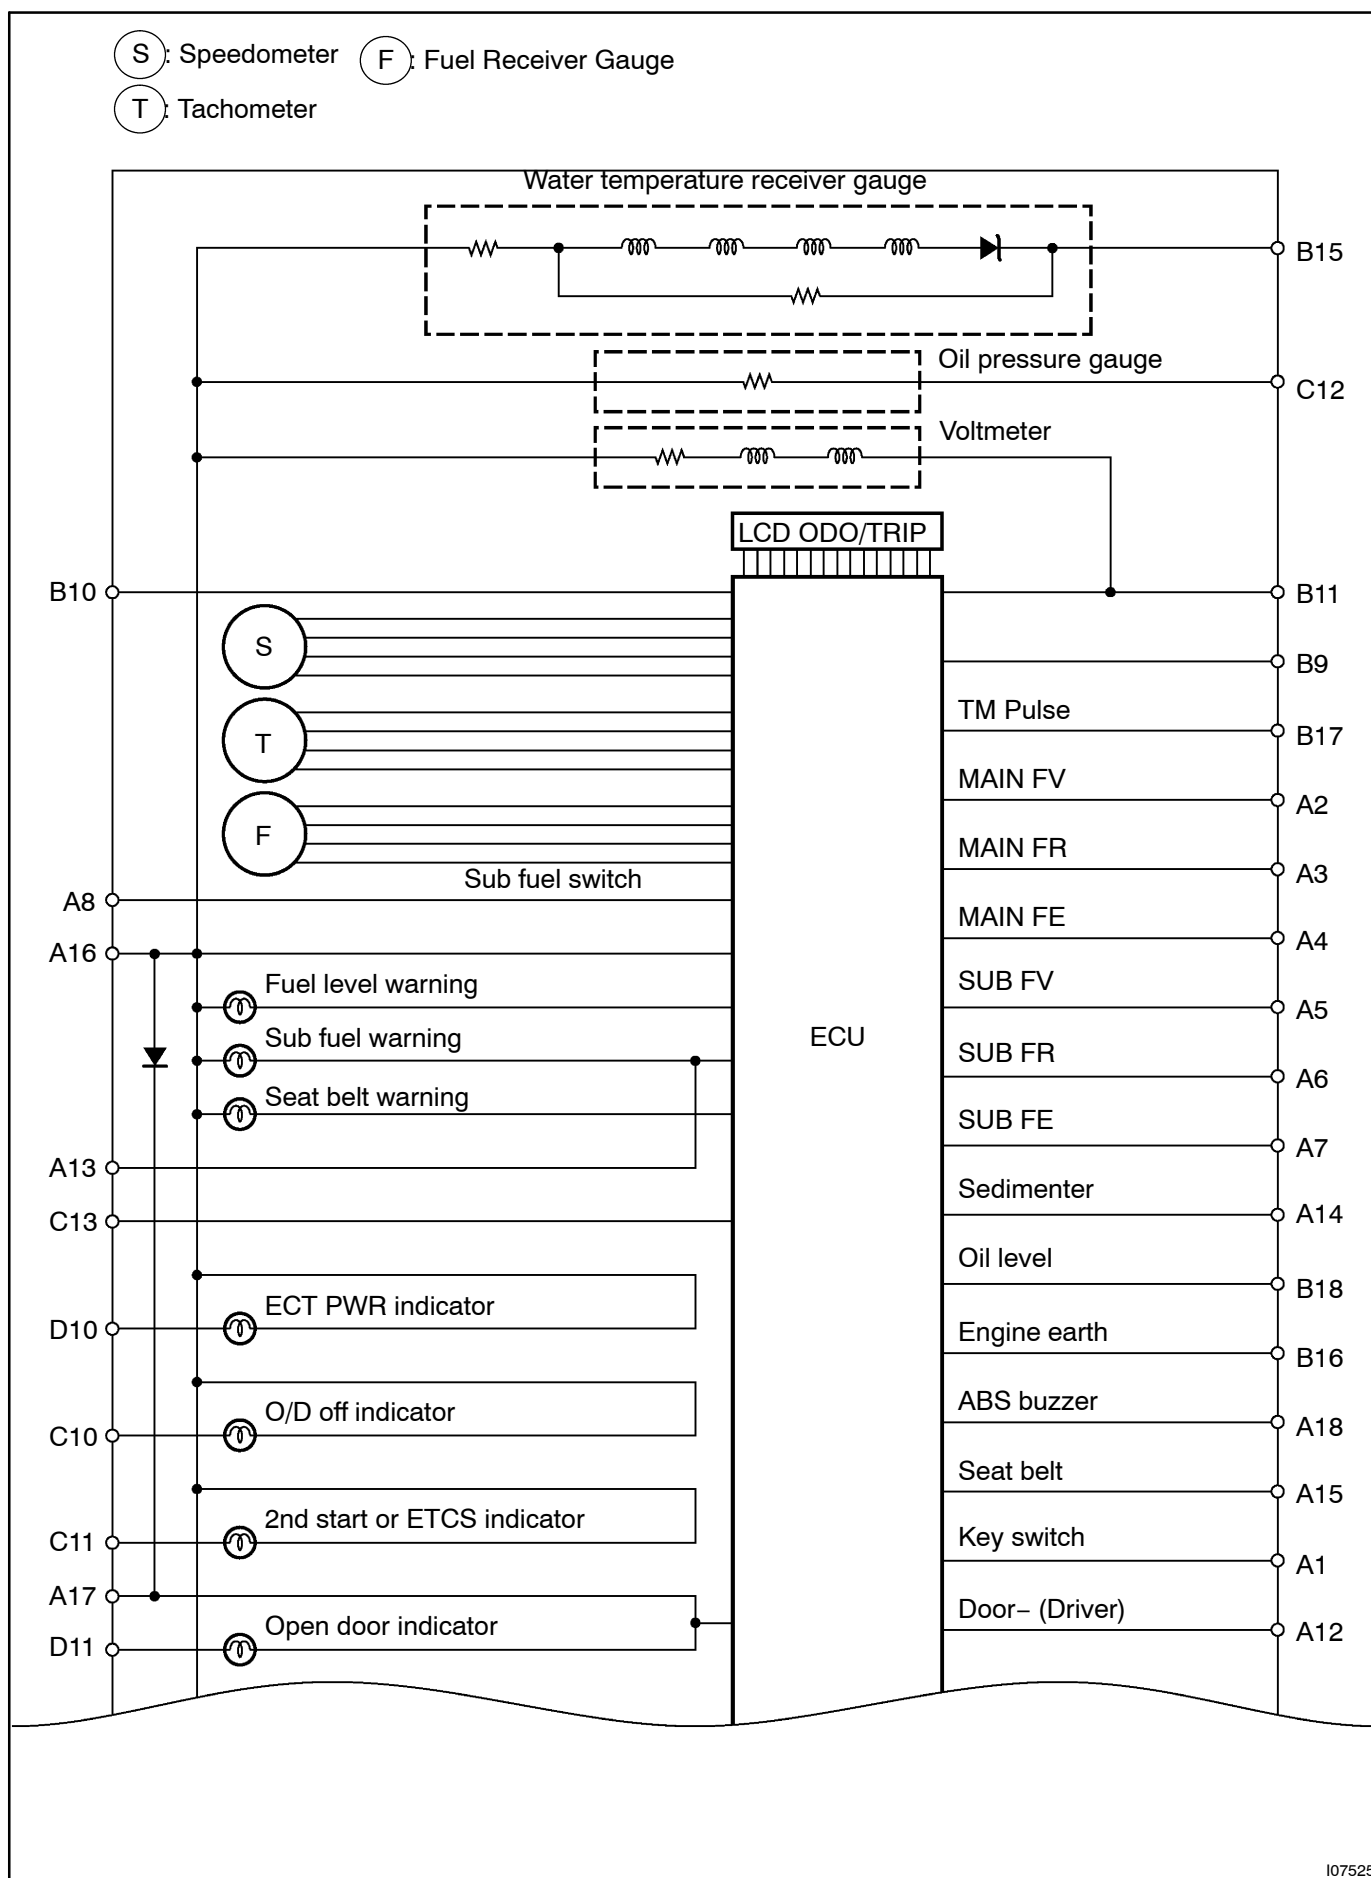

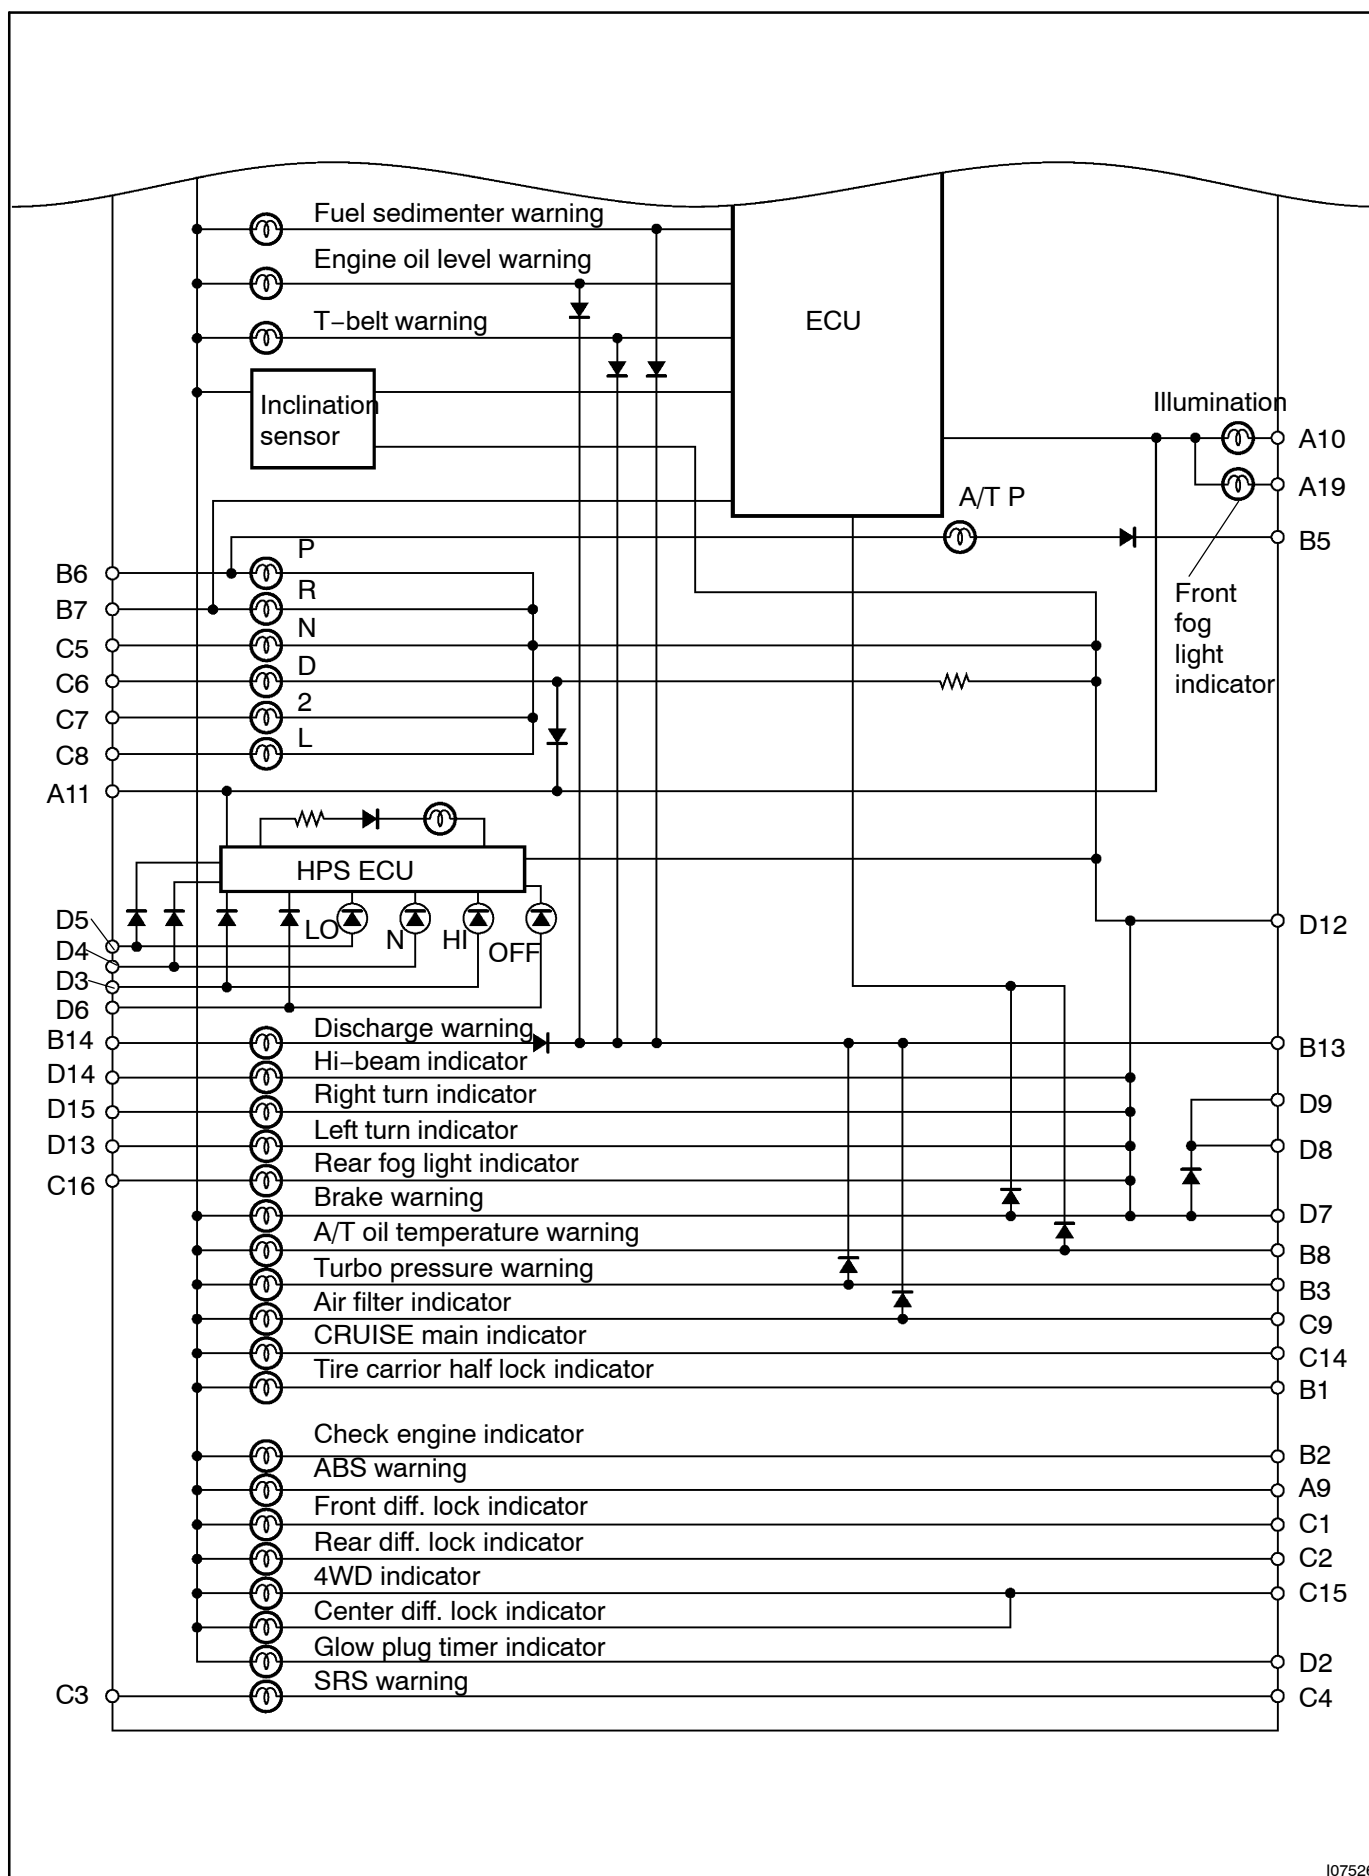

No.		Wiring connector side	No.		Wiring connector side
A	1	Key unlock warning switch	C	1	Front diff. lock detection switch
	2	Fuel main sender gauge		2	Rear diff. lock detection switch
	3	Fuel main sender gauge		3	ECU-B fuse
	4	Fuel main sender gauge		4	Center airbag sensor assembly
	5	Fuel sub sender gauge		5	Neutral start switch (N range)
	6	Fuel sub sender gauge		6	Neutral start switch (2 range)
	7	Fuel sub sender gauge		7	Neutral start switch (D range)
	8	Fuel sub sender gauge		8	Neutral start switch (L range)
	9	ABS ECU		9	Air filter warning switch
	10	Light control rheostat		10	O/D main switch
	11	TAIL fuse		11	Engine and ECT ECU
	12	Driver door courtesy switch		12	Low oil pressure warning switch
	13	Fuel sub sender gauge		13	Starter relay
	14	Fuel sedimenter warning switch		14	Engine and ECT ECU
	15	Seat belt buckle switch		15	Transfer 4WD position switch
	16	GAUGE fuse		16	Center diff. lock indicator switch
	17	DOVE fuse		18	Rear fog light switch
	18	ABS ECU			Window washer level warning switch
	19	Front fog light switch			
B	1	Tire half lock indicator switch	D	1	Engine and ECT ECU
	2	Engine and ECT ECU		2	Glow plug timer
	3	Turbo pressure gauge		3	Suspension control ECU
	4	MIRR fuse		4	Suspension control ECU
	5	Neutral start switch (P range)		5	Suspension control ECU
	6	Neutral start switch (P range)		6	Suspension control ECU
	7	Neutral start switch (R range)		7	Rear diff. lock detection switch
	8	Engine and ECT ECU		8	Parking brake switch
	9	Speed control unit		9	Body control ECU (M/T)
	10	Speed sensor		10	ECT pattern select switch
	11	Ground		11	Body control ECU
	12	Light control rheostat		12	Ground
	13	Alternator		13	Turn signal switch (Left)
	14	IGN fuse		14	Headlight dimmer switch
	15	Water temperature sender gauge		15	Turn signal switch (Right)
	16	Ground			
	17	Engine and ECT ECU			
	18	Engine oil level sensor			
	20	Inclination sensor			