


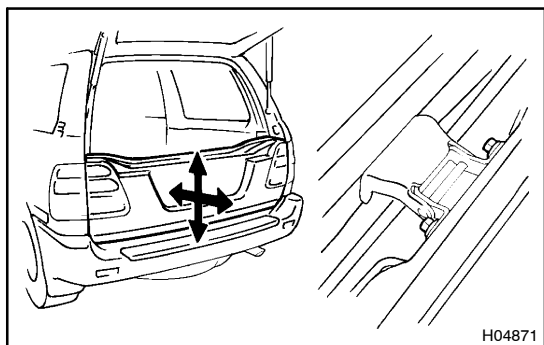


ADJUSTMENT

1. ADJUST DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS

Loosen the door side hinge bolts to adjust.


Torque: 18 N·m (184 kgf·cm, 13 ft·lbf)

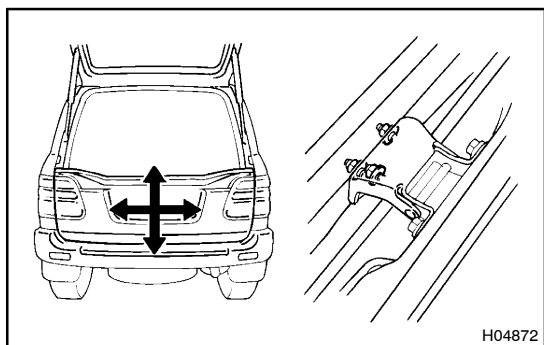

2. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

Loosen the body side hinge bolts and nut to adjust.

Torque: 18 N·m (184 kgf·cm, 13 ft·lbf)

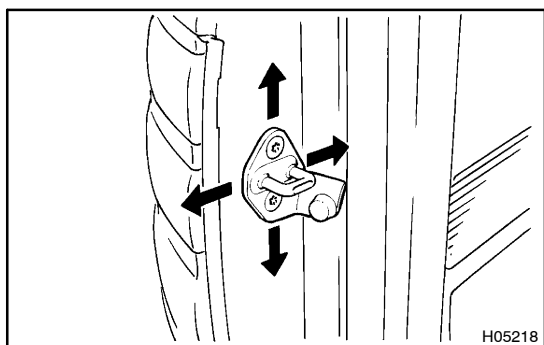

3. ADJUST DOOR LOCK STRIKER

- Check that the door fit and door linkages are adjusted correctly.
- Using a torx wrench, loosen the door lock striker mounting screws.

Torx wrench: T40 (Part No. 09042-00020 or locally manufactured tool)

Torque: 11 N·m (115 kgf·cm, 8 ft·lbf)

- Using a plastic hammer, tap the striker to adjust.