


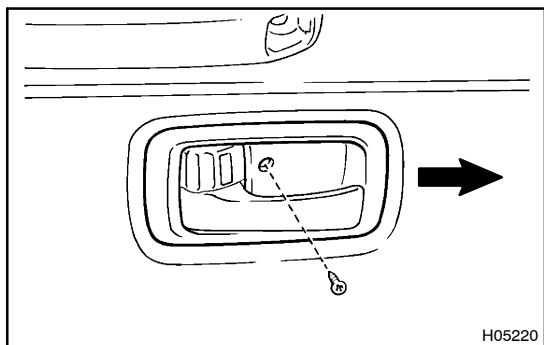

DISASSEMBLY

1. REMOVE DOOR INSIDE HANDLE

- (a) Remove the screw and slide the door inside handle as shown in the illustration.
- (b) Disconnect the links from inside handle, then remove the inside handle.


2. REMOVE ASSIST GRIP

- (a) Using a screwdriver, remove the assist grip cap.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 2 screws and assist grip.

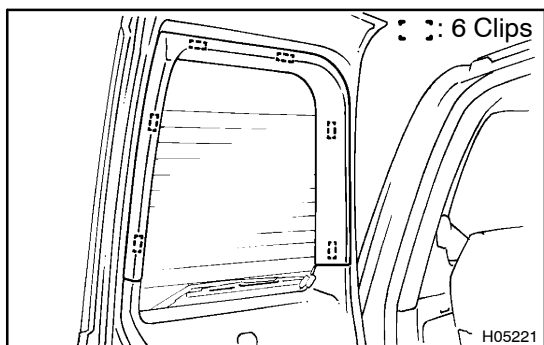


3. REMOVE BACK DOOR GARNISH

Using a screwdriver, remove the back door garnish.

HINT:

Tape the screwdriver tip before use.

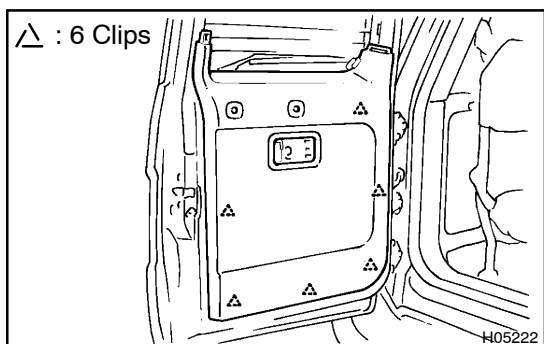

4. REMOVE BACK DOOR TRIM

- (a) Insert a screwdriver between the door and door trim to pry out.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the back door trim.

5. REMOVE SERVICE HOLE COVER

Remove the service hole cover.


HINT:

Do not tear the service hole cover.


HINT:

At the time of assembly, please refer to the following item.


Bring out the 2 links through the service hole cover.

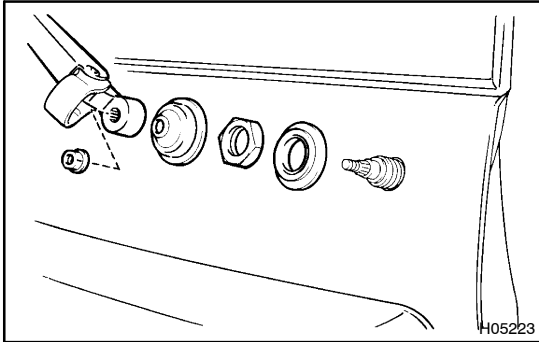**6. REMOVE REAR WIPER ARM**


- (a) Open the cover.
- (b) Remove the nut and rear wiper arm.
- (c) Remove the shaft cover, nut and washer.

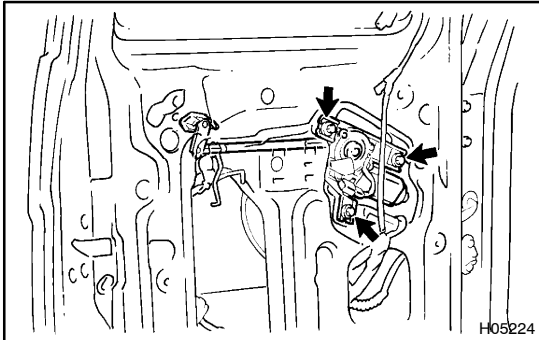**7. REMOVE REAR WIPER MOTOR AND LINK ASSEMBLY**

- (a) Disconnect the connector.
- (b) Unfasten the 3 bolts and remove the rear wiper motor and link assembly.
- (c) Remove the wiper link from wiper motor.

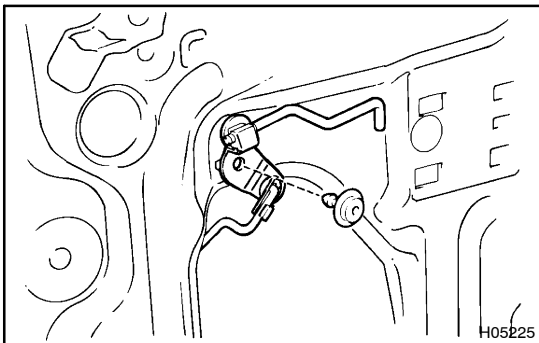**8. REMOVE BACK DOOR LOCK**

- (a) Disconnect the control link from the bellcrank.
- (b) Using a clip remover, remove the bellcrank.

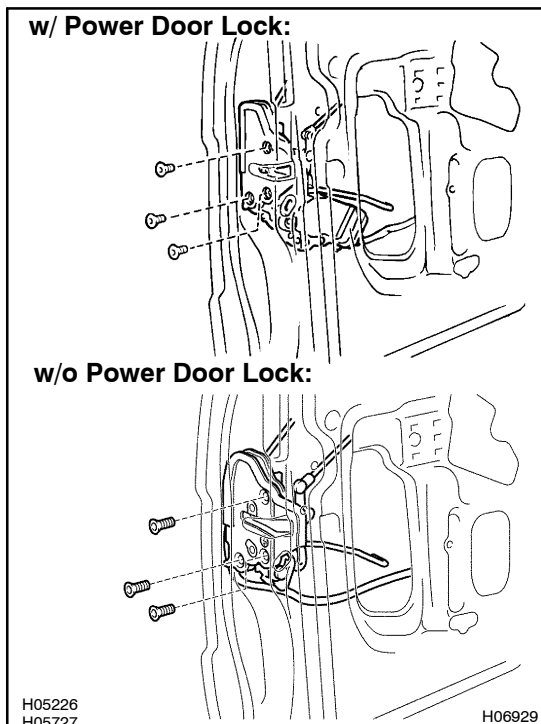

- (c) Disconnect the control links from the door lock.
- (d) Disconnect the connector.
- (e) Using a torx wrench, remove the 3 screws and door lock.

Torx wrench: T30 (Part No.09042-00010 or locally manufactured tool)

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)


HINT:

At the time of assembly, please refer to the following item.


- Apply adhesive to 3 screws.

Part No.08833-00070, THREE BOND 1324 or equivalent

w/ Power Door Lock:

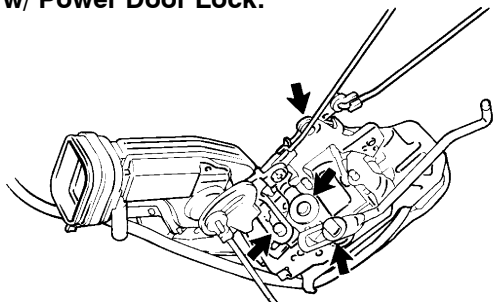

w/o Power Door Lock:

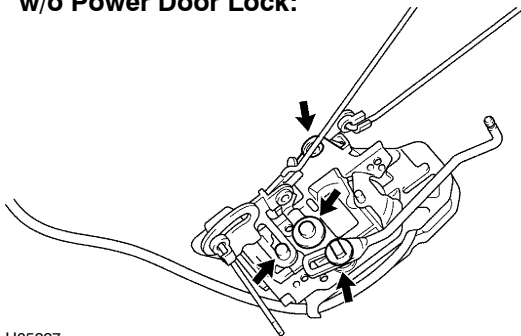


H05227
H05728

H06930

- Apply MP grease to the sliding and rotating parts of the door lock.

9. REMOVE KEY CYLINDER

Remove the clip and key cylinder.

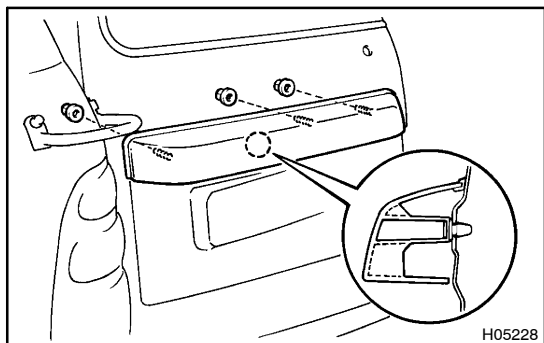

H05228

10. REMOVE LICENSE PLATE LIGHT ASSEMBLY

- (a) Remove the 3 nuts.
- (b) Disconnect the connector, then remove the license plate light.

11. REMOVE OUTSIDE HANDLE

Remove the 2 screws and outside handle.