



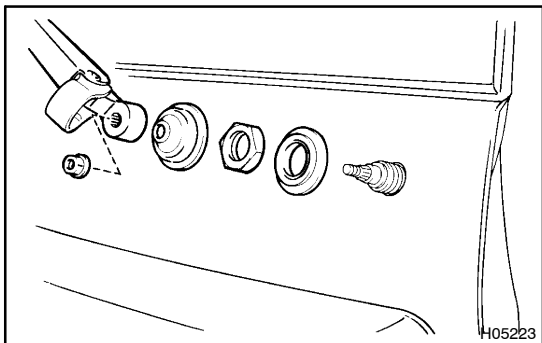

REMOVAL

1. REMOVE REAR WIPER ARM

- (a) Open the cover.
- (b) Remove the nut and rear wiper arm.
- (c) Remove the shaft cover, nut and washer.

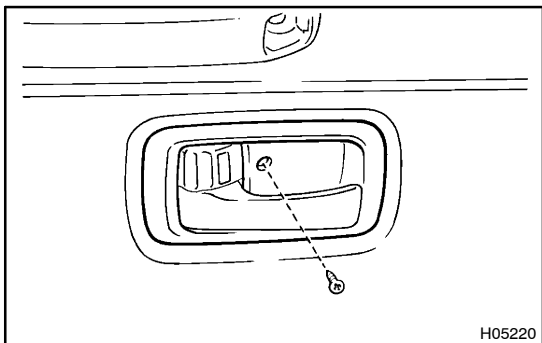

2. REMOVE DOOR INSIDE HANDLE

- (a) Remove the screw and slide the door inside handle as shown in the illustration.
- (b) Disconnect the links from inside handle, then remove the inside handle

3. REMOVE ASSIST GRIP

- (a) Using a screwdriver, remove the assist grip cap.

HINT:

Tape the screwdriver tip before use.



- (b) Remove the 2 screws and assist grip.

4. REMOVE BACK DOOR GARNISH

Using a screwdriver, remove the back door garnish.

HINT:

Tape the screwdriver tip before use.

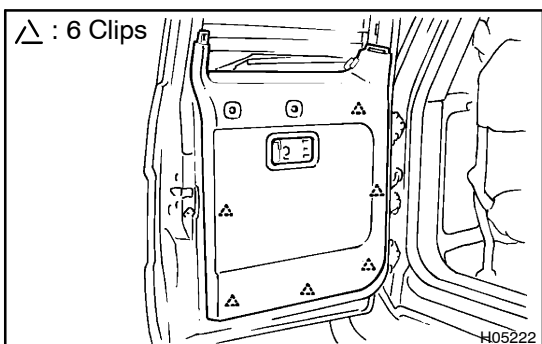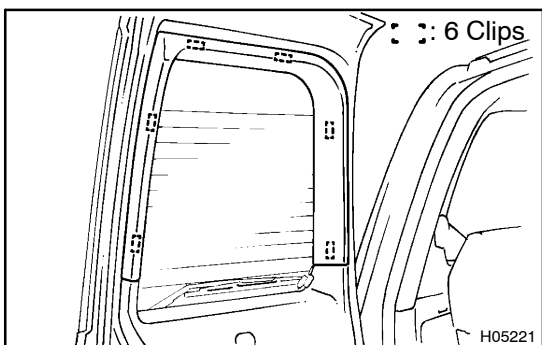

5. REMOVE BACK DOOR TRIM

- (a) Insert a screwdriver between the door and door trim to pry out.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the back door trim.

6. REMOVE SERVICE HOLE COVER


Remove the service hole cover.

HINT:

Do not tear the service hole cover.

HINT:

At the time of assembly, please refer to the following item.
Bring out the 2 links through the service hole cover.

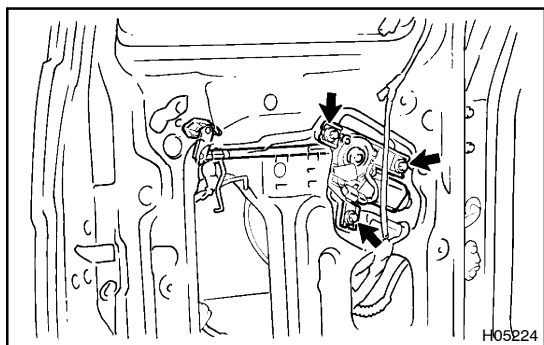**7. REMOVE REAR WIPER MOTOR AND LINK ASSEMBLY**

- (a) Disconnect the connector.
- (b) Unfasten the 3 bolts and remove the rear wiper motor and link assembly.
- (c) Remove the wiper link from wiper motor.