



REMOVAL


1. w/ Spare Wheel Carrier:
REMOVE SPARE WHEEL

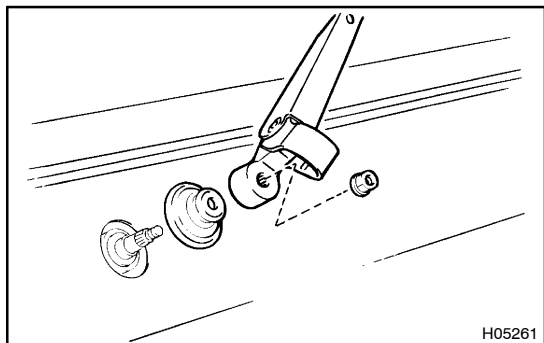


2. REMOVE REAR WIPER ARM
 - (a) Open the cover.
 - (b) Remove the nut, wiper arm and grommet.

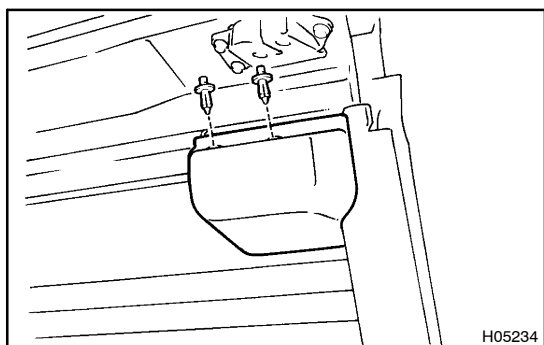

3. w/ High-Mount Stop Light:
REMOVE HIGH-MOUNT STOP LIGHT
 - (a) Remove the 2 clips and high-mount stop light cover.

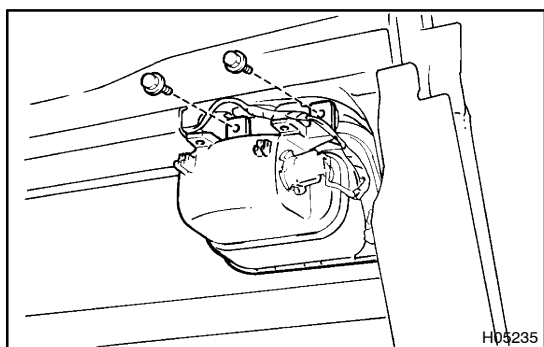


- (b) Disconnect the connector, then remove the 2 bolts and high-mount stop light.

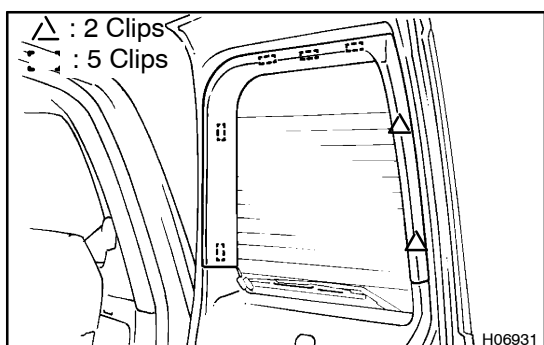

4. REMOVE BACK DOOR GARNISH
 - (a) w/o Hight-Mount Stop Light:
Using a screwdriver, remove the back door garnish.


HINT:
Tape the screwdriver tip before use.

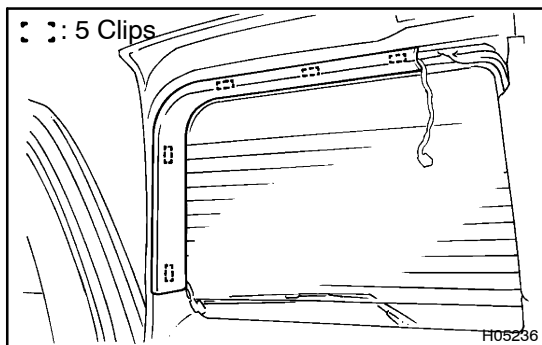

- (b) w/ High-Mount Stop Light:
Using a screwdriver, remove the back door garnish.

HINT:


Tape the screwdriver tip before use.

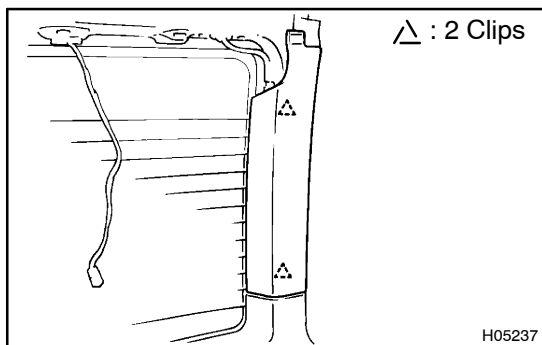

- (c) w/ High-Mount Stop Light:
Using a screwdriver, remove the center back door garnish.

HINT:

Tape the screwdriver tip before use.

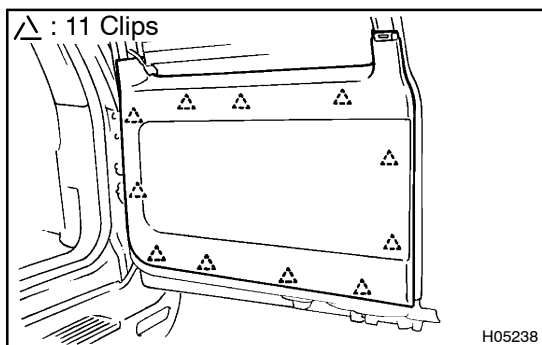

5. REMOVE BACK DOOR TRIM

- (a) Insert a screwdriver between the door and door trim to pry out.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the back door trim.

6. REMOVE SERVICE HOLE COVER

Remove the service hole cover.

HINT:

Tape the screwdriver tip before use.

7. REMOVE REAR WIPER MOTOR

- (a) Disconnect the connector.
(b) Unfasten the 3 bolts and remove the rear wiper motor.

