


INSTALLATION

1. INSTALL THESE PARTS:

- (a) Reinforcement
- (b) No.1 brace
- (c) Floor brace
- (d) No.4 heater to register duct
- (e) No.3 heater to register duct

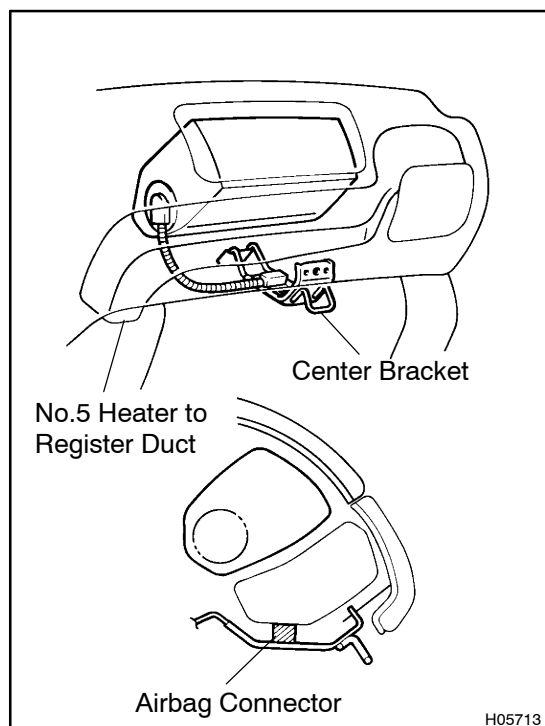

2. INSTALL INSTRUMENT PANEL

HINT:



- Install the airbag connector between the No.5 heater to register duct and center bracket temporarily, then install the instrument panel.
 - Remove the airbag connector before installing the lower No.2 panel.
- (a) Install the 6 bolts, 2 nuts and instrument panel, then connect the connectors.
 - (b) Install the 2 bolts to the front passenger airbag assembly.
Torque: 20 N·m (204 kgf·cm, 15 ft·lbf)
 - (c) Connect the junction connectors.

HINT:


The connectors can be connected by tightening the bolts.

3. INSTALL THESE PARTS:

- (a) Bench Seat:
 - Transfer lever hole cover
- (b) Except Bench Seat:
 - Front console box
- (c) Center lower cluster finish panel
- (d) Except Bench Seat:
 - Rear console box
- (e) Except Bench Seat:
 - Console rear end panel
- (f) Except Bench Seat:
 - Rear console panel
- (g) Radio assembly
- (h) Center cluster
- (i) Lower No.2 panel

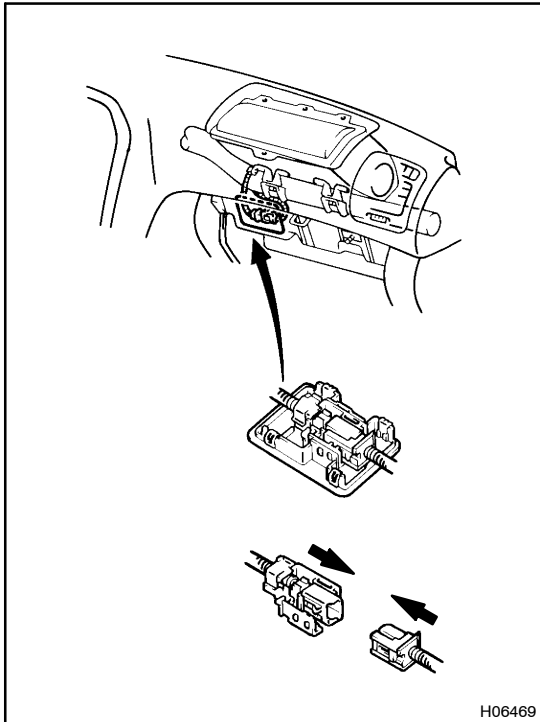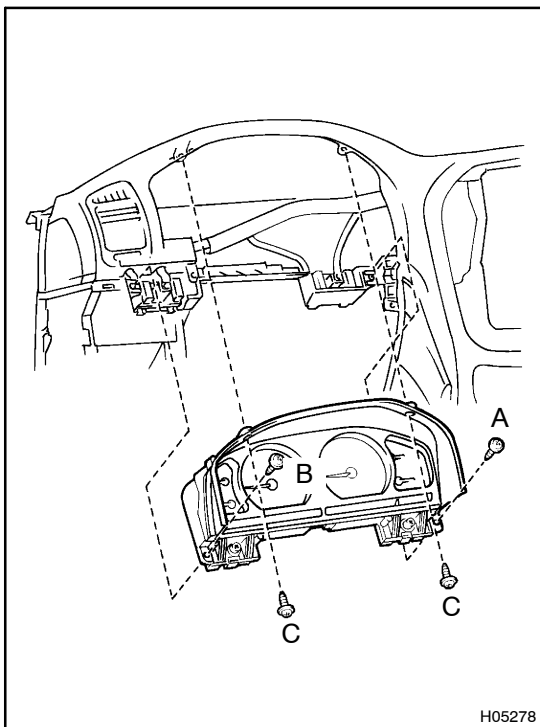**4. CONNECT AIRBAG CONNECTOR****(See page RS-35)****5. INSTALL GLOVE COMPARTMENT DOOR****6. INSTALL COMBINATION METER**

- (a) Check that the set-in connectors are connected in the installation holes on the instrument panel securely.
- (b) Place the combination meter on the instrument panel.
- (c) Install the combination meter by tightening the screws, A, B and C in the order.

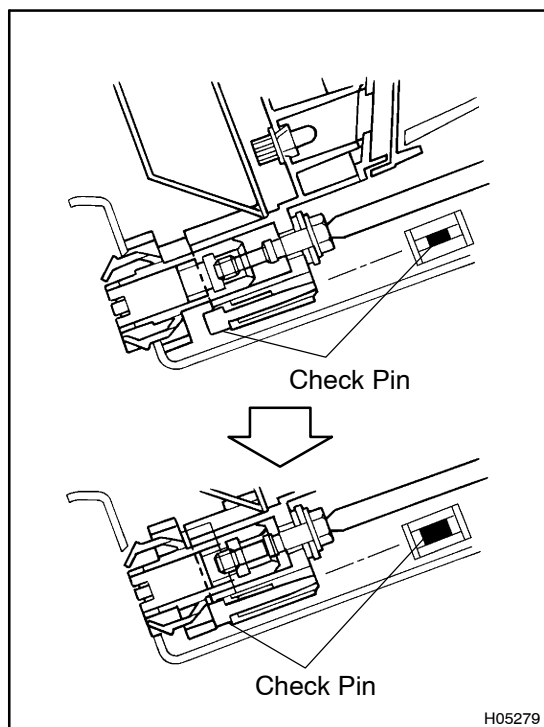

(d) Tighten the connection bolts.

HINT:

- When connection completes, the bolts turn vainly, causing turning noise.
- Check this noise and that the connection check pins protrude from the lower side of the connection bolts.

NOTICE:

Follow the procedures in order of (c) and (d). Otherwise, set-in connectors on the wire harness side and connectors on the meter side might not be connected properly.

7. INSTALL THESE PARTS:

- Steering column
(See page SR-24 or SR-37)
- No.2 heater to register duct
- Combination switch
- Column cover
- LH lower panel
- Lower No.1 panel
- Hood lock and fuel lid control cable lever
- Cluster finish panel
- Steering wheel
(See page SR-24 or SR-37)
- Front pillar garnishes
- Assist grips
- Front door opening trims
- Cowl side trims
- Front door scuff plates