


REMOVAL

1. w/ Rear No.2 Seat:
REMOVE REAR NO.2 SEAT

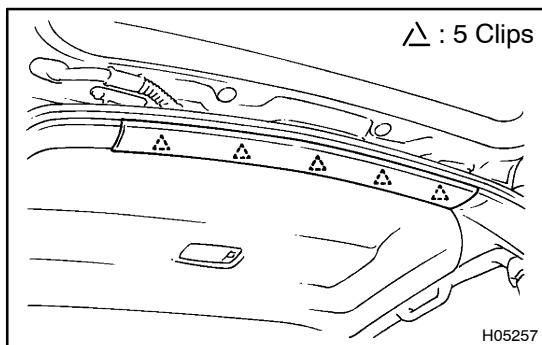


2. **REMOVE ROOF HEADLINING REAR TRIM**

Using a screwdriver, remove the roof headlining rear trim.

HINT:

Tape the screwdriver tip before use.

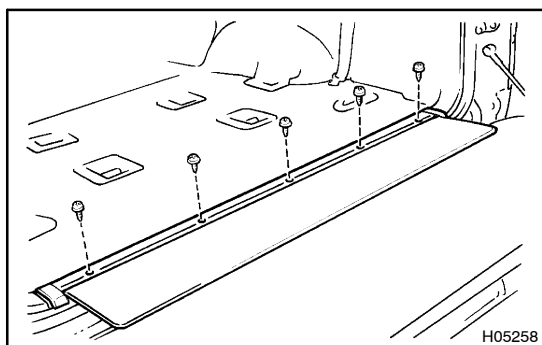


3. **REMOVE REAR MAT SET PLATE**

(a) Remove the 5 screws.

(b) Using a screwdriver, remove the rear mat set plate.

HINT:

Tape the screwdriver tip before use.

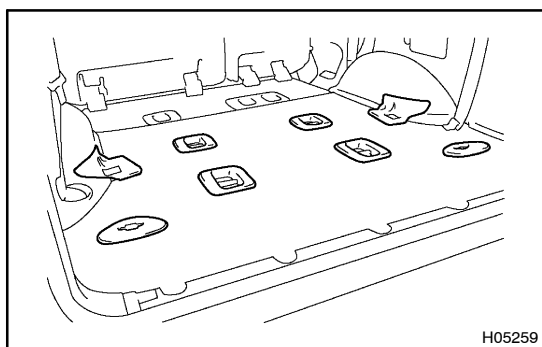

4. w/ Rear No.2 Seat (Forward-Facing Type):
REMOVE STRIKER PLATE

Using a screwdriver, remove the striker plates.

5. **REMOVE THESE PARTS:**

(a) w/ Tonneau cover:

Tonneau cover

(b) Rear mat

(c) w/ Rear No.2 Seat (Forward-Facing Type):

Rear No.2 seat outer belt floor anchors


Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

(d) Rear No.1 seat outer belt floor anchors


Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

(e) Rear door scuff plates

(f) Rear door opening trims

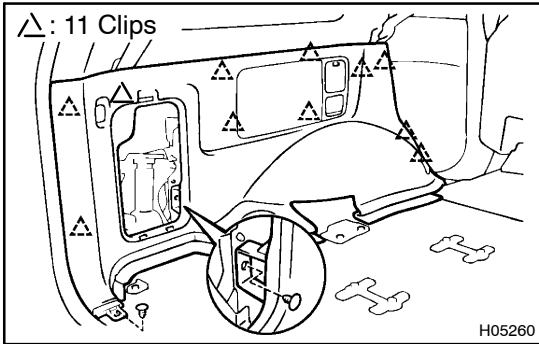**6. REMOVE LH QUARTER TRIM PANEL**


- (a) Remove the quarter trim jack cover.
- (b) Using a clip remover, remove the 2 clips.
- (c) Remove the LH quarter trim panel, then disconnect the connector.

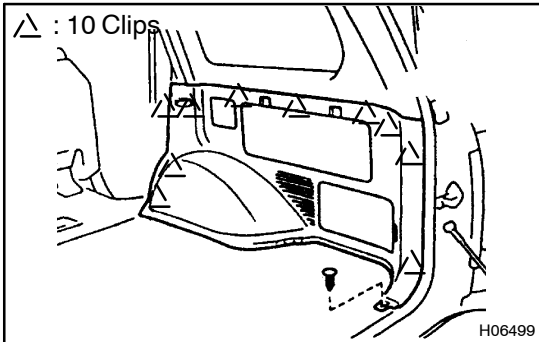**7. REMOVE RH QUARTER TRIM PANEL**


- (a) Using a clip remover, remove the clip.
- (b) Remove the RH quarter trim panel.

8. REMOVE THESE PARTS:

- (a) w/ Rear No.2 Seat (Forward-Facing Type):
Rear No.2 seat outer belt shoulder anchors
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

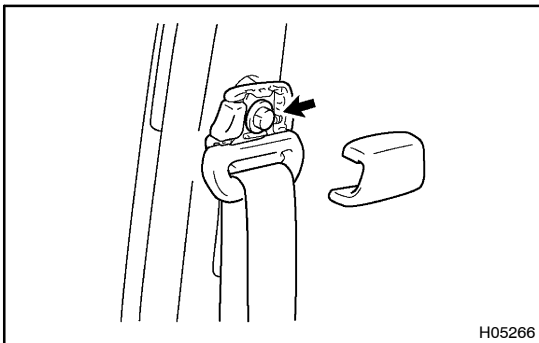

- (b) Rear No.1 seat outer belt shoulder anchors
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

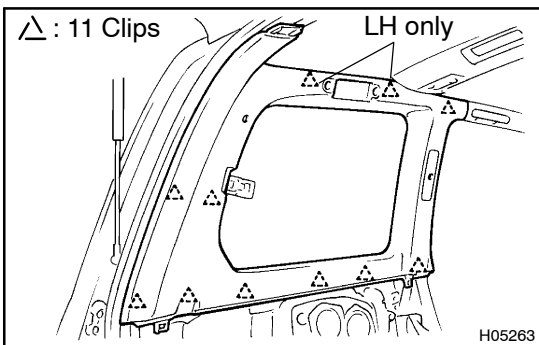**9. REMOVE UPPER ROOF SIDE INNER GARNISH**

- (a) w/ Rear No.2 Seat:
Using a screwdriver, remove the assist grip plugs, then remove the 4 screws and assist grips.

HINT:

Tape the screwdriver tip before use.

- (b) Using a clip remover, remove the clip.
- (c) Using a screwdriver, remove the upper roof side inner garnishes.

HINT:

Tape the screwdriver tip before use.

10. REMOVE THESE PARTS:


- (a) Front door scuff plates
- (b) Cowl side trims
- (c) Front door opening trims

11. REMOVE FRONT PILLAR GARNISH

- (a) Using a screwdriver, remove the assist grip plugs, then remove the 6 screws and 3 assist grips.

HINT:


Tape the screwdriver tip before use.

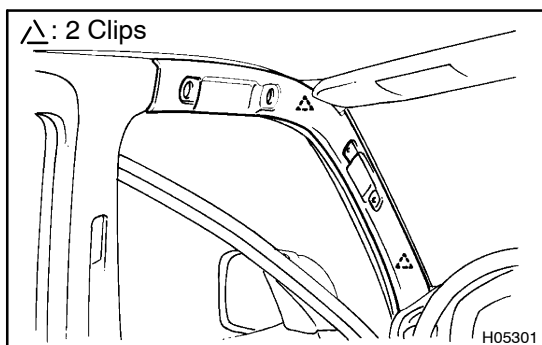

(b) Using a screwdriver, remove the front pillar garnishes.

HINT:

Tape the screwdriver tip before use.

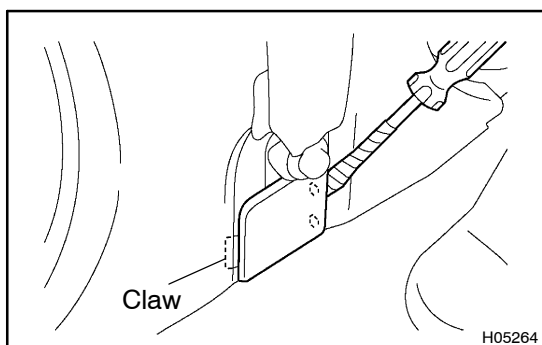


12. REMOVE CENTER PILLAR LOWER GARNISH

(a) Using a screwdriver, remove the center pillar garnish covers.

HINT:


Tape the screwdriver tip before use.

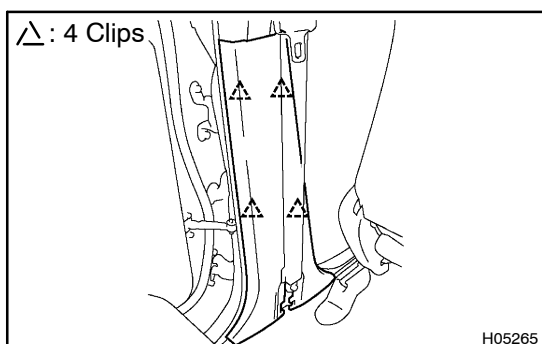

(b) Using a screwdriver, remove the center pillar lower garnishes as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

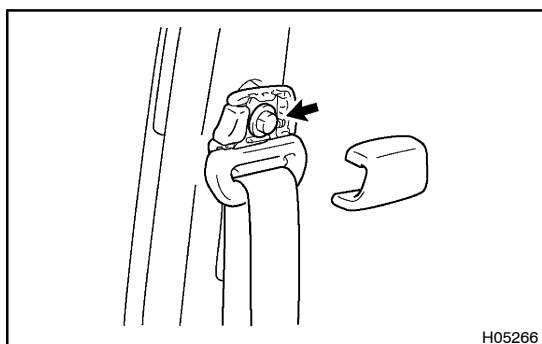

13. REMOVE CENTER PILLAR GARNISH

(a) Using a screwdriver, remove the seat belt anchor cover caps.

HINT:

Tape the screwdriver tip before use.


(b) Remove the bolts and front seat outer belt shoulder anchors.

Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

(c) Using a screwdriver, remove the 8 assist grip plugs, then remove the 8 screws and 4 assist grips.

HINT:


Tape the screwdriver tip before use.

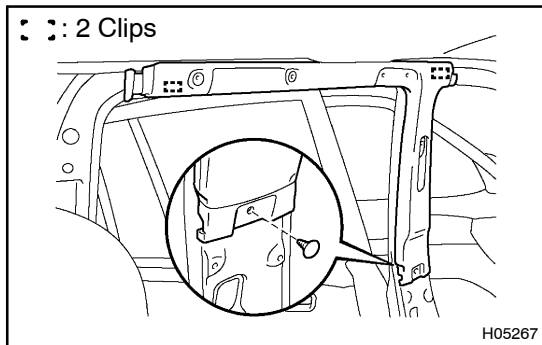

- (d) Using a clip remover, remove the clips.
- (e) Using a screwdriver, remove the center pillar garnishes.

14. REMOVE THESE PARTS:

- (a) Sun visors
- (b) Double visors
- (c) Holders

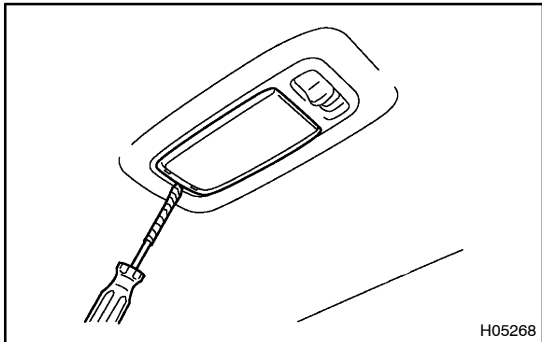


15. REMOVE DOME LIGHT

- (a) Using a screwdriver, remove the lens as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 4 screws and dome light, then disconnect the connector.

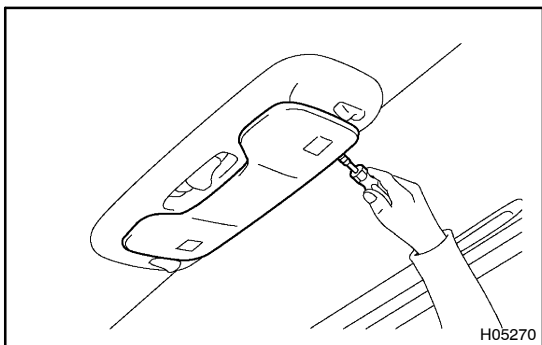


**16. w/ sliding Roof:
REMOVE MAP LIGHT**

- (a) Using a screwdriver, remove the lens as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 4 screws and map light, then disconnect the connector.

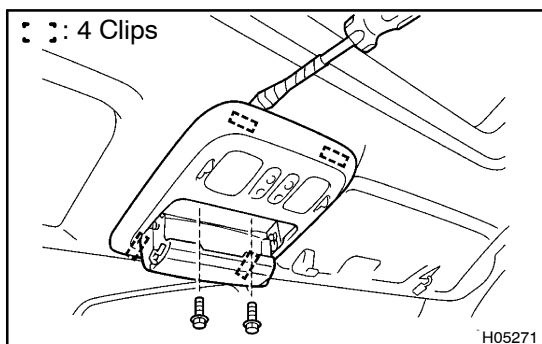


**17. w/ Sliding Roof:
REMOVE OVERHEAD CONSOLE BOX**

- (a) Remove the 2 bolts.
- (b) Using a screwdriver, remove the overhead console box, then disconnect the connector.


HINT:

Tape the screwdriver tip before use.

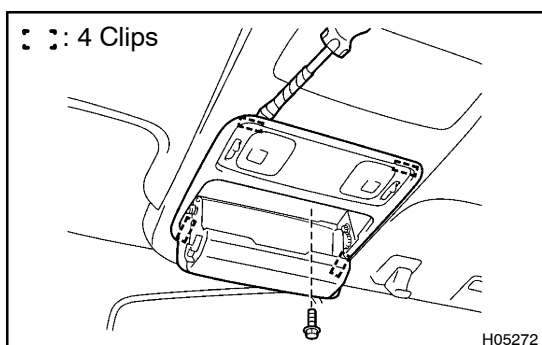

**18. w/o Sliding Roof:
REMOVE OVERHEAD CONSOLE BOX**


- (a) Remove the bolt.
- (b) Using a screwdriver, remove the map light assembly, then disconnect the connector.

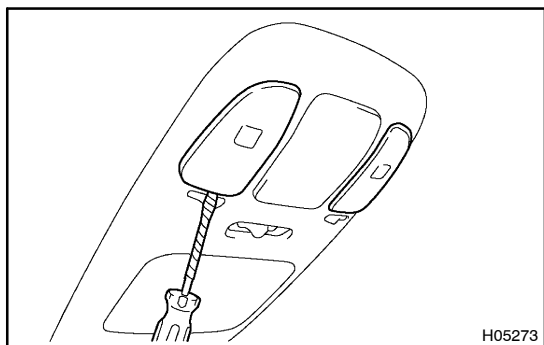

(c) Using a screwdriver, remove the 2 lenses.

HINT:

Tape the screwdriver tip before use.

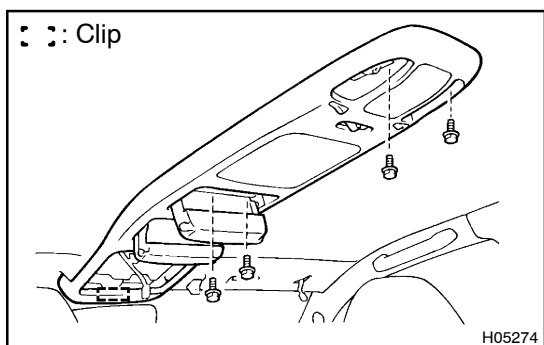

(d) Remove the 4 bolts.


(e) Using a screwdriver, remove the overhead console box, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

19. w/ Sliding Roof:

REMOVE SLIDING ROOF OPENING TRIM

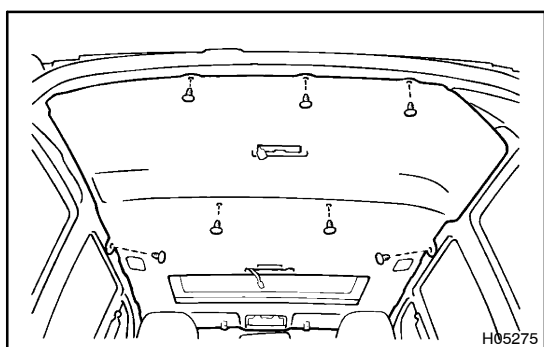

20. REMOVE ROOF HEADLINING

Using a clip remover, remove the 7 clips and roof headlining.